


# ULTRASONIC EYEGLASS CLEANER

Item No. 203808

## User Guide

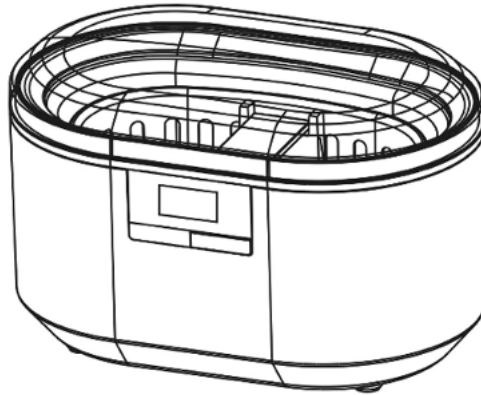


Thank you for purchasing the Ultrasonic Eyeglass Cleaner. Please take a moment to read this guide and store it for future reference.

## INTRODUCTION

The Ultrasonic Eyeglass Cleaner removes built-up dirt, grime, make-up and oil to make your glasses, readers or sunglasses clean as new in just a few minutes, without heat or harsh chemicals. Just add water and press a button.

## DESCRIPTION OF PARTS

- A. Body
- B. Cleaning Tank
- C. Lid
- D. Power/Timer Button
- E. Power Cord
- F. LED Timer Display
- G. Basket
- H. Watch Shelf

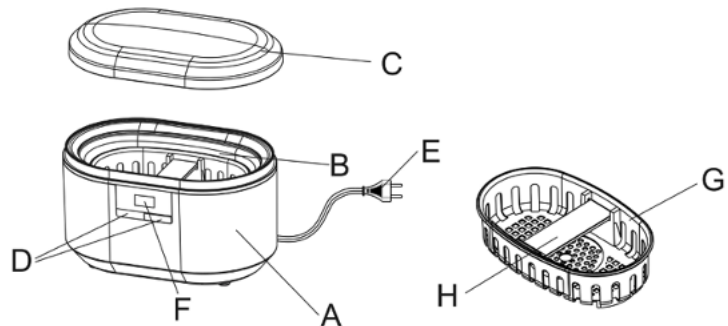

**IMPORTANT:** *Never turn this device on when the tank is empty. Always place items in the basket before immersing in the tank. Cleaning items without the basket could damage the device.*

## OPERATING INSTRUCTIONS

1. Open the lid of the device and place glasses into the cleaning basket. Place the basket into the tank.
2. Fill the tank with tap water. **NOTE:** *Water should cover the glasses but not exceed the MAX mark. Running without water can damage the unit.*
3. Close the lid.
4. Plug the unit into an AC outlet. The LED timer will begin to flash.
5. Press the **TIMER** button to choose a cleaning session [90/180/280/380/480 seconds].
6. Press the **POWER** button to start cleaning. When the timer reaches 0, the device will stop cleaning.
7. You may repeat the process if necessary. However, we recommend waiting at least 5 minutes between cleaning cycles.
8. After cleaning, turn the device **OFF** and unplug it from the outlet. Remove your cleaned glasses from the tank.

## CLEANING METHODS

The Ultrasonic Eyeglass Cleaner can be used for a variety of cleaning needs, with these 3 methods:

1. **General Cleaning** – Use plain tap water for a brisk cleaning.
2. **Enhanced Cleaning** – Add a few drops of mild soap or dish soap to help remove grease, makeup and oil.
3. **Partial Cleaning** – To clean parts of large items, the device can be used with the lid open.

## CLEANING WATCHBANDS

Use the included watch shelf for cleaning metal watchbands. First, place the watch shelf into the basket. Place the watch on the watch shelf, with the case [housing] facing up. Lower the shelf into the container which is filled with water. Select a timer duration and press power. Allow the watch band to dry fully after cleaning.

**NOTE:** *To prevent damaging the watch, do not submerge the case [housing] in water.*

## CLEANING JEWELRY

This device can be used to clean metal jewelry, including necklaces, rings, earrings, bracelets and more.

Place jewelry to be cleaned into the basket. Lower the basket into the tank, which is filled with water. Add a drop of mild dish soap to help remove grease, oil or makeup. Select a timer duration and press power. Dry your jewelry with a soft, dry cloth.

**IMPORTANT:** *Ultrasonic cleaning is considered safe for gold, silver, platinum, diamonds, rubies, sapphires, amethyst and citrine (yellow quartz) pieces. It is NOT suitable for soft, water porous stones, such as pearls, opals, turquoise, amber and ivory. Do not use this device with antique jewelry, enamel jewelry, paste jewelry, costume jewelry or any jewelry containing stones that have been set with glue. Consult a jewelry expert before cleaning any jewelry with an ultrasonic device.*

## OTHER USES

- Metal items [coins, medals, badges, valves, eating utensils, etc.]
- Writing materials [pen nibs, ballpoint pen sleeves, printer nozzles, signature stamps, etc.]
- Personal hygiene items [toothbrushes, false teeth, razor blades, etc.]

**NOTE:** *The following items are NOT suitable for ultrasonic cleaning: wood, real pearls, leather goods, clock/watch mechanisms.*

## MAINTENANCE

1. Do not clean this device with harsh cleaning products or sharp objects.
2. Clean the tank with a soft cloth and wipe dry.
3. To prevent the formation of lime scale, do not leave water in the tank after use.
4. Store this device in a cool, dry place.
5. Keep this device out of reach of children at all times.
6. Do not submerge this device in water or any other liquid.

## IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

### **DANGER - To reduce the risk of electrocution:**

1. Always unplug this product immediately after using.
2. Do not use while bathing.
3. Do not place or store product where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for a product that has fallen into water. Unplug immediately.

**WARNING - To reduce the risk of burns, electrocution, fire or injury to persons:**

1. This product should never be left unattended when plugged in.
2. Close supervision is necessary when this product is used by, on, or near children or invalids.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this product if it has a damaged cord or plug.
5. Always unplug this product immediately after using.

**SPECIFICATIONS**

<b>Built-in Timer:</b>	90/180/280/380/480 seconds
<b>Tank Volume:</b>	600 ml
<b>Power Consumption:</b>	35W
<b>Power Supply:</b>	120V~60Hz