

USAGE TIPS

- Gently towel dry hair to remove excess water
- Quickly dry hair by setting dryer on the highest heat and speed. For more volume, flip hair over and dry the under layers first. Take care not to concentrate the airflow on any one area for an extended period of time
- When hair is almost completely dry, lower heat and begin to style hair as desired
- The cool shot button can be used to lock the style in place with a blast of cool air
- Use concentrator attachment for more controlled airflow
- Once drying is complete, wait for the appliance to cool and store

OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

12-Month Limited Warranty

The Cricket Company, LLC warrants this appliance against any manufacturer defects, faulty workmanship or faulty material for 12 months after date of purchase.

This warranty does not include damage to this appliance resulting from accidents or misuse. If this appliance should become defective within the warranty period we will repair or replace the appliance at our discretion. All returns under warranty must include proof of purchase. For more information call our customer service information center at 1-800-654-7032.

Name: _____
Address: _____
City: _____
State: _____ Zip: _____
Phone #: (_____) _____
Email: _____
Purchase Date: _____

Mail to: Cricket Company
5000 Industrial Way, Benicia, CA 94510
www.cricketco.com

CRICKET® ULTRA SMOOTH™ Professional Dryer Use and Care Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER

DANGER: As with most electrical appliances, electrical parts are electrically live, even when the switch is off:

To reduce the risk of death or injury by electric shock:

1. Always “unplug it” immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
4. **DO NOT** use near, place in, or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. **DO NOT** reach into the water.

WARNING: To reduce the risk of burns, electrocution, fire or injury to persons:

1. An Appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the appliance is still under warranty, return it to The Cricket Company, LLC for replacement.

5. Keep the cord away from heated surfaces. **DO NOT** wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. **DO NOT** use outdoors, or operate where aerosol products are being used or where oxygen is being administered.
10. **DO NOT** direct hot air towards eyes or other heat sensitive areas.
11. Attachments may be hot during use. Allow them to cool before handling.
12. **DO NOT** place appliance on any surface while it is operating.
13. While using the appliance, keep your hair away from the air inlets.
14. **DO NOT** use an extension cord with this appliance.
15. **DO NOT** operate with a voltage converter.

USER-MAINTENANCE INSTRUCTIONS

STORAGE

While not in use, unplug the dryer, allow to cool, and store in its box or in a dry place. Never store it while it is hot or still plugged in. Never wrap the cord tightly around the appliance. Never hang the dryer by the cord, and do not put any stress on the cord where it enters the dryer, as it could cause the cord to fray and break.

MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. Keep all openings clear of dirt or dust. Should dirt or oils accumulate on the dryer, unplug the unit and wipe the exterior with a damp cloth. While using, untwist the cord from time to time to avoid tangling. If any malfunction occurs, do not try to repair to yourself. The appliance has no user serviceable parts.

CAUTION – While it is operating, never obstruct the air inlet or outlet opening and do not place appliance on any surface.