

User manual for Bluetooth beanies

Volume Control

Press and hold the + button to increase the volume. When the device is at maximum volume, you will get a voice prompt " Max Volume".

Press and hold the - button to decrease the volume. When the device is at minimum volume, you will get a voice prompt " Min Volume".

Precautions

- Do not expose the Headwear to liquids or moisture.
- Do not tamper with, drop, disassemble, open or crush the Headwear.
- Pull out the Bluetooth module before washing the Headwear.
- Keep the Headwear away from fire.
- Do not store the Headwear near acidic or alkaline material.

Warranty / Customer Service

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 (877) 210-3449.

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.

Washing instruction & removal of electronics

Please note you **MUST** remove the control panel & speakers as shown below before washing your Headwear.

Removing the control panel & speakers

Step 1

The control panel is held in pocket between a double layer inside the hat. You can gently ease the control panel out of its pocket.

Step 2

You will see a small opening at the rear of the Headwear. Continue to ease the control panel towards this opening.

Step 3

Repeat step 1 for the additional speaker located at the opposite side of the Headwear.

Once the electronics are completely removed:
Machine wash cold, air dry flat, Do NOT tumble dry



RoHS CE 
Made in China

SHARPER IMAGE®

Smartphone Bluetooth Hat
Item No. 205445



Built-in Microphone



Compatible with iPhone
and Android Devices



Li-ion Battery



Bluetooth 4.1 + EDR

User Manual

Features

- Made from premium knitted material to keep you warm
- Built-in microphone for answering or making phone calls
- Removable Bluetooth module allowing you to wash the Headwear
- Compatible with all Bluetooth enabled devices
- Chargeable using universal micro-USB cable

Specifications

- Bluetooth Version: 4.1+EDR
- Frequency: 2.402 GHz-2.480 GHz
- Transmission distance: 10m
- Battery: Li-Ion 3.7V/100 mAh
- Talk Time: up to 6 Hours
- Standby Time: up to 60 hours
- Charging Time: 2.5 hours

Charging Headwear

Connect the headwear to a computer or USB charge device using a micro USB cable.

The LED light will turn RED while charging and turn OFF when fully charged.

When the battery has less than 20% charge remaining, you will hear a voice prompt "please charge".

If the battery has less than 15% charge remaining, the Bluetooth will auto power off.

Turning On/Off

Press the 'play/pause' button for approximately three seconds to turn the Headwear ON. Once it is ON, a Blue LED light will start flashing , followed by voice prompts: power on.

Press the 'play/pause' button for approximately three seconds to turn the Headwear OFF. Once it is OFF, the LED light will turn off too , followed by voice prompts: power off.

Pairing Headwear


Step 1 Press the 'play/pause' button for approximately 5 seconds till the LED light starts flashing Red and Blue alternately, followed by voice prompts:pairing. Now the "Bluetooth Headwear" is discoverable and ready to be paired.

Step 2 Turn on the Bluetooth on your phone/device, search for " BT Beanie " and select connect/pair.

Step 3 Once the Headwear is connected, only the Blue LED light will flash, if it's the first time that it's paired, you will hear the voice prompts: pair success.When you pair it again, you will hear a relatively short voice prompts: paired.

The pairing process is required only for pairing the Headwear with the device for the first time. Once paired, it will connect to the device automatically the next time.

Functions

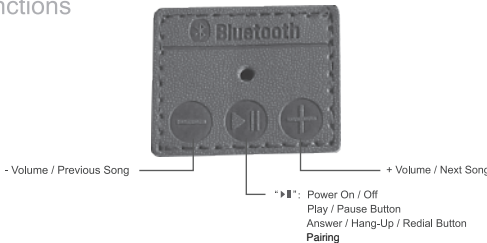

Calls

When the calls come, the caller's phone number will be pronounced circularly.

Press the 'play/pause' button once to answer a call or to hang up.

Press the 'play/pause' button twice to redial the last dialed number in your phone's call log.

Music

Use the 'play/pause' button to play or pause the music.

Use the '-' button to skip to the previous song.

Use the '+' button to skip to the next song.