

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

### READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

### DANGER

Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

### WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not

use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.

7. Never use while sleeping.
8. Never drop or insert objects into an opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.

11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Air outlet grille and attachments may be very hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. To prolong the life of the dryer, keep filters clean of hair and dust.
16. Do not use with voltage converter.

### For a dual voltage hair dryer:

17. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in this instruction section of this manual.
18. This appliance was set at the factory to operate at 125 volts. Refer to Additional Information section of this manual for conversion to 250 volts operation.

## SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for professional use. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110-125 or 220-250 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

12. Be sure to repeat test every time you use dryer to confirm ALCI is operational.

13. Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer. Remove plug from outlet and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

14. NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the

### To make sure the ALCI is functioning properly,

17. Be sure dual voltage selector is in correct

voltage

position

before

operating.

Before

plugging

in,

read

the

information

about

dual

voltage

contained

in

this

manual.

18. This appliance was set at the factory to

operate

at

125

volts.

Refer

to

Additional

Information

section

of

this

manual

for

conversion

to

250

volts

operation.

17. Be

sure

dual

voltage

selec-

tor

is

in

cor-

rect

posi-

tion

be

fore

opera-

ting.

18. This appliance was set at the factory to

oper-

ate

at

125

volts.

Refe-

r to

Ad-

dition-

al

infor-

ma-

tion

sec-

tion

of

this

man-

ual

for

con-

ver-

sion

to

250

volts

opera-

tion.

17. Be

sure

dual

voltage

selec-

tor

is

in

cor-

rect

posi-

tion

be

fore

opera-

ting.

18. This appliance was set at the factory to

oper-

ate

at

125

volts.

Refe-

r to

Ad-

dition-

al

infor-

ma-

tion

sec-

tion

of

this

man-

ual

for

con-

ver-

sion

to

250

volts

opera-

tion.

17. Be

sure

dual

voltage

selec-

tor

is

in

cor-

rect

posi-

tion

be

fore

opera-

ting.

18. This appliance was set at the factory to

oper-

ate

at

125

volts.

Refe-

r to

Ad-

dition-

al

infor-

ma-

tion

sec-

tion

of

this

man-

ual

for

con-

ver-

sion

to

250

volts

opera-

tion.

17. Be

sure

dual

voltage

selec-

tor

is

in

