

140mm

157克双铜 红色边框不用印

**Need Help? Have a product question?
Feedback?**

Contact us:

**Info@ToiletTreeProducts.com
or call us at 1-888-251-0985**



MAINTENANCE

Be sure to remove the plug from the electrical outlet before cleaning your razor dryer.

1. Using a soft cloth, wipe off any dirt on the razor dryer.
 2. Internal Chamber can be removed and also wiped down.
 3. Clean the plug periodically to ensure it remain in good working order. The accumulation of dust or dirt on the plug can cause an electric shock, overheating, or fire.
- Do not clean in the dishwasher.


Product Warranty:

ToiletTree Products provides a 30 day, no risk, unconditional 100% money back guarantee. If you are not completely satisfied with your purchase, simply return it within 30 days with a dated proof of purchase and we will gladly refund your money in full-no strings attached.

ToiletTree Products warrants this product to be free of all defects for a period of 1 year from the date of original purchase. This warranty does not apply to normal wear or damage due to accident, abnormal use, misuse or neglect. Any defective item will be replaced, at no charge, upon the reasonable confirmation by ToiletTree of its defective condition, if returned with proof of purchase to an authorized ToiletTree Products dealer or directly to ToiletTree Products, 517 Route 9W North, Upper Nyack, NY 10960. Neither ToiletTree nor any authorized dealer shall be liable for consequential damages arising from this warranty, unless otherwise provided by law.



BLEW
Razor Dryer
TTP-RD

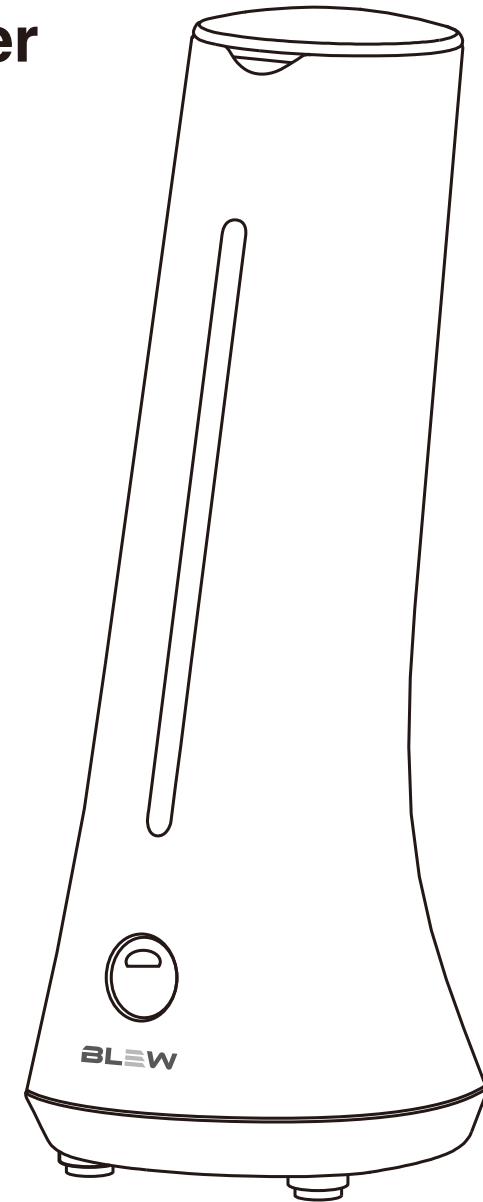

Before operation this product, please read these instructions completely and save this manual for future use

200mm

IMPORTANT SAFEGUARDS:

The razor dryer is safe and effective when used according to directions.

Like any electrical appliance, basic safety precautions should be followed, especially when children are present.

READ ALL INSTRUCTIONS BEFORE USING:

When using electrical equipment, basic precautions should always be followed, including the following:

DANGER-WATER:

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Do not place or store the razor dryer where it can fall or be pulled into a bathtub, sink or toilet.
2. Do not place or drop the razor dryer into water or other liquid.
3. Do not reach for a product that has fallen into water or other liquid. Unplug immediately.
4. Do not use while bathing.
5. Unplug razor dryer before cleaning and assure that it is dry before plugging it into an electrical outlet.
6. Do not handle plug or equipment with wet hands.

DANGER-VOLTAGE

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Do not plug the razor dryer into an outlet with a voltage other than specified on the bottom of the charger.
2. This product is designed to operate with 120 volt.
3. Voltage converters do not guarantee compatibility.
4. Do not force the plug into an outlet.
5. If the plug does not fit easily into the outlet, discontinue use.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run equipment over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Turn off all controls before unplugging.

DANGER-WARNINGS

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given adequate supervision or instruction concerning use of the product by an adult responsible for their safety.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children.

3. Use this product only for its intended use as described in this manual. This product is designed to dry and sanitize your razor only.
4. Never operate this product if it has a damaged plug. Do not use this product if it is not working properly or if it has been dropped or damaged or dropped into water. Immediately discontinue use if the product appears damaged in any way.
5. Keep the razor dryer and power cord away from heated surfaces.

ATTENTION:

For the plug:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

For the power supply cord:

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Extension cords are available and may be used if care is exercised in their use.
3. If an extension cord is used:
 - 1).The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2).The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

SAVE THESE INSTRUCTIONS

GETTING STARTED

How to use

1. Before putting the razor into the dryer, rinse the razor with warm water.
2. Shake the razor to remove any excess water from the blades.
3. Lift up the razor chamber and place your razor into the chamber, the blade head goes in first. Push the chamber down to close.
4. Press the button to turn on.
5. The LED light will turn on and the blower will start working, the UV light light will also turn on at this time.
6. The dryer will run for approximately 8.5 minutes, the motor will cool down for 30 seconds and then turn off automatically. The UV light will turn off at this time as well.
7. If you would like to manually turn off the drying process at any time, hold the power button in for 1.5 seconds.