

## POP-UP 6-FT. LED CHRISTMAS TREE

Item No. 205976

User Guide



Thank you for purchasing the Pop-Up 6-Ft. LED Christmas Tree. Please read this guide carefully and keep it for future reference.

## WARNING

- This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not use or attach any additional electric lights or light strings to this decoration.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place this decoration near gas or electric heaters, fireplaces, candles or other similar sources of heat.

## FEATURES


- 30" diameter
- 72" height
- 2m [78"] power cord
- Folds flat for storage
- 200 warm white LEDs
- Lighting mode: steady on
- 1 large bow
- 3 red ribbons
- 3 gold ribbons
- 10 gold bows
- 10 red poinsettias
- 20 red globe ornaments
- 20 gold globe ornaments
- Indoor use only

## CAUTION

- This product is suitable for indoor use only.
- The light set is constructed with replaceable LED bulbs. Please refer to the instructions below to replace bulbs.
- Keep away from any source of flame or heat.
- This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.

## ASSEMBLY AND OPERATION

- Carefully remove the metal tubes, tree and metal base from the box.
- Choose a firm, flat surface where air vents will not be blocked or covered.
- Connect the metal tubes and place into the base.
- Drape the tree over the top of the connected metal poles.
- Plug the power cord into an AC outlet.

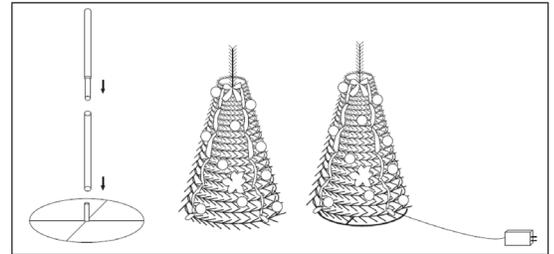

## MAINTENANCE AND CARE


- Before use or reuse, inspect the Pop-Up 6-Ft. LED Christmas Tree carefully. Discard the device if it has cut, damaged or frayed wire insulation on cords, cracks on the bulb holders or enclosures, loose connections or exposed copper wire.
- When not in use, store the Pop-Up 6-Ft. LED Christmas Tree neatly in a cool, dry location protected from sunlight.
- Unplug the tree when leaving the house, when retiring for the night, or any time it is left unattended.

## IF LIGHTS DO NOT WORK

- Please check for loose wires.
- Ensure the power outlet is working correctly.
- Ensure the plug is connected properly.

## REPLACING THE BULBS

- Turn off the product and remove batteries from the battery box.
- Pull the faulty bulb and plastic base straight out the bulb holder.
- Insert new bulb into the holder.

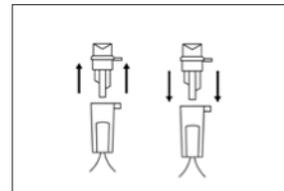

## FCC NOTICE

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.