

# 9-FT. CORDLESS PRE-LIT INDOOR/ OUTDOOR GARLAND

Item No. 205977

## Owner's Manual

Thank you for purchasing the 9-Ft. Cordless Pre-Lit Indoor/ Outdoor Garland. Please read this guide carefully and keep it for future reference.

 
### WARNING

- This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for anything other than its intended use.
- Do not use or attach any additional electric lights or light strings to this decoration.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place this decoration near gas or electric heaters, fireplaces, candles or other similar sources of heat.

### FEATURES

- Large 9-ft. length is ideal for mantel, railing, banister, entryway, etc.
- 40 warm white LEDs
- 10 pine cone decorations
- 10 pairs of berry decorations
- 180 realistic branch tips
- Lighting mode: steady on
- Cordless operation [requires 3 C batteries]
- For indoor and covered outdoor use
- Built-in timer automatically turns off after 6 hours and will light up the next day at the same time

### BATTERY SPECIFICATIONS



- Battery Rating: 1.5 V [requires 3 C batteries]
- Note: Insert batteries as shown in the diagram above.

### CAUTION

- This product is suitable for indoor and outdoor use.
- The lights are non-replaceable.
- Keep away from any source of flame or heat.
- This is a holiday decoration. This is not a toy. Keep out of reach of small children.
- Do not connect this decoration to another electric decoration or light string.

## MAINTENANCE AND CARE

- Before use or reuse, inspect the Garland carefully. Discard the Garland if it has cut, damaged or frayed wire insulation on cords, cracks on the bulb holders or enclosures, loose connections or exposed copper wire.
- When not in use, store the Garland neatly in a cool, dry location protected from sunlight.
- Remove the batteries when not using the product for an extended period or time.

## IF LIGHTS DO NOT WORK

- Please check for loose wires.
- Ensure that you have inserted the 3 C batteries with the proper polarity [+ and -].

## BATTERY DISPOSAL



- Dispose of used batteries responsibly.
- Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

## FCC NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

## WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you require any assistance with your 9-Ft. Cordless Pre-Lit Indoor/ Outdoor Garland, please call 1 (877) 210-3449.