

SHARPER IMAGE®

CAR CUSHION WITH MASSAGE AND HEAT

Item No. 205990

User Guide



Thank you for purchasing the Sharper Image Car Cushion with Massage and Heat. Please take a moment to read this guide, and store it for future reference.

FEATURES

- Versatile massaging seat cushion
- For home, office or car
- 4 massage zones
- 4 intensity levels
- Optional heat
- Auto shutoff timer [15/30/60 min.]
- Includes AC adapter for home use
- Includes 12V DC adapter for auto use [plugs into car cigarette lighter]
- Elastic straps secure cushion to chair or car seat
- Easy-to-use wired handheld controller
- Folds for storage

PARTS




GETTING STARTED

1. Unpack the Massage Cushion and inspect it for damage. Do not use this device if it appears to be damaged, or if the wires appear to be damaged or frayed.
2. Place the cushion on a car seat or household seat [chair or sofa]. Secure it with the elastic straps if necessary.
3. For home use, attach the AC adapter to the power connection. NOTE: Do not use this device on a wooden chair, as the zipper may scratch the surface.
4. For automotive use, connect the DC adapter to the power connection. NOTE: The DC outlet is commonly called the car cigarette lighter.

USING THE CONTROLLER

1. **POWER button [PWR]:** Turns the massager ON or OFF.
2. **HEAT button:** Turns the heat ON or OFF.
3. **INTENSITY button [INT]:** Adjusts the strength of your massage. Choose from 4 levels of intensity.
4. **MODE button:** Cycles through the 5 different massage modes: Pulsate >>> Tapping >>> Rolling >>> Kneading >> Auto. **NOTE:** The Auto Mode is a combination of the other 4 modes.
5. **Customize your massage by choosing 1 or more of these buttons:**
 - UPPER BACK
 - LOWER BACK
 - HIPS
 - THIGHS
6. **TIMER button:** Choose 15, 30 or 60 minutes. The device will shut off automatically after your selected time.

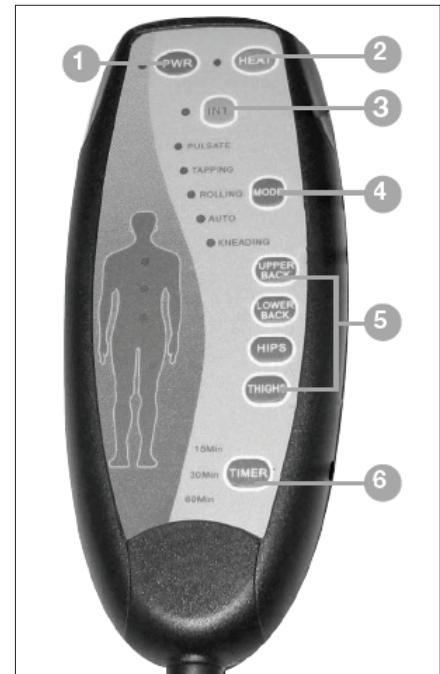

GENERAL SAFETY INSTRUCTIONS

Read this manual thoroughly before the first use, even if you are familiar with this type of product. The safety precautions below reduce the risk of fire, electric shock and injury when followed properly.

- To reduce the risk of electric shock, never operate this device with wet hands. Do not submerge it in water. Do not spill liquids onto it.
- Do not use this device in areas where it could get splashed with water (such as near a bathtub, shower or sink).
- Do not use this device with an extension cord or a switched timer.
- Do not kink or damage the power supply cord.
- Do not insert any objects into the Massage Cushion.
- Do not use the Massage Cushion if it has been damaged or is not working properly.
- When the device is not in use, switch it off and unplug it.
- The Massage Cushion is intended for indoor household use only. Do not use it outdoors.
- Do not use the Massage Cushion for anything other than its intended purpose.
- Do not use the Massage Cushion when it is folded.
- Keep the Massage Cushion out of the reach of children at all times. It is not a toy.
- Do not operate the Massage Cushion in bed, or if it is covered with pillows, blankets, etc.
- Do not leave the Massage Cushion unattended while it is running.
- Use only the power adapters supplied in this box. Do not use any other power adapters with this Massage Cushion.

HEALTH WARNINGS

- Consult your physician before using any at-home massage device.
- Never use this device on swollen or inflamed areas or skin eruptions.
- Discontinue use immediately if you begin to feel discomfort.
- Do not use this device as a substitute for medical attention.

CLEANING AND CARE

- Before cleaning the Massage Cushion, be sure to unplug it from the AC or DC outlet.
- Allow the Massage Cushion to cool down before cleaning.
- Use a small vacuum cleaner to remove dust or dirt.
- Remove stains with a soft, slightly damp sponge. Never allow the unit to become wet.
- Do not immerse the Massage Cushion in water or any other liquid to clean it.
- Do not use steel wool, abrasive cleaners or strong chemicals to clean the Massage Cushion, as these may damage the material.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.