


# ROCK 'N' ROLL ELECTRONIC DRUM MAT

Item No. 205997

User Guide

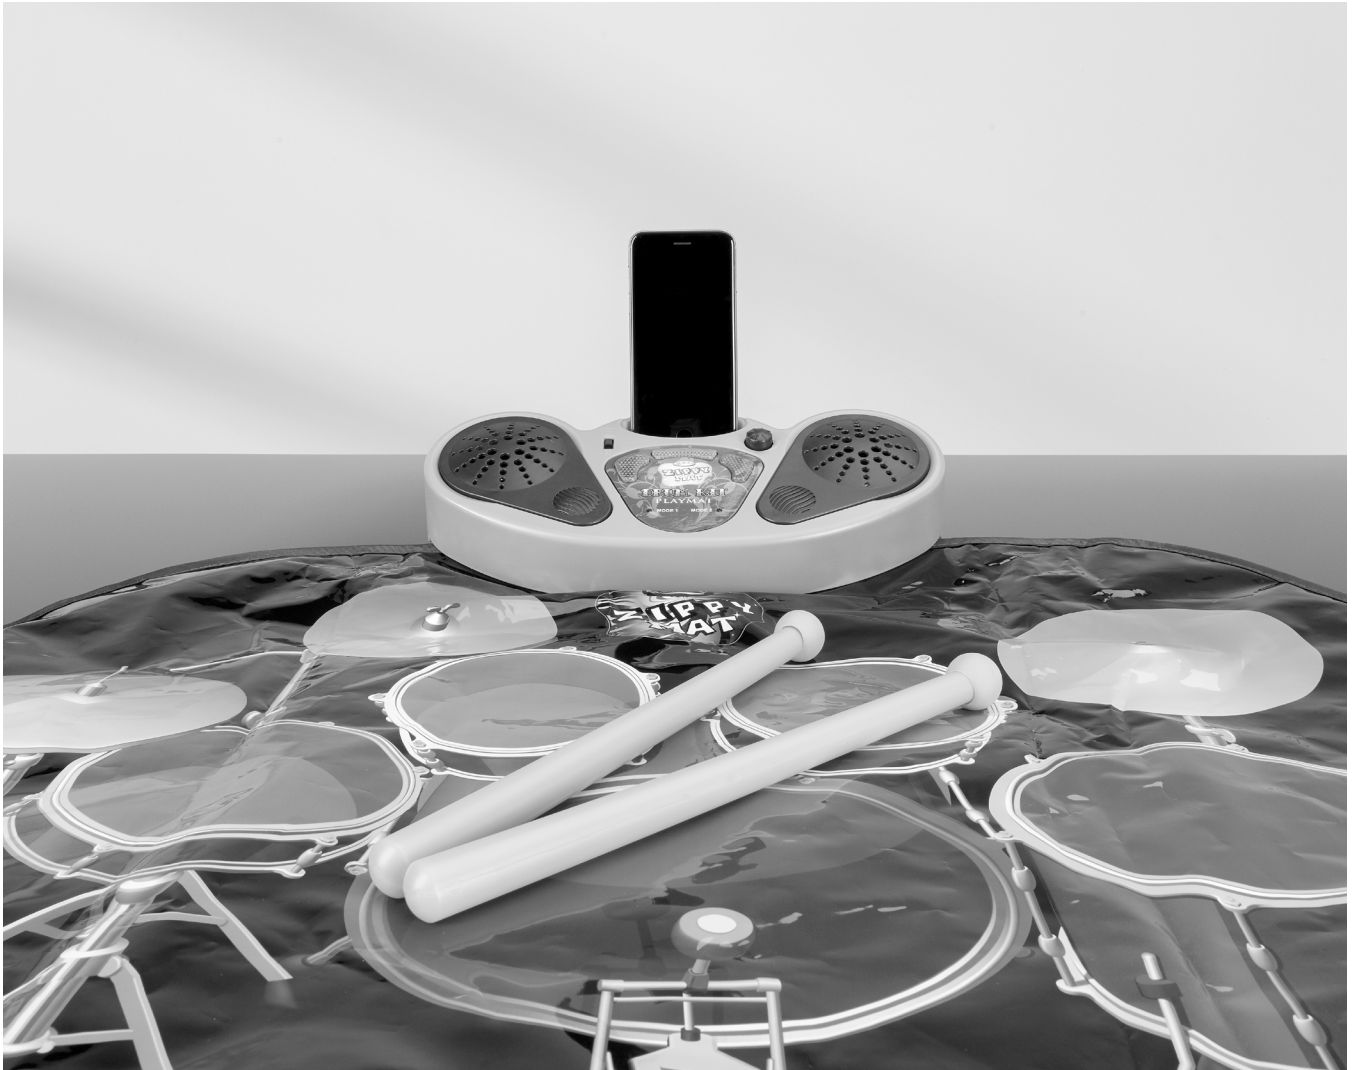

Get ready to rock... with the Rock 'N' Roll Electronic Drum Mat! Please take a moment to read this guide and store it for future reference.

## FEATURES

- Touch sensitive mat
- 8 authentic drum sounds
- Adjustable volume
- Built-in “play-along” songs
- Plug in your MP3 to play along [MP3 player not included]
- Dual speakers
- LED lights on control box
- Includes drum sticks
- Includes headphone microphone
- Includes 3.5mm auxiliary audio cable
- Rolls up for storage
- Cordless and battery powered - 4 AA batteries [not included]
- Ages 3+

## BATTERY INSTALLATION

- Open the back battery compartment with a screwdriver and install 4 AA batteries [not included].
- Close the lid and flatten the mat.

## OPERATING THE ROCK ‘N’ ROLL ELECTRONIC DRUM MAT

- **Press MODE 1/2 to select music mode:**
  - Mode 1 = drums only
  - Mode 2 = play along with background music.

Press “SELECT” to choose a built-in backup track.
- **MP3 function:** Connect an external device [MP3 player, tablet, smartphone, CD player, etc.] using the included 3.5mm audio cable. The drums will be able to play along with your favorite songs. **NOTE:** *The built-in songs are disabled when an external music device is connected.*
- **Microphone function:** Connect the included headset to the Rock ‘N’ Roll Electronic Drum Mat. Now you can sing along with the drums, and your voice will be heard on the built-in speakers.
- **Adjustable volume:** Turn the volume knob to find a comfortable volume level.

**PLAYING TIP:** For best results, place the Rock ‘N’ Roll Electronic Drum Mat on a hard surface — wood, tile, linoleum, etc.

## BATTERY WARNING AND CAUTION

- Battery replacement must be done by an adult.
- Be sure batteries are inserted with the correct polarity.
- Do not mix alkaline, standard and rechargeable batteries.
- Do not mix old and new batteries.
- Keep batteries out of the reach of children at all times.
- Do not use any sharp items on the mat.
- The mat is not washable. Spot clean only.

## **WARRANTY / CUSTOMER SERVICE**

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.