

# **SHARPER IMAGE®**

## **BONSAI BLUETOOTH SPEAKER LAMP WITH WIRELESS CHARGING PAD BY SHARPER IMAGE**

 
Item No. 206423

User Guide



Thank you for purchasing the Bonsai Bluetooth Speaker Lamp with Wireless Charging Pad by Sharper Image. Please read this guide carefully and store it for future reference.

## IDENTIFICATION OF PARTS

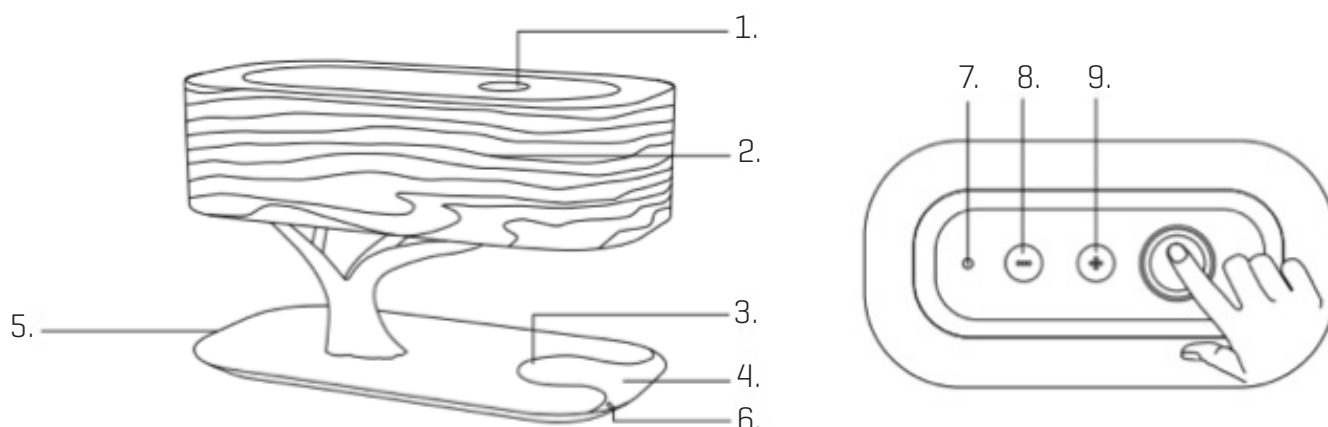

- |  |  |
|--|--|
| 1. Play / Pause / Bluetooth pairing button | 6. Charging indicator light                    |
| 2. LED light                               | 7. Bluetooth indicator light                   |
| 3. Wireless charging pad                   | 8. Volume - / Previous track (touch-sensitive) |
| 4. LED controller                          | 9. Volume + / Next track (touch-sensitive)     |
| 5. Power jack                              |  |



## FEATURES

  - Attractive, modern design inspired by the iconic bonsai tree
- LED nightstand lamp
- Adjustable brightness (up to 200 lumen)
- Built-in Bluetooth speaker
- Touch sensitive controls (play/pause/volume/track skip)
- Charges your wireless charging-enabled smartphone
- Compatible with all wireless charging-enabled smartphones, including:
  - Samsung Galaxy S9, S9+, Note 8, S8, S8+, S7, S7 Edge, Note 5, S6, S6 Edge
  - LG V30, G6 (U.S. version only)
  - Microsoft Lumia 1520, 1020, 930, 929, 928, 920
  - Google Nexus 4, 5, 6, 7 (2013)
  - BlackBerry Priv
  - Select Nokia smartphones
  - iPhone 8, iPhone 8 Plus, iPhone X, iPhone XR, iPhone XS and iPhone XS Max

**NOTE:** Consult your device's owner's manual to check if your device is *enabled for wireless charging*.

## GETTING STARTED

- Plug the AC adapter into the device, then into an AC outlet. The LED lamp will automatically turn on.

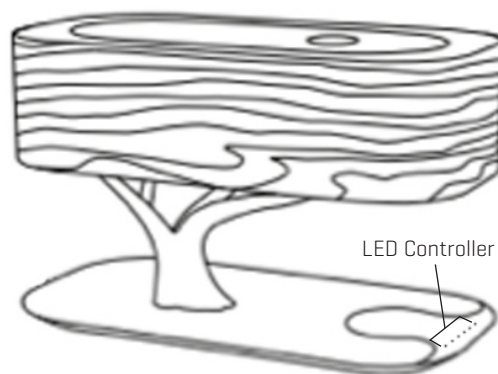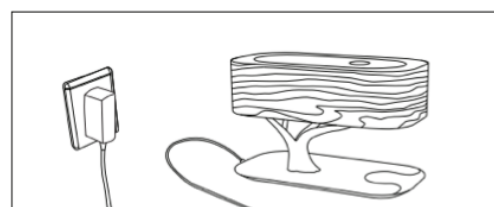

## CONTROLLING THE LAMP

- Hold the LED controller for 2 seconds to turn the lamp on.
- Hold the LED controller for 2 seconds to turn the lamp off.
- Slide your finger across the dots on the LED controller to increase or decrease the brightness.
- Hold your finger on the LED controller [for about 5 seconds] to activate Sleep Mode. The lamp will dim, indicating that Sleep Mode has been activated. When the lamp is in Sleep Mode, the lamp will turn off automatically in 30 minutes.

## WIRELESS CHARGING

- This device is compatible with wireless charging-enabled smartphones.
- Place your wireless charging-enabled smartphone on the wireless charging pad.
- Your device will begin to charge immediately.
- While your device is charging, the indicator light on the charging pad will turn blue.

## PAIRING THE BLUETOOTH SPEAKER

- Press the top Bluetooth pairing button until the Bluetooth indicator flashes and makes the low-pitched notification sound.
- Turn on the Bluetooth function of your smartphone and select “MS-W10.”
- When your device is paired successfully, you will hear the high-pitched “connected” notification sound.
- Tap the top of the device to make the touch-sensitive buttons [“+” and “-”] appear.
- If you like, you can pair a second device. Turn on the second device, press the volume “+” and “-” at the same time on the first device. A prompt noise will sound and the first device will search for your second device automatically.
- When your device[s] are paired, use the touch-sensitive buttons to control the volume and tracks as follows:

Button Action	Result
Short press +	Increase volume
Long press + [for 2 seconds]	Skip to the next track
Short press -	Decrease volume
Long press - [for 2 seconds]	Go back to the previous track

- **NOTE:** To unpair your device[s], press the volume “+” and “-” of the main unit at the same time again. The two devices will be disconnected, and you will hear the low-pitched sound. The blue indicator lights will turn off if they are not used in 30 seconds.

## SPECIFICATIONS

Wireless charge	9V, 1A
Brightness	200 lumen
Output voltage	12V
Max. output current	2A
Wireless charging conversion rate	70%-75%
Bluetooth version	V5.0
Bluetooth frequency	2.4 GHZ
Bluetooth profile	A2DP, AVRCP

## IMPORTANT NOTICE

Please read all safety instructions and warnings thoroughly before using this product. Improper use of this product may result in damage to this or attached products.

1. Do not disassemble the product or attempt to fix it.
2. Please use only the original power cord supplied.
3. Do not attempt to replace any part of this product.
4. Do not crush, puncture, short the contacts or dispose of this product in a fire.
5. Do not expose the product to water or other liquids.
6. Do not store or use the product in a high-temperature environment, including intense sunlight or heat.
7. Avoid drops, bumps, abrasions and impacts.
8. If there is any reason to believe there is damage to the product, discontinue use immediately and contact Sharper Image Customer Service.
9. If you find that the product is too hot, emits an odor or appears damaged, discontinue use immediately and contact Sharper Image Customer Service.
10. The product is not designed for use by children.

## WARRANTY/CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.