

SHARPER IMAGE®

BBQ GRILL LIGHT AND FAN

Item No. 206635


User Guide



Thank you for choosing the Sharper Image BBQ Grill Light and Fan. Please take a moment to read this guide and store it for future reference.

HOW TO MOUNT THE BBQ GRILL LIGHT AND FAN

1. Unscrew and remove the mounting bracket bolts [1] from the upper and lower mounting brackets [2] and [3].
2. Make sure the BBQ Grill Light & Fan is centered across the grill handle [5] so that it sits inside the openings of the upper and lower mounting brackets [2] and [3].
3. Partially screw in place the mounting bracket bolts [1]. Adjust the BBQ Grill Light & Fan to your desired angle and securely tighten bolts [1].
4. To adjust the distance between the BBQ Grill Light & Fan and the grill, loosen the adjustment knob [8] then slide the product up or down on the adjustment loops [7]. When you're satisfied, tighten the adjustment knob [8] securely.

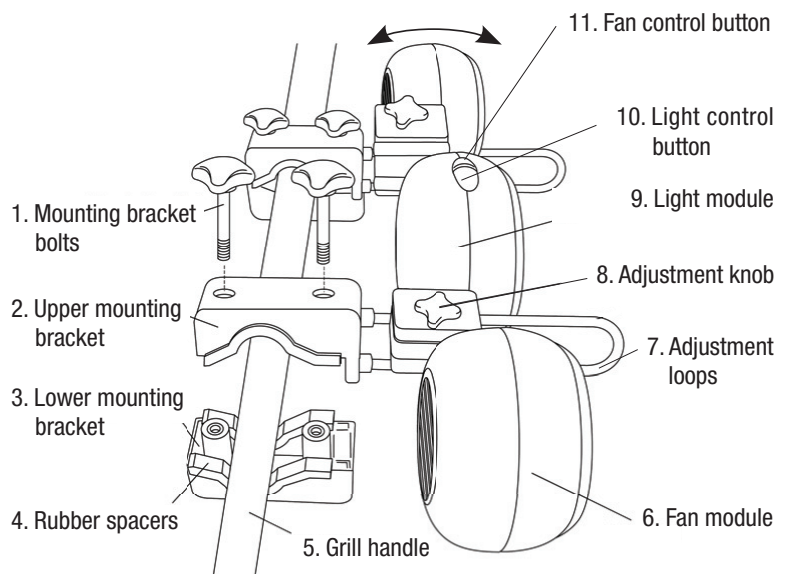

NOTE: It may be necessary to remove the rubber spacers [4] from the upper and lower mounting brackets if your BBQ grill's handle is too thick.

HOW TO USE

- Press the fan control button [11] to turn the fans [6] on and off.
- Press the light control button [10] to turn the light on and off.
- The fans [6] can be rotated individually for premium performance so that any smoke from the grill can be safely deflected away.
- The light module [9] rotates for best lighting conditions while grilling at night—adjust as desired.


BATTERY INSTALLATION AND REPLACEMENT

- Using a Phillips head screwdriver [not included], remove screw [12] and lift the battery compartment cover open [14].
- Install batteries according to the polarity drawing indicated. Replace the battery compartment cover [14]. Make sure to align tabs [13] and tighten screw [12] securely to close.

NOTE: This product requires 8 x 1.5V "AA" batteries [included].

CAUTION – BATTERY SAFETY INFORMATION

- Do not recharge non-rechargeable batteries.
- Rechargeable batteries should only be recharged under adult supervision.
- Do not mix alkaline, standard [carbon-zinc] or rechargeable [nickel-cadmium] batteries.
- Old batteries should be removed and replaced.
- Do not mix old and new batteries.
- Do not dispose of batteries in fire—batteries may explode or leak.
- Do not dispose of the BBQ Grill Light & Fan in fire—batteries may explode or leak.
- If this product will not be used for an extended period of time, remove the batteries from the product.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with correct polarity.
- Clean the battery contacts and product prior to battery installation.
- As always, dispose of batteries in an eco-friendly manner.

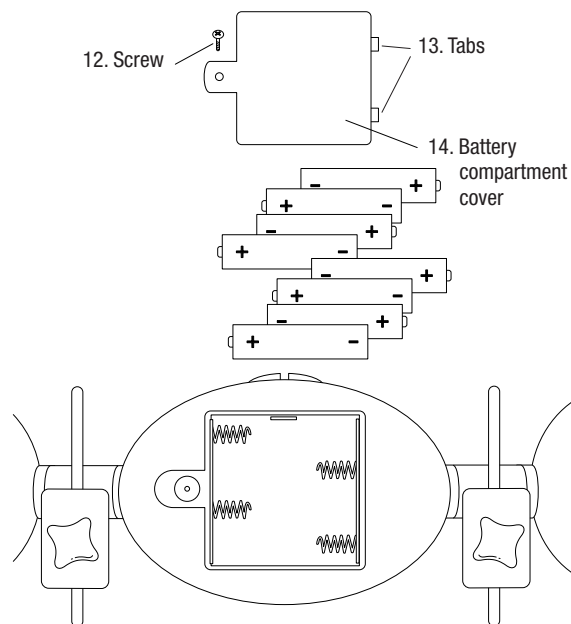

MAINTENANCE & STORAGE

If necessary, wipe clean with a damp cloth using water only.

WARNINGS

- This product is not a toy and should not be used by children.
- Do not look directly at the bulb it can cause eye damage.
- Use extreme caution when using the BBQ Fan & Light. If at any time the product becomes too hot, allow the BBQ grill to cool down then remove the BBQ Fan & Light and discontinue use.
- This product shouldn't be used on kettle grills.
- Do not leave this product in an uncovered area as this may cause weather related damage to electrical components.
- Store away from children.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.