

SHARPER IMAGE®

LED LIGHT UP BEANIE


Item No. 206894

User Guide



Thank you for purchasing the LED Light Up Beanie. Please take a moment to read this guide and store it for future reference.

FEATURES

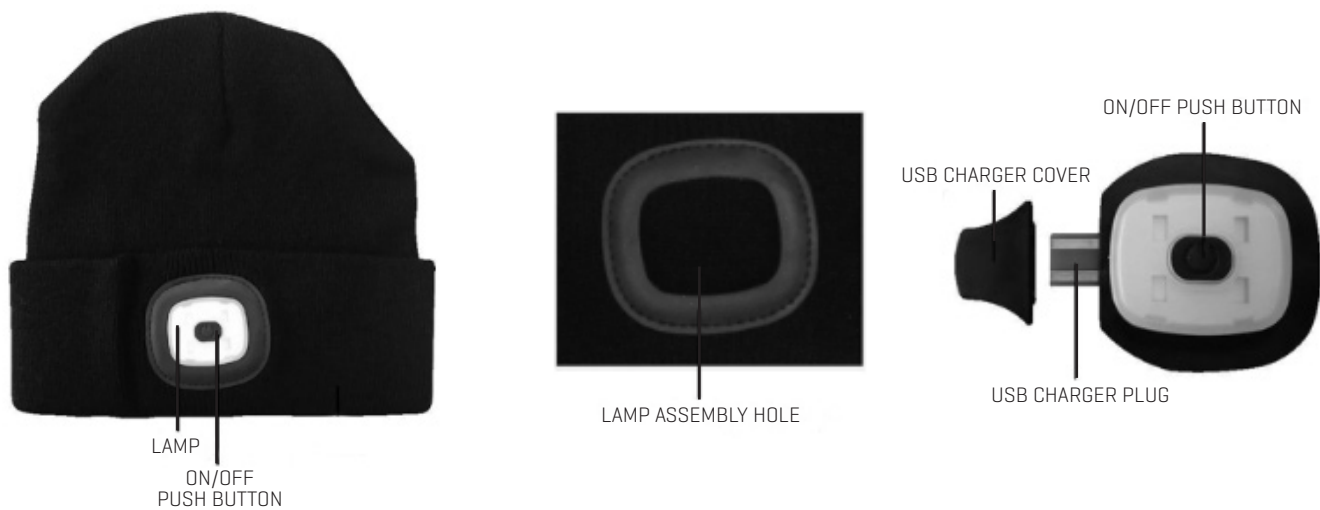

HOW TO USE

CHARGING

Before initial use, charge the rechargeable battery fully, this typically takes 1.5 hours. Charge the head lamp using a USB charger (not supplied). The battery contained within the head lamp may only be partially charged when unpacked.

1. To remove the lamp unit, pull the head lamp rim open and push the lamp out from the hat. Then pull off the USB charger cover (Fig. 1)

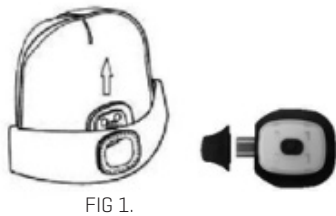


FIG 1.

2. Plug the head lamp USB charger plug into the corresponding socket of the USB wall charger (not supplied) or 12V USB car charger socket (not supplied), power bank or similar device with minimum DC5V 1000 mah output USB socket. Plug 220-240V USB wall charger into wall socket outlet or power board and switch on (if power board socket is individually switched). Plug 12V USB car charger into 12V lighter socket in car or 12V socket outlet of generator or similar device charge ports.
3. The battery indicator light will illuminate white whilst charging, when the battery is low or has partial charge. When the battery is fully charged, the indicator light will close.

Note: This hat is fitted with a safety protection device that protects against over-charging or discharging and will automatically turn off. This will extend the life of the battery.

HOW TO OPERATE THE BEANIE HEAD LAMP

Never use a damaged product.

Pull head lamp rim open and push the lamp into the hat rim.



FIG 2.

Pressing the 'ON/OFF' switch on the lamp will set the head lamp to perform the following functions:
On → Normal Light → Blinking → Off.

TECHNICAL DATA

Battery	3.7V Li-Ion 250mAh
Charging input	DC 5V 1000mA
Charging time	Approximately: 1-1.5 hours
Lighting Duration	1ST, 90 minutes 2nd, 180 minutes 3rd, 240 minutes

CARE AND MAINTENANCE

Switch the device off and disconnect the charger from the socket before cleaning.

1. Charge the battery fully at regular intervals, when the device has not been in use to ensure optimum battery life.
2. Clean the product with a soft, dry cloth. Do not use any form of abrasive cleaner or solvents to clean the unit. Never dip the head lamp into liquids. Pull hat rim open and push lamp out from the rim. Beanie can be washed.

Beanie care instructions: Machine wash cold. Do not bleach. Do not tumble dry. Do not iron. Do not dry clean.



3. Store the device in a clean, dry and dark place. Do not expose it to temperatures of under 5° F for long periods of time.

DISPOSAL

Do not dispose of packaging or the product through your household waste! The product and packaging are made from recyclable materials [plastics, metals, paper].

If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local authority. **Warning:** *Dispose of used batteries in accordance with local authority regulations.*

WARRANTY AND CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.