

# **SHARPER IMAGE®**

## **100X ULTRAZOOM BINOCULARS**

Item No. 206924

User Guide




Thank you for purchasing the Sharper Image 100X Ultrazoom Binoculars.  
Please take a moment to read this User's Guide and store it for future reference.

## FEATURES

- High power: Zooms from 10X to 100X
- Superior clarity
- Military-grade construction
- Nonslip hand grips
- Rubber, fold-down eyecups
- Lightweight — only 2.6 lbs
- Ideal for sports, concerts, birding and other outdoor adventures
- Tripod adapter hole [under plastic cap] **Note:** Tripod adapter bracket not included

## PARTS IDENTIFICATION

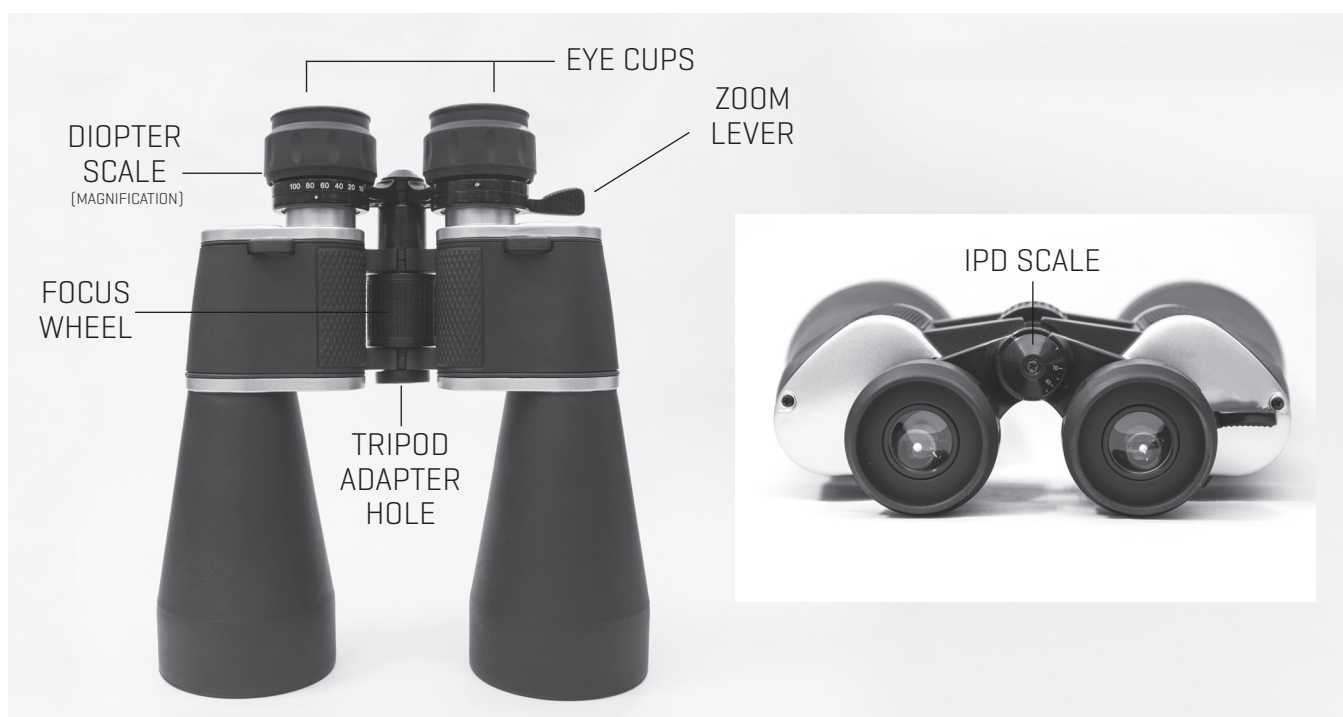

## WHAT IS IPD?

The interpupillary distance (IPD) is the distance between the centers of the left and right eye pupil. If the interpupillary distance of the binoculars does not match your eyes, you may see shadowing or two distinct images. To find your correct IPD, adjust the position of the binocular barrels until you see one image. This will also reduce shadowing. Once you have found the ideal IPD, look at the scale for future reference. For subsequent uses, you can save time by using the IPD scale to set the IPD without looking into the binoculars.

## USING YOUR BINOCULARS

**IPD ADJUSTMENT:** Set the interpupillary distance [IPD] by grasping the body and bending it until you can see one circle of view. The setting for your eyes will be indicated on the IPD scale. Note the scale setting for future use.

### How to focus the 100X Ultrazoom Binoculars

1. Hold the binoculars up to your eyes.
2. With the left eye open and the right eye closed, use the Center Focus Wheel to adjust the focus.
3. When the image is clear, open both eyes. If the object is NOT clear, you will need to adjust the Diopter setting.
4. Hold the binoculars back up to your eyes.
5. Close left eye and keep the right eye open.
6. Adjust the Diopter setting until the object comes into fine focus.
7. Now, open both eyes. Leave the Diopter setting alone.
8. Adjust the Center Focus Wheel as needed to view different objects during the day.

**EYEGGLASS WEARERS:** *If you wear corrective lenses, set the diopter ring at "0."*

## CARE AND MAINTENANCE

- Keep the included lens covers on the lenses when binoculars are not in use
- When wiping the lenses, use the included lens cloth or a soft, lint-free cloth
- To remove any remaining dirt or smudges, add one or two drops of isopropyl alcohol to the cloth
- Store your binoculars in a moisture-free area

**IMPORTANT NOTE:** *Never attempt to clean your binoculars internally or try to take them apart.*

## CAUTION!

Viewing the sun can cause permanent eye damage. Do not view the sun with these binoculars, or even with the naked eye.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.