

SHARPER IMAGE®

HEATED ICE SCRAPER

Item No. 206999

User Guide




Thank you for purchasing the Sharper Image Heated Ice Scraper. It has been designed to quickly and easily clear ice and snow from your car windshield and windows. Please take a moment to read this guide and store for future reference.

FEATURES

- Plugs into 12V outlet (car cigarette lighter)
- Extendable handle (extends 12.5" to 17.5")
- Extra-long 11.5' cord
- Built-in flexible squeegee
- LED work light
- Cord and plug store inside the handle when not in use

IDENTIFICATION OF PARTS

1. Electrical plug
2. Scraper blade
3. Flexible squeegee
4. Metal heating element
5. LED work light
6. On/off switch
7. Extender release button
8. Cord/plug storage compartment

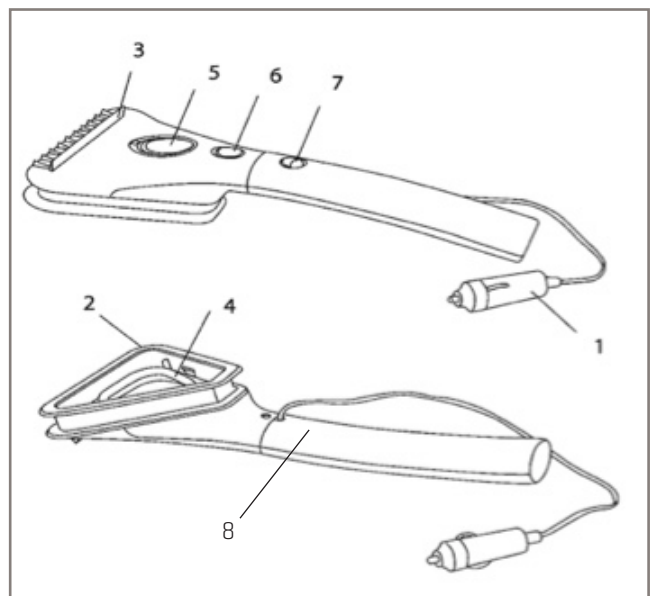

INSTRUCTIONS FOR USE

- Open the handle and remove the cord and plug.
- Unwrap the electrical cord completely.
- Insert the 12V electrical plug into your vehicle's 12V DC outlet [a.k.a. the cigarette lighter].
- Allow 2-3 minutes for the heating element to warm up.
- Extend the handle by pushing the extended release button.
- Activate the **LED** work light by pressing the **ON/OFF** button.
- Hold the Heated Ice Scraper over the frozen glass surface for several seconds.
- Once melting begins, scrape the ice with the scraper blade and move to another.

IMPORTANT

- **DO NOT LEAVE** the Heated Ice Scraper in one location for more than two minutes.
- The heating element should never make direct contact with glass or other vehicle surfaces.
- Unplug the Heated Ice Scraper and allow to cool for 5 minutes before storing.

CAUTION

- The heating element on the Heated Ice Scraper gets very hot – **DO NOT TOUCH**.
- The heating element can cause burns and start a fire. Always handle with care.
- Do not expose the heating element to skin, clothing or any of the vehicle surfaces.
- Do not leave the Heated Ice Scraper unattended when plugged in.
- Do not use the Heated Ice Scraper on Plexiglass or on the plastic windows of convertibles.

- Do not place the Heated Ice Scraper on any surface that can be damaged by heat.
- Disconnect the Heated Ice Scraper immediately after use.
- Allow the Heated Ice Scraper to cool completely before storage.
- Keep out of reach of children.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.