

# **SHARPER IMAGE<sup>®</sup>**

## **MEN'S RECHARGEABLE HEATED SOFTSHELL JACKET**

Item No. 207020

User Guide



Thank you for purchasing the Sharper Image Men's Rechargeable Heated Softshell Jacket. Please take a moment to read this guide and store it for future reference.

## FEATURES

- Dual-zone heating [one to control the body heating and the other to control the cuff heating]
- Adjustable temperature control [5-Minute Pre-Heat, High, Medium and Low]
- Operates on rechargeable lithium-ion batteries [3pcs 2600mAh single cell batteries]
- Includes AC adapter



## HOW TO USE

1. Plug the AC adapter into an outlet.
2. Connect all 3 batteries and leave them in place until fully charged. The AC adapter will show green light when fully charged and red light while charging. **Note:** *Do not force the plug into the batteries. Connect all 3 batteries when charging.*
3. The LED light on the AC adapter's red light indicates that it is being charged.
4. When the AC adapter lights up green [with all three batteries connected to the AC adapter] it is fully charged. **Note:** *Fully charge the Men and Women's Rechargeable Heated Softshell Jacket battery before using for the first time. Failure to fully charge the battery prior to the first use may reduce battery life.*
5. When fully charged, disconnect the from the AC adapter.
6. Locate the input plugs inside the jacket and connect the charged batteries.
7. Press and hold the control button in the jacket for three to five seconds or until the LED light flashes red [Pre-Heat], press again will turn to red flat light [High], press again will turn to white [Medium], blue [Low] then cycle from red flat light. Two control buttons can work separately.
8. The LED light on the control button of the jacket will flash red indicating that the jacket is in pre-heat mode once turned on.
9. After approximately five minutes the light will change to solid white indicating the jacket is no longer in Pre-Heat mode. The temperature can be adjusted by pressing the control button.
10. To turn off the jacket press and hold the control button for three to five seconds or until the LED light turns off.
11. Unplug the batteries when the jacket is not in use. Store batteries inside the jacket when temporarily not in use. **Note:** *The Men and Women's Rechargeable Heated Softshell Jacket should only be used with the included batteries and charging cable.*

## TEMPERATURE SETTINGS

- Red- High heat: Average 105.8° F with approximate run time of 3.1 hours
- White- Medium heat: Average 98.6° F with approximate run time of 4.8 hours
- Blue- Low heat: Average 93.2° F with approximate run time of 8.5 hours

**Note:** *Run times were tested under an average room temperature of 82.4° F.*

## **CLEANING AND MAINTENANCE**

- Always remove the battery from the jacket before cleaning
- Spot clean with a damp cloth, hand wash in cold water with mild detergent or machine wash gently in cold water
- Line dry only
- Do not twist the garment as this may damage the cable
- Do not dry clean or bleach
- Do not tumble dry
- Do not iron

## **BATTERY USE AND CARE**

- Operates on rechargeable lithium-ion batteries (3pcs 2600mAh single cell batteries)
- Do not use battery if you notice a change of shape (lumps), overheating when charging, rust or corrosion on the battery connectors
- Charge the battery regularly (recommended a minimum of once every 3 months)
- Charge between each use
- The battery life is 300+ cycles before the battery will diminish in capacity output
- The lithium-ion battery provides a diminished capacity output at extreme cold temperatures. Keep the battery away from cold to minimize the impact
- For best performance, it is recommended not to fully charge the batteries if the product is not being used for an extended period of time. Charge for 30 minutes only and after 3 months charge the batteries again for about 30 minutes. Charge the batteries completely before using product again
- When battery is not in use, keep it away from other metal objects like paper clips, coins, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may result in burns or a fire
- Under abusive conditions, liquid may be ejected from the battery: avoid contact. If contact accidentally occurs, flush with water. If liquid comes into contact with eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns

## **SAFETY WARNINGS**

- Do not expose product to rain. Water will increase the risk of electrical shock
- Do not abuse the power cable. Never use the cord for carrying, pulling or unplugging the heated product. Keep the cord clear from heat, oil, sharp edges or moving parts
- Do not use on open wounds, sensitive skin areas or in the presence of poor circulation.
- Check skin frequently during use to ensure rashes or burns are not developing. The FDA and CPSC recommend the following precautions be taken to avoid hazards associated with the use of heated clothing

## **ALWAYS**

- Inspect heating unit before each use to assure it is in proper working order
- Discard if it looks worn or cracked, or if the electrical cord is frayed
- Read and follow all instructions prior to use

## **NEVER**

- Use on an infant
- Use on a person who is paralyzed or has skin that is not sensitive to temperature changes
- Use on a sleeping or unconscious person
- Use in an oxygen enriched environment or near equipment that stores or emits oxygen
- Sit on this device
- Crush this device
- Unplug this device by pulling its connecting cord
- Use pins or other metallic fasteners to hold this device in place
- Do not submerge product or battery into water
- Do not cut, puncture or tear into the lining of the product
- Do not allow the battery to come into contact with water or other liquids. If water or liquids enter the battery interior, immediately disconnect the product from the battery. Allow the battery to dry completely before use
- Do not penetrate, strike, short-circuit or disassemble battery
- Keep all electronic components away from fire and excessive heat
- Do not leave product unattended while connected to the battery
- Only use the AC adapter and battery included with this product
- If you experience any discomfort while using this product, remove it immediately and consult your physician before resuming use
- Check with your physician if you're pregnant, have heart disease, a pacemaker, diabetes, circulatory problems, sensitivity to heat, or are under the age of 13

## **WARRANTY / CUSTOMER SERVICE**

Sharper Image branded items purchased from [SharperImage.com](http://SharperImage.com) include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.