

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] this device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier’s Declaration of Conformity

Model No.: 207024-01

Description: Towel warmer

Responsible Party: Conair **LLC**, 1 Cummings Point Road Stamford, CT 06902
1-800-334-4031

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Date of Issue: 6 June 2019

CUSTOMER SERVICE / WARRANTY

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 [877] 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

TOWEL WARMER

Model No. 207024-01

User Guide



Thank you for purchasing the Towel Warmer. Please read this guide carefully and keep for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using this unit, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

DANGER

Read all instructions before using this appliance.

To reduce the risk of electric shock:

- 1. Do not remove housing. There are no user-serviceable parts inside.
- 2. Do not expose the unit to water, rain or moisture.
- 3. Do not immerse in water due to risk of electric shock.
- 4. Caution – hot! Do not touch internal surfaces.

NOTE: As with most electrical appliances, electrical parts are electrically live, even when the switch is off. Always unplug unit after using.

CAUTION

- To reduce the risk of electric shock, do not remove cover. There are no user-serviceable parts inside.
- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance [servicing] instructions in the literature accompanying the unit.

WARNING

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the unit from the electrical outlet immediately after using.
2. Do not use appliance for anything other than the intended use.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. Do not reach for a unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall into — and liquids are not spilled onto — the unit.
7. This unit should never be left unattended when plugged in. Unplug from outlet when not in use.
8. Close supervision is necessary when this unit is used near children or disabled persons.
9. Use this unit only for its intended use as described in this manual.
- 10.Never operate this unit if it has a damaged cord or plug; if it is not working properly; or if it has been damaged or dropped in water. Contact Sharper Image if damage occurs.
11. Keep cord away from heated surfaces. Do not wrap cord around exterior of appliance or let cord hang over edge of table or counter.
- 12.Do not use outdoors.
- 13.Do not alter the power cord, plug, or use an extension cord or attachments not recommended by manufacturer, as this may cause injury.
- 14.Do not operate with a voltage converter.
- 15.Do not touch hot surfaces.
- 16.This appliance is designed for household use only.
17. Do not carry this appliance by supply cord or use cord as a handle.

OPERATING INSTRUCTIONS

 
All safety and operating instructions should be read and followed before the unit is operated.

POWER CORD INSTRUCTION

SHORT CORD INSTRUCTION


The short power-supply cord should be used to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating should be equal to or greater than that of this unit. The extension cord should not hang over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally.

POLARIZED PLUG



To reduce the risk of electric shock, this unit has a polarized plug [one blade is wider than the other] that fits a polarized outlet in one direction only. If the plug does not fit into an outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS

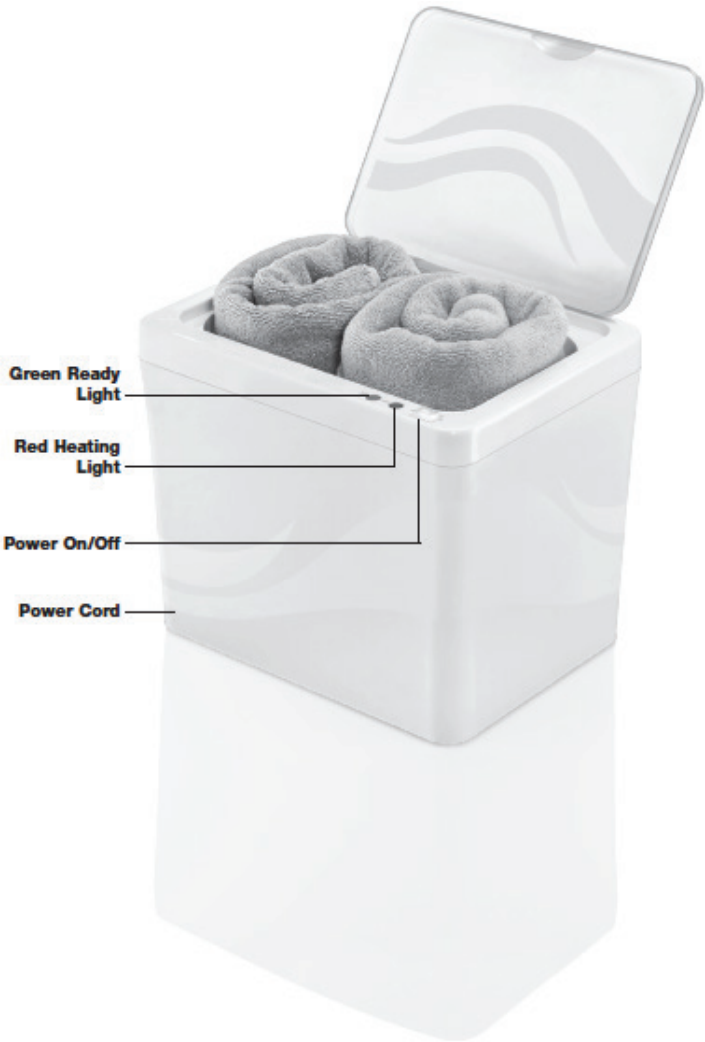

BEFORE USING THE TOWEL WARMER

1. Open the cover and remove any contents.
2. Place the Towel Warmer on a dry, level hard surface.

OPERATING THE TOWEL WARMER

SELECTING A TOWEL

Your Towel Warmer will warm two standard-size bath towels. For best results, use 100% cotton or cotton-blend towels.

1. Plug the power cord into a standard 120V AC outlet.
2. Open the lid and place your towel[s] inside.
3. Close the lid and switch the power button on the top of the unit to ON. The RED indicator light will illuminate, indicating the unit is warming your towel[s]. **NOTE:** When RED indicator light is illuminated, inside surfaces of Towel Warmer are hot to the touch. Handle Towel Warmer carefully when RED light is illuminated.
4. When the GREEN indicator light illuminates, your towels are ready for use.
5. After 50 minutes the GREEN indicator light will turn off, meaning the internal heater has automatically shut off. You may use your towel at this time or leave your towel in the warmer to maintain its heat.
6. To use the Towel Warmer again, switch the power button on top of the warmer to ON [you must press the OFF button first]. **NOTE:** The RED indicator light must be off, and the Towel Warmer cooled down before additional towels can be heated.

CARE AND MAINTENANCE

CLEANING

- Your appliance is maintenance free.
- If cleaning becomes necessary, disconnect the appliance from the wall outlet and wipe with a soft, dry cloth. Do not use any strong chemical cleaners such as benzine.

STORAGE

- Unplug the unit when not in use.
- Allow the unit to cool; store out of reach in a safe, dry location.
- Handle power cord carefully to prolong its life. Firmly grasp plug when removing from outlet. Do not pull plug from outlet using the cord.