

# SHARPER IMAGE®

## PORTABLE PHOTO PRINTER BY SHARPER IMAGE

Item No. 207126


User Guide



Thank you for purchasing the Portable Photo Printer by Sharper Image. Please read this guide and store it for future reference.

**Note:** This printer has a built-in battery. Charge the printer before using.

### HOW TO CHANGE CARTRIDGE

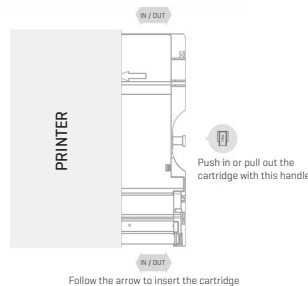

### INSTALLATION

Android devices

A TYPE \*NFC Support for Android devices only

1. Turn NFC on in your smartphone
2. Turn the printer on by pressing the power button
3. Tap the phone icon on the top of the printer. The Google Play Store app installation page will show up
4. Install the app on your smartphone from the store



A TYPE

B TYPE

1. Go to the Google Play Store on your smartphone
2. Search "SI Smartphone Printer"
3. Install "SI Smartphone Printer" on your smartphone

APPLE DEVICES

1. Go to the App Store on your iPhone, iPod touch or iPad
2. Search "SI Smartphone Printer"
3. Install "SI Smartphone Printer" on your smartphone


### CONNECTING TO PRINTER

Wi-Fi Access Point (AP) \*Apple and Android devices

1. Turn on Wi-Fi on your smartphone
2. Go to Wi-Fi settings and find "SI Smartphone Printer" \*Printer names may vary. They are alphanumeric and 4 characters long
3. Password is "12345678"
4. Select the Wi-Fi network and connect the printer

NFC and Wi-Fi Direct \*NFC, Wi-Fi Direct support devices only

1. Turn on NFC and Wi-Fi on your smartphone \*Set the NFC setting as P2P mode
2. Tap your device on the printer where the logo is
3. Within 20 seconds the app will automatically connect to Wi-Fi Direct

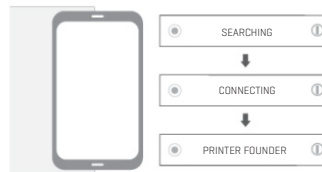

### USING THE APP

With the SI Smartphone App, you can edit and print digital photos right from your mobile device, without a computer.



1. Make sure you charge the printer before you use it.

2. Turn on the printer.

3. Select an image from your gallery that you wish to print.

4. Once image has been selected, you can crop, adjust and edit the image in the app.

5. Press the print button when editing is completed. It will take about a minute to fully print your photo. Please do not pull the photo until it is completely printed.

**NOTE:** When you print for the first time, this device may need to update its firmware. Please follow the instructions shown on the screen of your smartphone.

**NOTE:** Due to continuous improvement of our products and apps, some images or instructions may vary slightly from this guide. Download the most recent user guide at [SharperImage.com](http://SharperImage.com).

### LED INDICATORS

STATUS	
POWER ON	WHITE
POWER OFF (2SEC)	OFF
PRINTING	WHITE FLICKERING
F / W UPGRADE	PINK FLICKERING
NO CARTRIDGE	RED FLICKERING
ERROR (PAPER JAM, ETC.)	RED FLICKERING
WAITING / COOLING	WHITE

### CHARGING LIGHTS

STATUS	
CHARGING	RED
CHARGING COMPLETE	GREEN

### TROUBLESHOOTING

SYMPTOM	CAUSE / SOLUTION
PAPER JAM	POWER OFF AND POWER ON AGAIN. PAPER WILL BE AUTOMATICALLY EJECTED. IF NOT, PLEASE CONTACT CUSTOMER SERVICE.
IMAGE QUALITY IS NOT GOOD	PRINT QUALITY COULD BE LESS IF YOUR PHOTO SOURCE HAS LOW RESOLUTION. OVER 1280 X 2448 PIXELS IS RECOMMENDED FOR BEST IMAGE QUALITY.
PRINTER IS NOT RESPONDING	PRESS RESET BUTTON WITH A SHARP TOOL LIKE A PIN.

### WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

### SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.