

Arcade Style Electronic Dartboard

Arachnid[®]
The Originator of Electronic Dart Games!

www.escaladesports.com

TO ORDER PARTS

Visit our website before returning to store

**Please have your model number
when inquiring about parts.**

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owner manual.

Your Model Number: **E800FS1010**

Date Code: **CPSIA#2-E800FS1010-** **-MW**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE



IMPORTANT NOTES

1. Make sure you have all the necessary parts before beginning each assembly step.
2. Perform the assembly steps exactly as written to avoid errors.
3. Refer to diagrams to aid in the assembly process.
4. Keep your original receipt and instruction manuals for the cabinet and electronic dartboard for warranty purposes.
5. This is a 2 adult assembly



Tools Needed

- Phillips Screwdriver

PREPARATIONS

1. Find an open area on the floor to perform the assembly, in close proximity to where you plan to put the finished product.
2. Carefully open the box. Do not use a knife as you may scratch the cabinet.
3. Remove the inner box holding the electronic dartboard and put it to the side until you are ready to install it into the cabinet.
4. Take the cabinet and hardware parts out of the box and make sure all of the parts are accounted for.
5. Begin assembly.

WARNING!

TIP OVER HAZARD

Do NOT lean on or climb on this cabinet.

Hand pressure must be applied to the dartboard while removing darts from the dartboard.
A Safety L-Bracket / Screws / and installation Instructions are included and must be installed correctly in order to prevent this tip over hazard.



PLEASE KEEP YOUR INSTRUCTIONS!

- Your Model number is necessary should you need to contact us.
- Please read through this instruction book to familiarize yourself with all the parts and assembly steps.
- Refer to the Parts Identifier and verify that all parts have been included.
- For questions that may arise or for missing parts,
PLEASE CONTACT US BEFORE RETURNING THE PRODUCT TO THE STORE



 
CONTACT INFORMATION:

Hours: Mon. - Fri., 9:00 am to 5:00 pm EST

Replacement Parts: order online at www.escaladesports.com

Technical Support: customerservice@escaladesports.com /
1-800-526-0451


Hardware Identifier (To Scale)



H1 - 40 x 5mm
Phillips Flat Head Bolt (24)



 
H2 - 25 x 6mm
Panel Bolt (4)

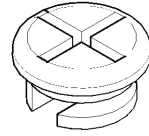


(Not to Scale)
H3 - Panel Bolt Lock (4)



 
H4 - 20 x 6mm
Wood Dowel Pin (16)




H5 - 18 x 6mm
Allen Head Bolt (2)

 


H7 - 16 x 5mm
Pivot Pin (2)

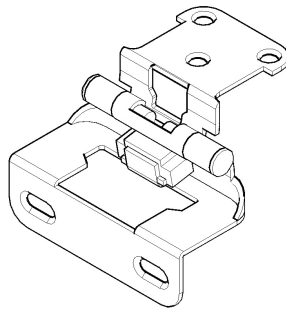 

(Not to Scale)
H8 - Door Hinge (3)

 

 H9 - 12 x 3.5mm
Phillips Round Head Screw (56)

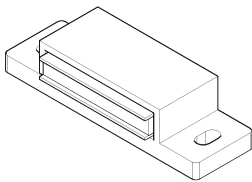


(Not to Scale)
H10 - Door Magnet (1)




H11 - (Not to Scale)
Door Magnet Attachment (1)



 
H12 - 10 x 3.5mm
Phillips Flat Head Screw (5)

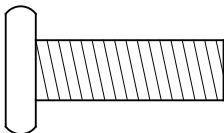

H13 - 25 x 8mm
Allen Head Bolt (4)

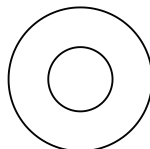 


H14 - 8.5 x 19mm
Flat Washer (4)

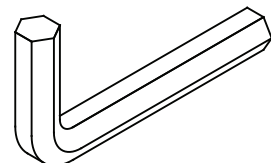 


(Not to Scale)
Allen Wrench (1)

 
Parts Identifier (Not to Scale)

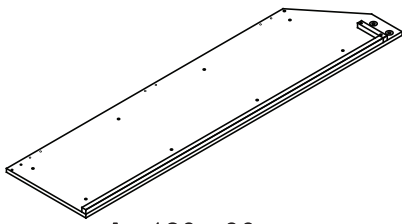

 
A - 120 x 30cm
Lower Left Side Panel (1)

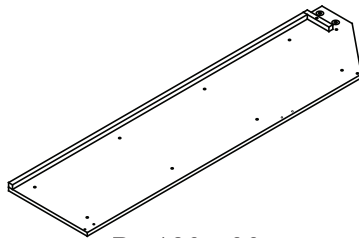

 
B - 120 x 30cm
Lower Right Side Panel (1)

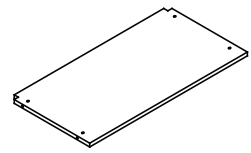

 
C - 57.5 x 29.5cm
Top & Bottom Shelves (2)

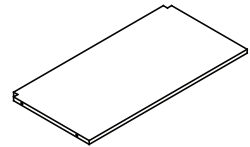


D - 57.5 x 29cm
Middle Shelves (2)

 


E - 57.5 x 5cm
Base Cross Panel (1)

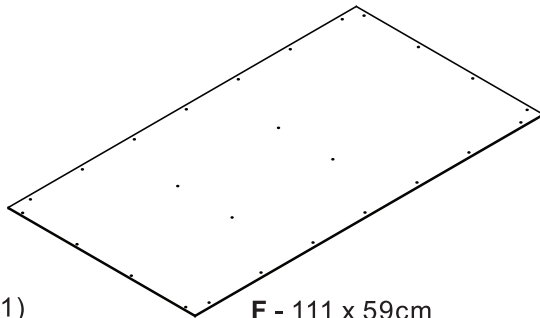 


F - 111 x 59cm
Lower Back Cover (1)

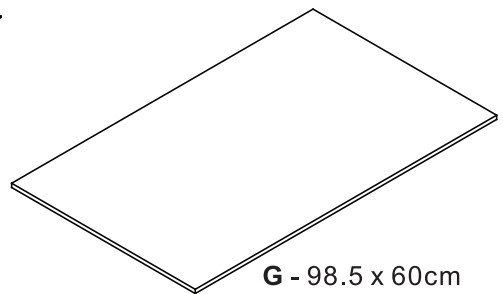 


G - 98.5 x 60cm
Door Panel (1)

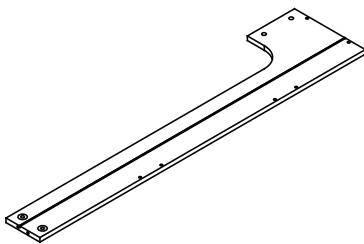 

 
J - 98 x 21.5cm
Upper Left Side Panel (1)

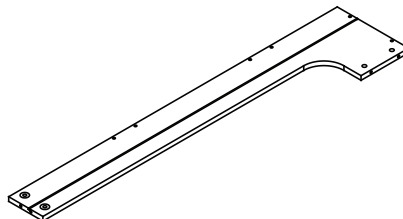

 
K - 98 x 21.5cm
Upper Right Side Panel (1)

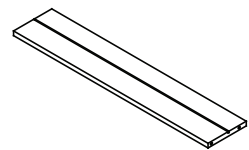

 
L - 57.5 x 11.5cm
Upper Section Bottom Panel (1)

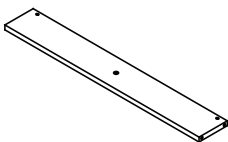


M - 55 x 8cm
Dartboard Anchor Panel (2)

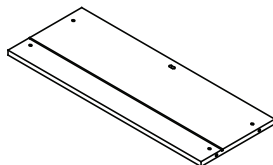 


N - 55 x 21cm
Upper Panel (1)

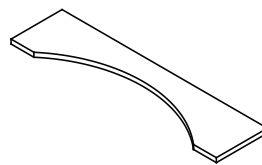 

 
P - 58 x 14.5cm
Upper Section
Arched Front Panel (1)

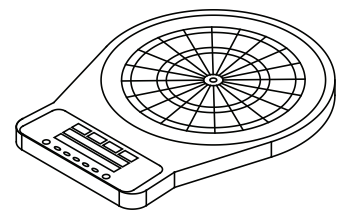


Q - Dartboard (1)

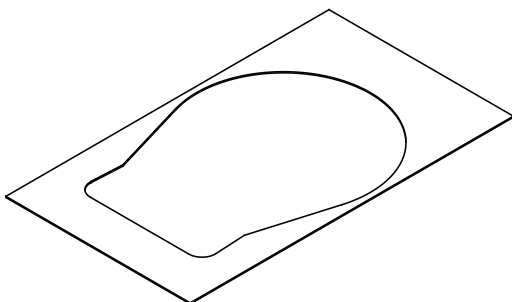 

 R - 97.5 x 55.5cm
Front Baffle Panel (1)

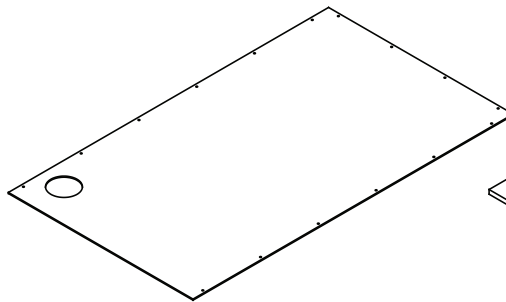


S - 98 x 56.5cm
Upper Back Panel (1)

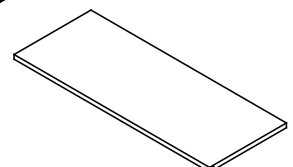 


T - 57 x 22.5cm
Tilt-Down Door Panel (1)

 1. Attach Parts **N** and **L** to Part **J** using Phillips Flat Head Bolts (**H1**). See **Figure 1**. Factory Installed Inserts on Part **N** and Part **J** must be aligned to screw holes for proper attachment. See **Figure 1A**. Make sure grooves on all parts are aligned. Tighten, but do Not over tighten or strip out **H1** Bolts.

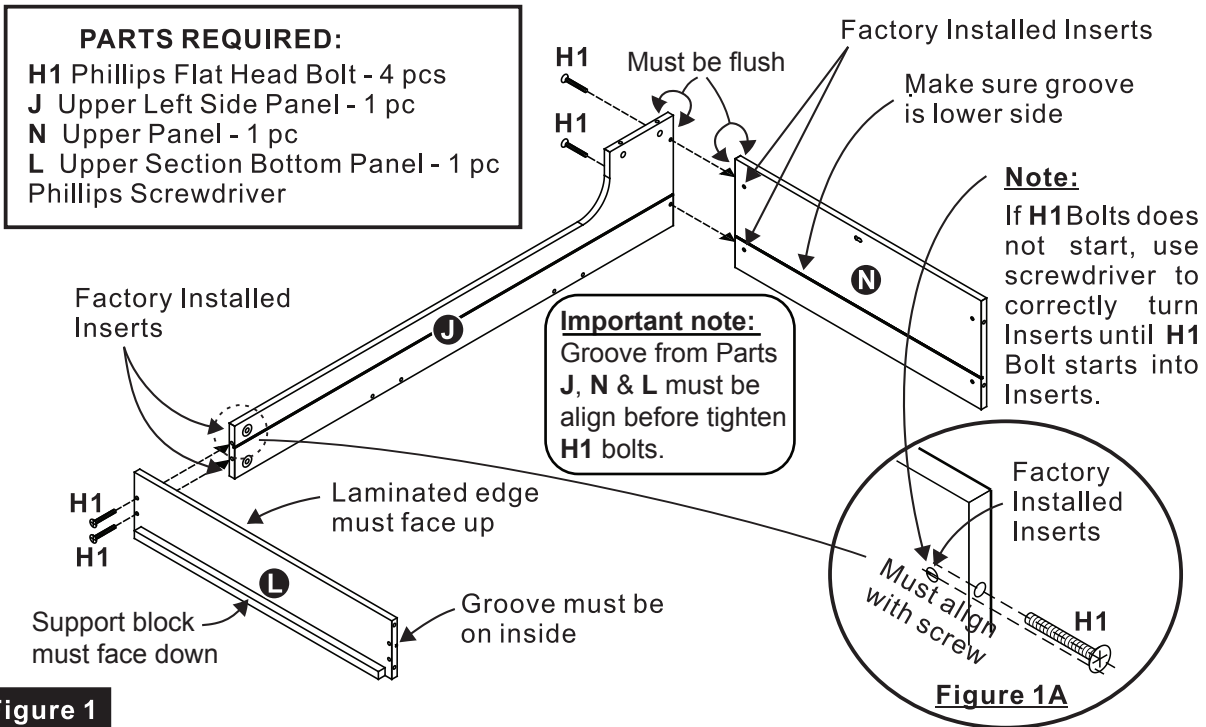

 
2. Screw Allen Head Bolts (**H5**) into Factory Installed Inserts on Parts **M**. Finger tighten Only.
3. Attach Parts **M** to Part **J** using Phillips Head Bolts (**H1**) and Wood Dowel Pins (**H4**). See **Figure 2**. Tighten, but do Not over tighten or strip out **H1** Bolts.

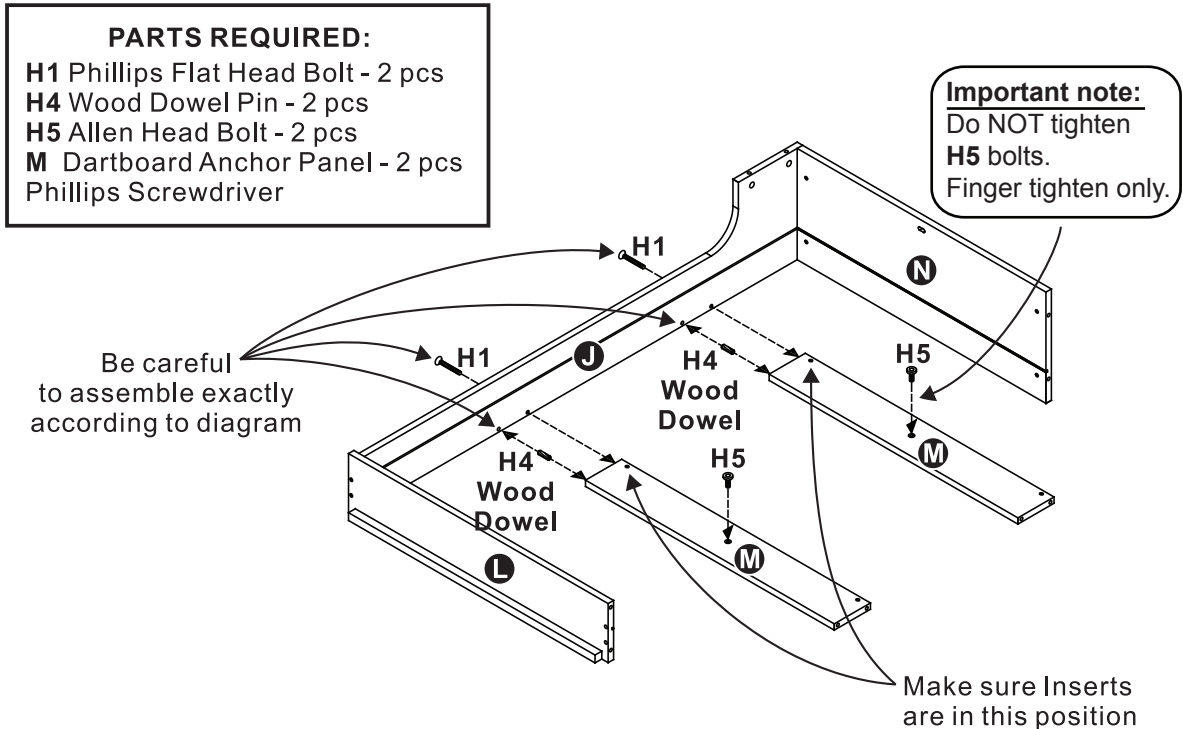

4. **Important Note: This step requires help from another adult.**
Hang **Dartboard (Q)** on Parts **M**.
5. **Important Note: This step requires help from another adult.**
Slide Part **R** into grooves on Parts **N**, **L** and **J** and over **Dartboard** until board shows through cut out piece.

PARTS REQUIRED:

 
Q Dartboard - 1 pc
R Front Baffle Panel - 1 pc

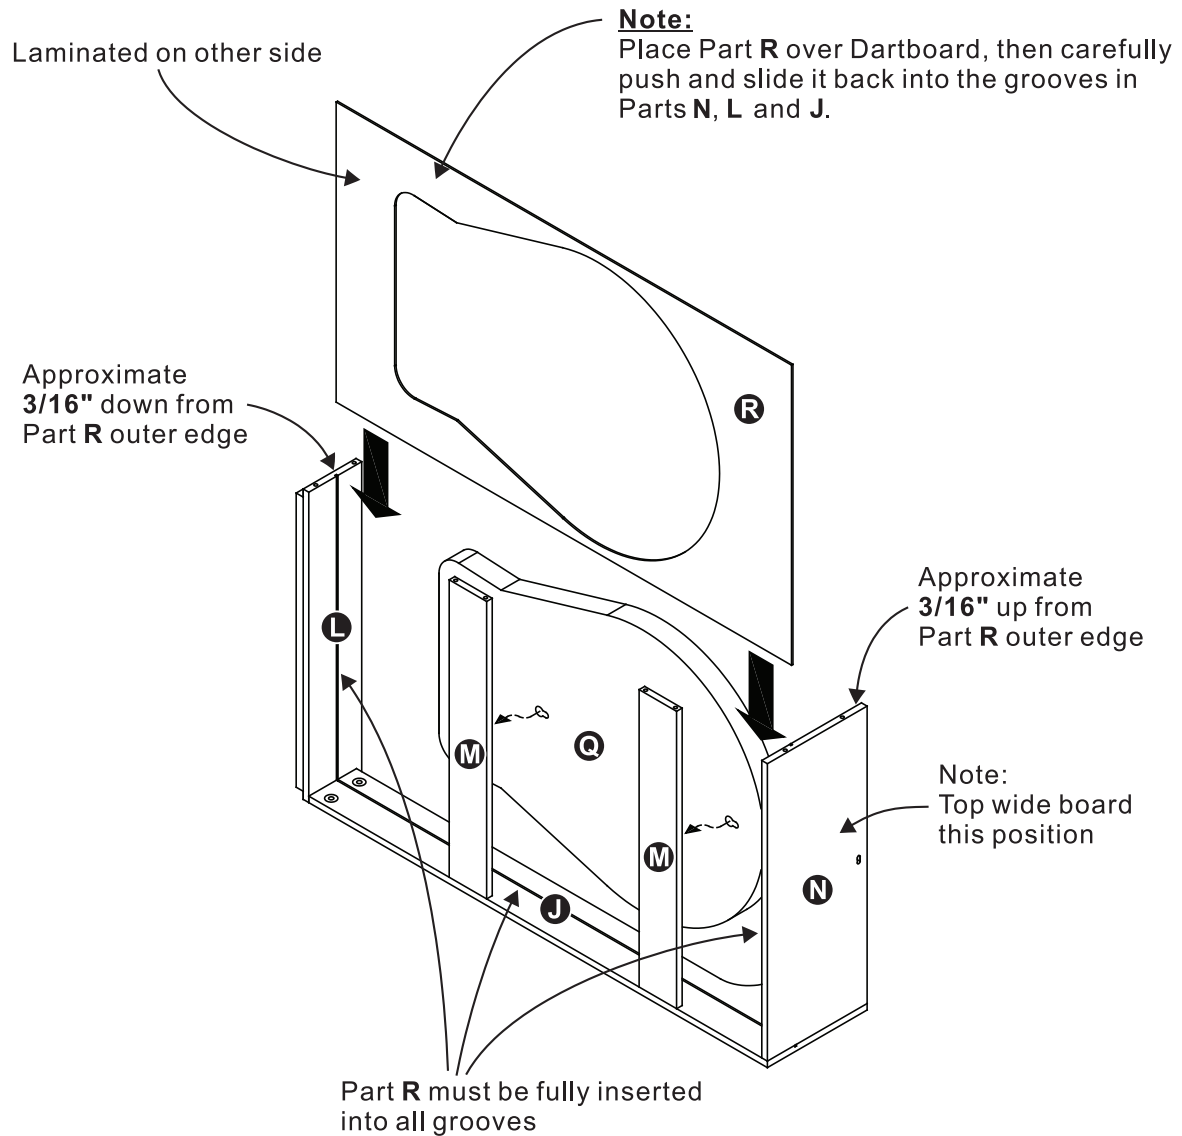


Important note:
Groove from Parts **J**, **N** & **L** must be align before slide Part **R** into groove.

Figure 3

 6. Attach Part **K** to partially assembled Upper Cabinet using Phillips Flat Head Bolts (**H1**) and Wood Dowel Pins (**H4**). See **Figure 4**. Tighten, but do Not over tighten or strip out **H1** Bolts.

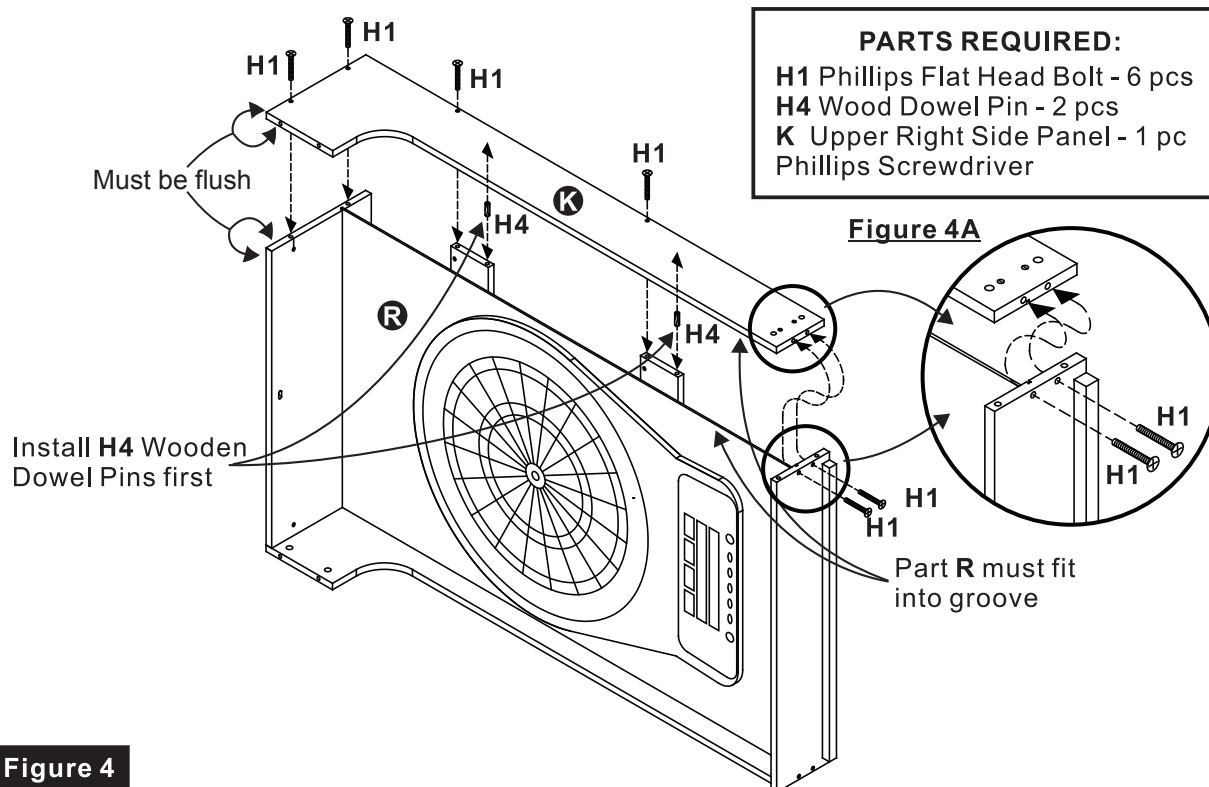

 7. Screw 4 pcs Panel Bolts (**H2**) into Factory Installed Inserts on Part **P**. Tighten, but do NOT over tighten or strip out **H2** Bolts.
8. Insert 4 pcs Panel Bolt Locks (**H3**) into holes on Parts **J** and **K**. Make sure the opening on the Panel Bolt Locks (**H3**) points upward. See **Figure 5A**
9. Attach Part **P** to Parts **J** and **K**. Tighten Panel Bolt Locks (**H3**) with a Phillips Screwdriver. See **Figure 5B**.

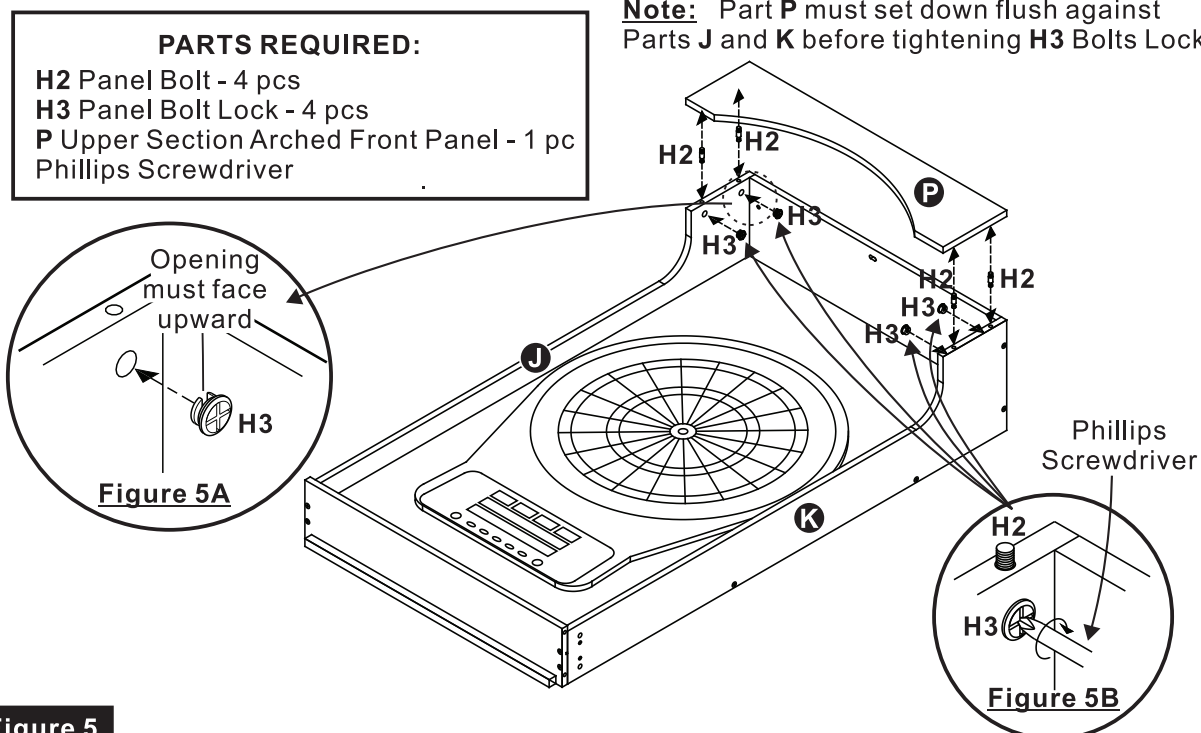

10. Attach Part **S** to back of assembled Upper Cabinet using Phillips Round Head Screw (**H9**). See **Figure 6**. Tighten, but do Not over tighten or strip out **H9** Screws.

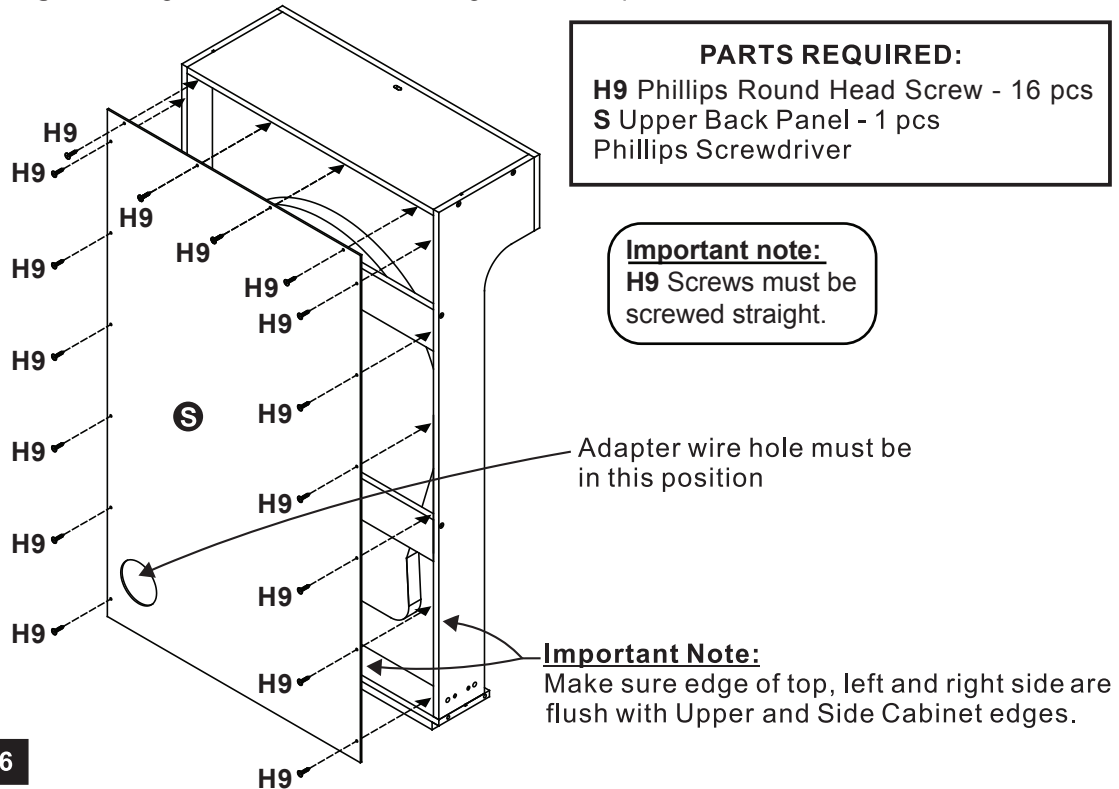 


Figure 6

11. Attach Parts **C** to Part **A** using 4 pcs Phillips Flat Head Bolt (**H1**). See **Figure 7**. Tighten, but do Not over tighten or strip out **H1** Bolts.
12. Insert Wood Dowel Pins (**H4**) into pre-drilled holes on Parts **D**. Attach Parts **D** to Part **A**. See **Figure 7**.

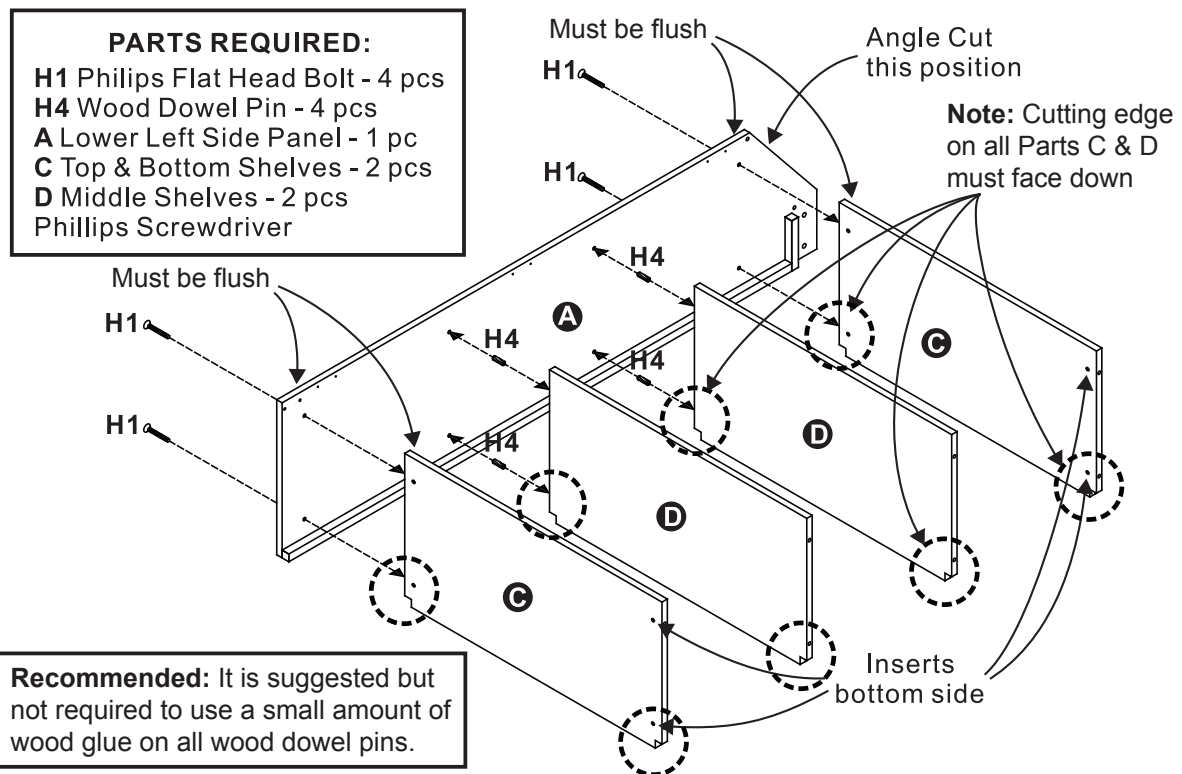 


Figure 7

 
13. Install 4 pcs Wood Dowel Pins (**H4**) into Part **E**. Attach Part **E** to **A**. See **Figure 8**.
14. Install 4 pcs Wood Dowel Pins (**H4**) into 2 pcs Part **D**.
15. Attach Part **B** to partially assembled Lower Cabinet using 4 pcs Phillips Flat Head Bolts (**H1**) to secure it to 2 pcs Part **C**.
Important Note: Do NOT tighten H1 Bolts at this time.
16. Attach Part **T** to Lower Cabinet using 2 pcs Pivot Pins (**H7**).
17. Fully tighten but do Not over tighten or strip out **H1** Bolts.

PARTS REQUIRED:

H1 Phillips Flat Head Bolt - 4 pcs
H4 Wood Dowel Pin - 8 pcs
H7 Pivot Pins - 2 pcs
B Lower Right Side Panel - 1 pc
E Base Cross Panel - 1 pc
T Tilt-Down Door Panel - 1 pc
 Phillips Screwdriver

Important note:

This step requires help from another adult.

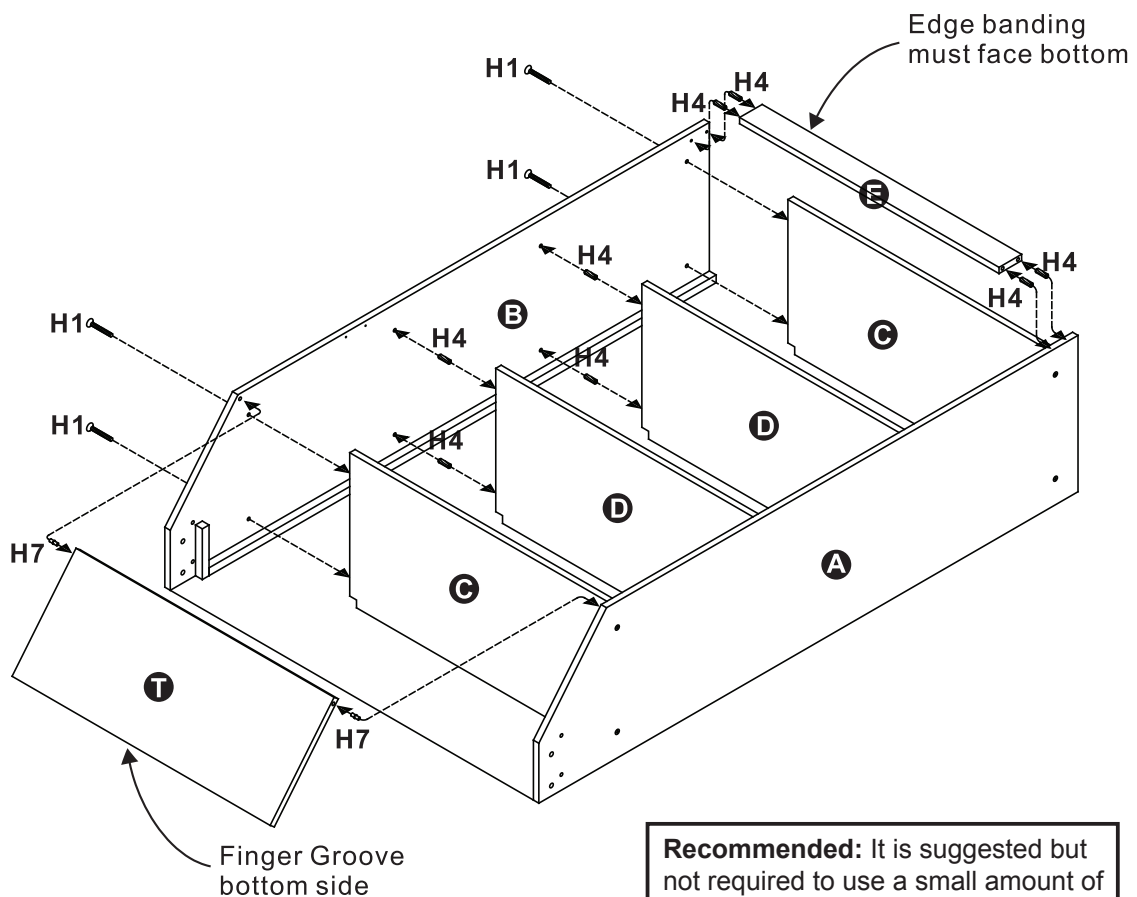

Recommended: It is suggested but not required to use a small amount of wood glue on all wood dowel pins.

Figure 8

18. Attach Door Magnet (**H10**) to Part **B** using Phillips Round Head Screws (**H9**). See **Figure 9**.
19. Attach Door Magnet Attachment (**H11**) to Part **G** using 2 pcs Phillips Flat Head Screw (**H12**).
20. Attach 3 pcs Door Hinges (**H8**) to Part **G** using 6 pcs Phillips Round Head Screws (**H9**) and 3 pcs Phillips Flat Head Screws (**H12**). See **Figure 9A**.
21. **Note: With help from another adult,** attach Part **G** to Part **A** using 6 pcs Phillips Round Head Screws (**H9**) for each hinges. See **Figure 9A**.

Note: Tighten all screws, but do Not over tighten or strip the screws.

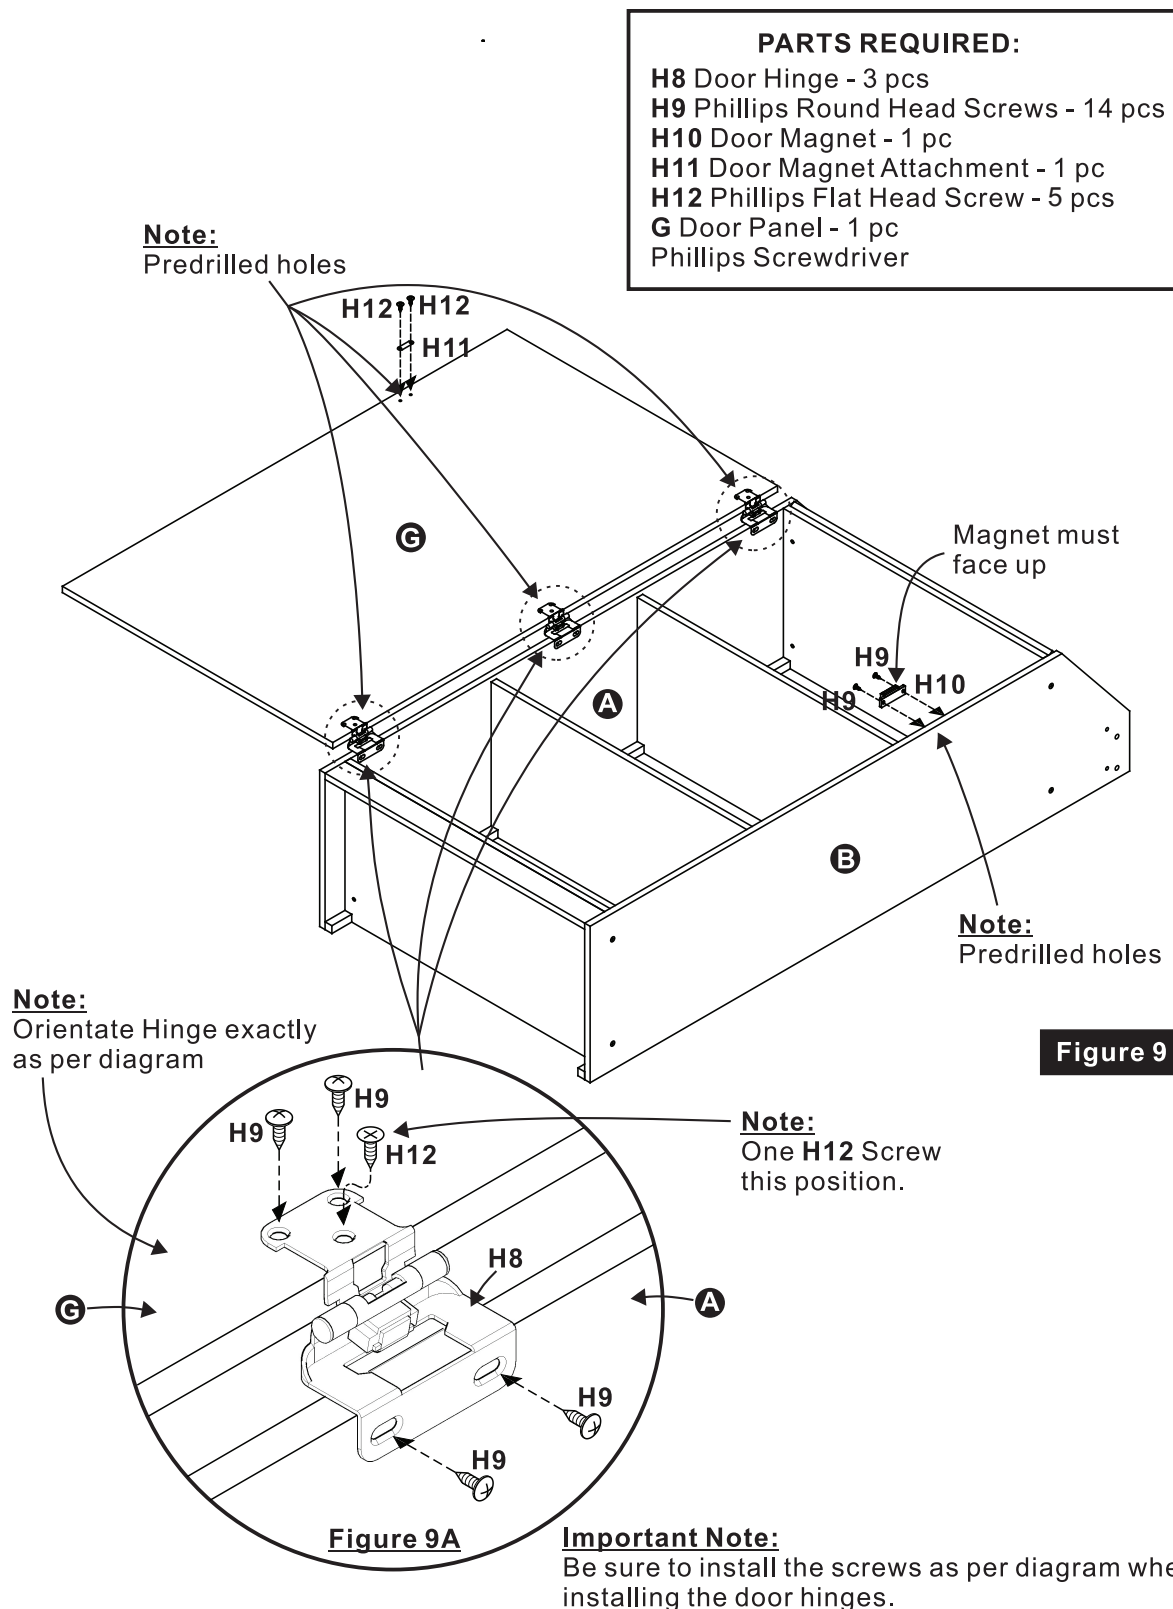 


Figure 9

22. **Note: with help from another adult.**

Attach Upper Cabinet Assembly to Lower Cabinet Assembly using 4 pcs Allen Head Bolts (H13), 4 pcs Flat Washer (H14) and 4 pcs Phillips Flat Head Bolts (H1)
See **Figure 10**. Tighten, but do Not over tighten or strip our H14 & H1 Bolts.

PARTS REQUIRED:

H1 Phillips Flat Head Bolt - 4 pcs
H13 Allen Head Bolt - 4 pcs
H14 - Flat Washer - 4 pcs
Phillips Screwdriver

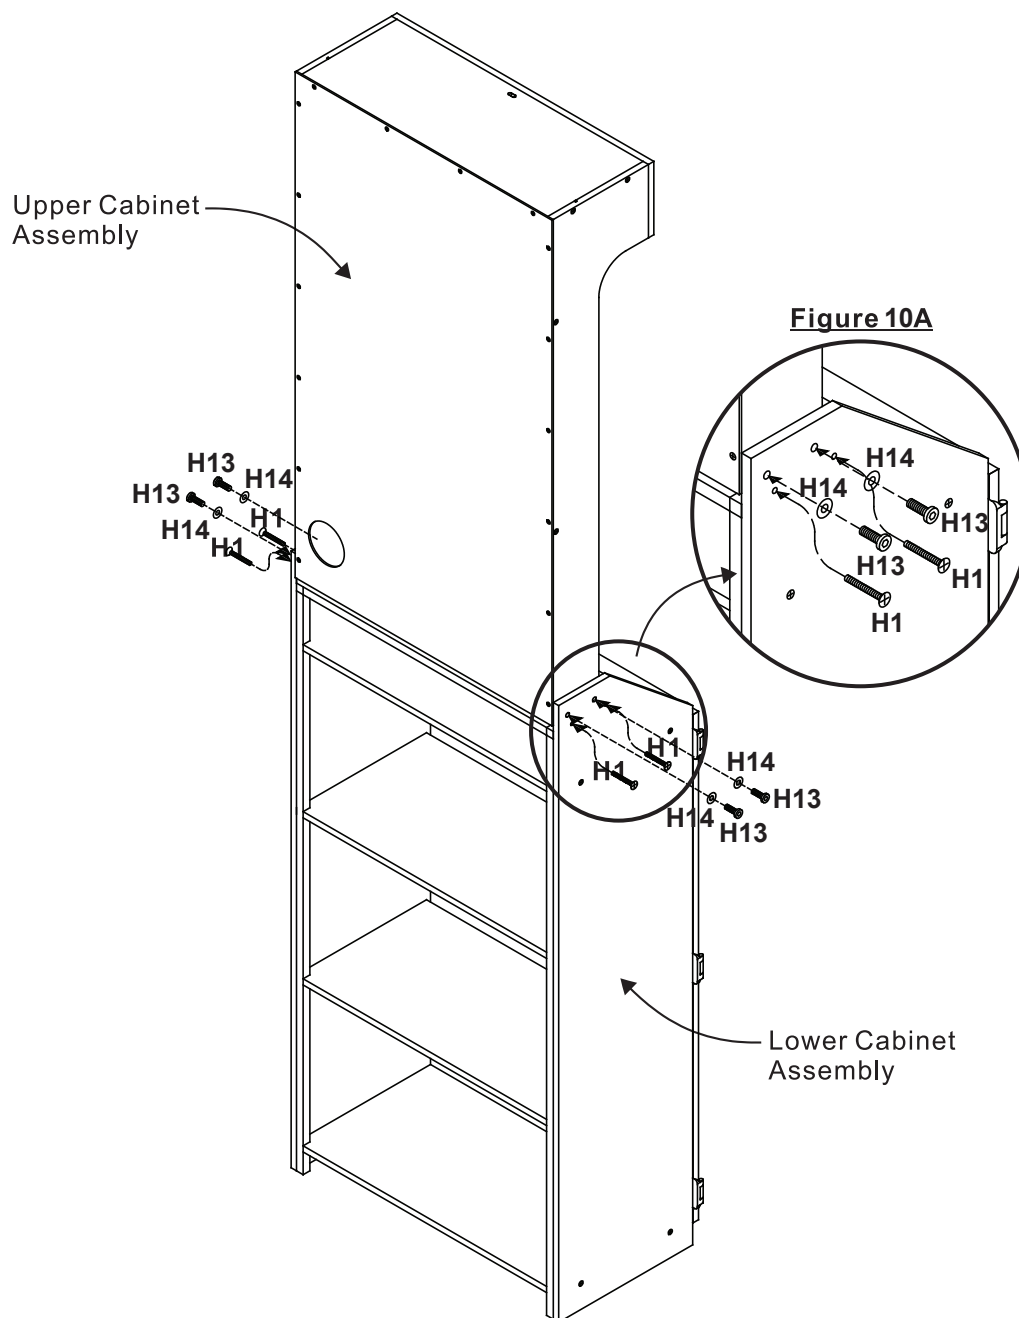 


Figure 10

PRODUCT PART LIST

E800FS1010

Ref	Part#	Description	Qty
A	E800FS1010-A	Lower Left Side Panel	1
B	E800FS1010-B	Lower Right Side Panel	1
C	E800FS1010-C	Top & Bottom Shelves	2
D	E800FS1010-D	Middle Shelves	2
E	E800FS1010-E	Base Cross Panel	1
F	E800FS1010-F	Lower Back Cover	1
G	E800FS1010-G	Door Panel	1
J	E800FS1010-J	Upper Left Side Panel	1
K	E800FS1010-K	Upper Right Side Panel	1
L	E800FS1010-L	Upper Section Bottom Panel	1
M	E800FS1010-M	Dartboard Anchor Panel	2
N	E800FS1010-N	Upper Panel	1
P	E800FS1010-P	Upper Section Arched Front Panel	1
Q	E800FS1010-Q	Dartboard	1
R	E800FS1010-R	Front Baffle Panel	1
S	E800FS1010-S	Upper Back Cover	1
T	E800FS1010-T	Tilt-Down Door Panel	1
H1	E650FSBK-H1	40 x 5mm – Phillips Flat Head Bolt	24
H2	E650FSBK-H2	25 x 6mm – Panel Bolt	4
H3	E650FSBK-H3	Panel Bolt Lock	4
H4	E650FSBK-H4	20 x 6mm – Wood Dowel Pin	16
H5	E650FSBK-H5	18 x 6mm – Allen Head Bolt	2
H7	E650FSBK-H7	16 x 5mm – Pivot Pin	2
H8	E650FSBK-H8	Door Hinge	3
H9	E650FSBK-H9	12 x 3.5mm – Phillips Round Head Screw	56
H10	E650FSBK-H10	Door Magnet	1
H11	E650FSBK-H11	Door Magnet Attachment	1
H12	E650FSBK-H12	10 x 3.5mm – Phillips Flat Head Screw	5
H13	E650FSBK-H13	25 x 8mm – Allen Head Bolt	4
H14	E650FSBK-H14	8 x 19mm – Flat Washer	4
H15	E650FSBK-H15	Allen Wrench	1

LIMITED WARRANTY

Escalade®Sports (the Company) warrants the Product to be free from defects in workmanship and materials under normal use and conditions **FOR A PERIOD OF 90 DAYS FROM THE DATE OF ORIGINAL PURCHASE** in the United States and Canada.

Product Registration Card

The Product Registration Card must be filled out completely and mailed to the Company at the address printed on the card within 10 days from the date of your purchase of the Product.

What Is Covered

Except as provided below, this Limited Warranty covers all defects in materials and workmanship. This Limited Warranty is void if the Product is:

- Damaged through improper usage, negligence, misuse, abuse, transportation damage, acts of nature, or accident (including failure to follow the instructions supplied with the Product)
- Used in commercial applications or rentals
- Modified or repaired by anyone not authorized by the Company

What Is Not Covered

This Limited Warranty does not cover:

- Any expendable items such as batteries, light bulbs, fuses, accessories, cosmetic parts, tools and other items that wear out.
- due to normal usage. Any costs you may incur for delivery, installation, assembly or transport of your product.

What The Company Will Pay For

If during the Limited Warranty period, any part or component of the Product is found by the Company to be defective, the Company will, at its option, repair the Product, replace the Product with a new Product (either the same or an equivalent model) or cause the original retailer of the Product to exchange the Product with a new Product (either the same or an equivalent model) or refund the original purchase price of the Product, without charge for labor or parts. The Company's obligation to repair, replace or exchange the Product, however, shall be limited to the amount of the original purchase price of the Product.

How To Obtain Warranty Service

In order to enforce your rights under this Limited Warranty, you must follow these procedures:

- You must have completed and mailed the Product Registration Card to the Company within 10 days of purchase of the Product.
- You must include THE ORIGINAL COPY OF YOUR SALES RECEIPT.
- You must call the Company's Consumer Service Department at 1-800-526-0451 from 9:00 A.M. to 5:00 P.M. (EST) to notify the Company of the nature of the problem.
- If you are instructed to return the Product to the Company for servicing, you are responsible for shipping the Product, at your expense, to the address designated by the Company in packaging that will protect against further damage.
- You must also include your name, address, daytime telephone number, model number of the Product and a description of the problem.

THIS LIMITED WARRANTY IS AVAILABLE ONLY TO THE ORIGINAL PURCHASER OF THE PRODUCT AND IS VALID IN THE UNITED STATES AND CANADA ONLY.

 
THE COMPANY'S LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY **DEFECTIVE PRODUCT AND SHALL NOT INCLUDE ANY LIABILITY FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.**

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR DO NOT ALLOW FOR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. TO THAT EXTENT, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This Limited Warranty gives you specific legal rights, but you may also have other rights that vary from state to state. If you have questions regarding this Limited Warranty or the operation of the Product, you may call or write us:

**Consumer Service Department
817 Maxwell Ave.
Evansville, IN 47711
1-800-526-0451
www.escaladesports.com**



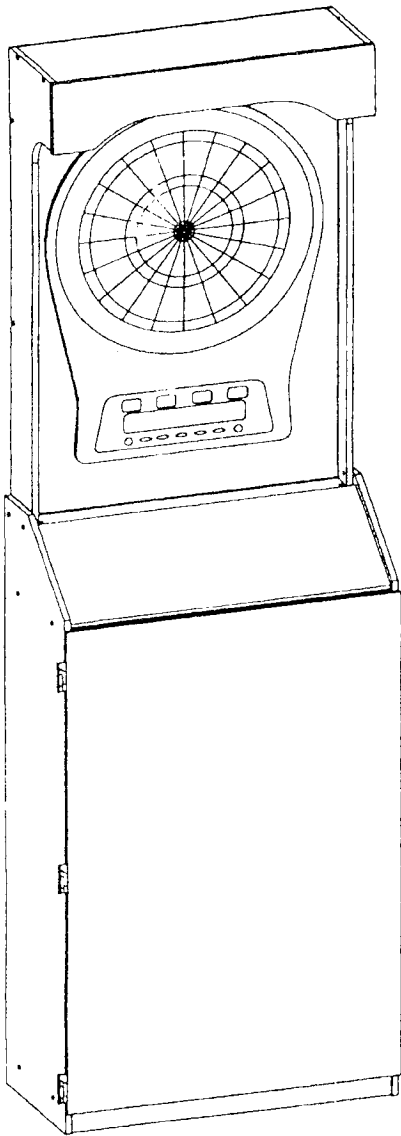

MODEL: E800FS1010

Do not return this game to the store where purchased as they are not authorized to handle returns or repairs.

For parts or warranty issues, please call
1-800-423-3220

or visit our website at www.dmisports.com

For all warranty issues, you must have your store receipt for proof of purchase.

OWNER'S MANUAL

Important Notes

- Make sure you have all the necessary parts before beginning assembly.
- Perform the assembly steps exactly as listed to avoid errors.
- Refer to diagrams to aid in the assembly process.
- Keep your original receipt and instruction manuals for the cabinet and electronic game for warranty purposes.

Tools Needed

- Screwdriver

 
Preparation

1. Find an open area on the floor to perform the assembly, in close proximity to where you plan to put the finished game.
2. Carefully open the box. Do not use a knife as you may scratch the cabinet.
3. Remove the inner box holding the electronic game and put it to the side until you are ready to assemble it to the cabinet.
4. Take the cabinet and hardware parts out of the box and make sure all of the parts are there


Begin assembly.

PARTS LIST

- A. Lower left side panel
- B. Right side panel
- C. Connector panel
- D. Lower sections shelf
- E. Base cross panel
- F. Lower back cover
- G. Door panel
- J. Upper left side panel
- K. Upper right side panel
- L. Upper section bottom panel
- M. Dart board anchor panel
- N. Upper panel
- P. Upper section arched front panel
- Q. Dart board
- R. Front baffle panel
- S. Upper back cover
- T. Tilt-down door panel

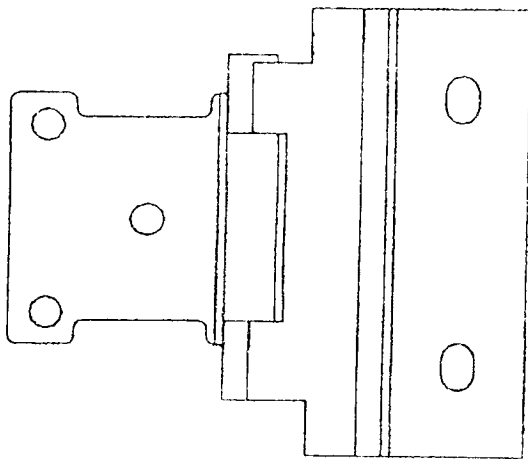

H8. Door Hinge – 3 pcs

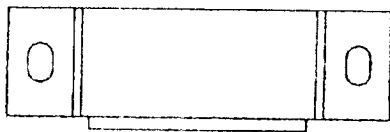 

H10. Door Magnetic – 1pc



H11. Door Magnetic Attachment– 1pc



H4. Wood Dowel Pin– 16 pcs

HARDWARE LIST

- H1. Machine Screw
- H2. Panel bolt M6x25
- H3. Panel bolt lock
- H4. Wood dowel pin
- H5. Allen bolt 1/4"x5/8"L
- H6. Flat head phillips screw 3x15mm
- H7. Steel shaft
- H8. Door hinge
- H9. Door hinge round head screw
- H10. Door magnet
- H11. Door magnet attachment
- H12. Door hinge flat head screw

H1. Machine Screw



H1. Machine Screw – 24 pcs



H5. Allen Bolt 1/4"x5/8" – 2pcs



H6. Flat Head Phillips Screw – 42pcs



H9. Door Hinge Screw – 14pcs



H12. Door Hinge Screw – 4 pcs



H7. Steel Shaft – 2 pcs

 


H2. Panel Bolt – 4 pcs




H3. Panel Bolt Lock – 4 pcs

Complete View Upper Cabinet Assembly (Figure 1.0)

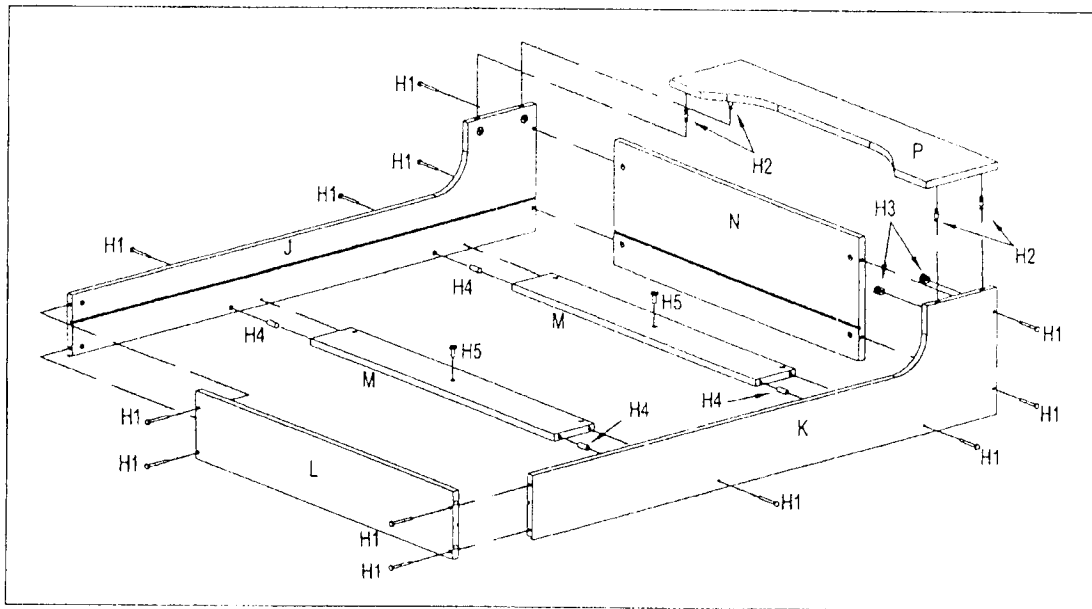


 Complete View Lower Cabinet Assembly (Figure 2.0)

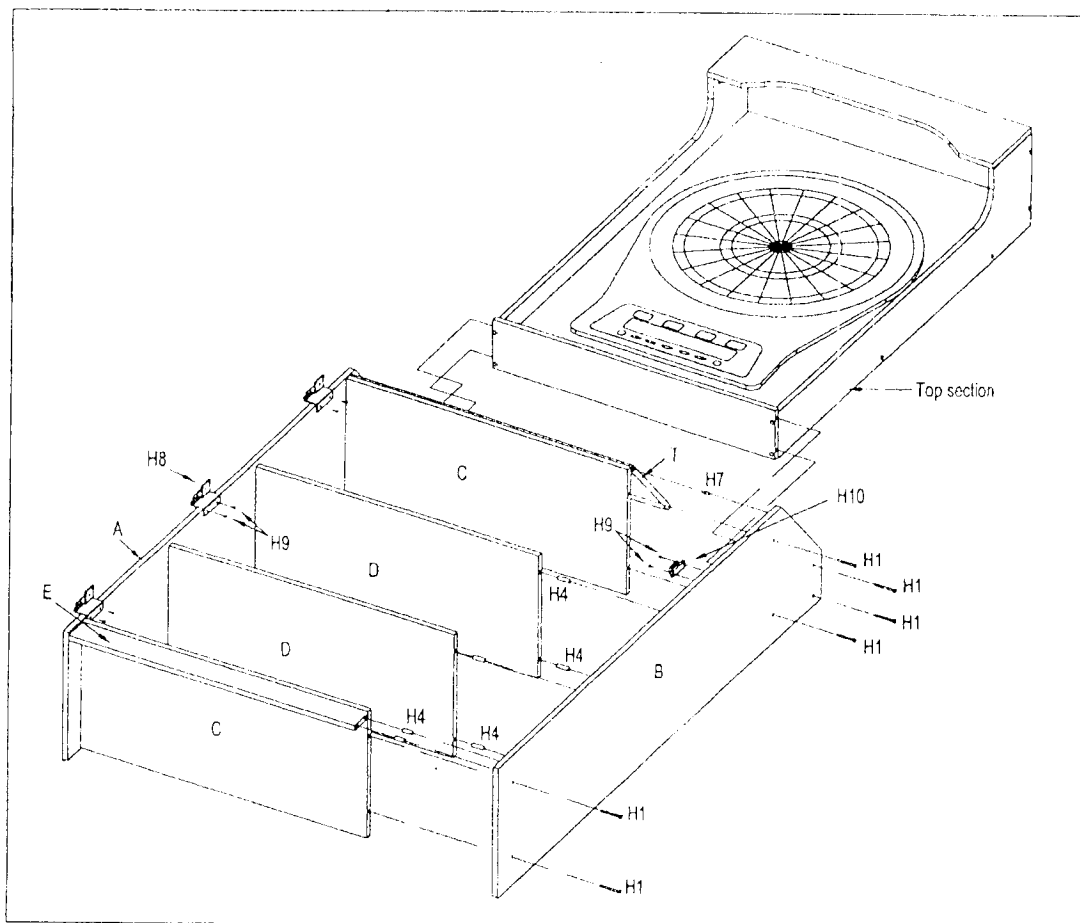


Upper Cabinet Assembly

 
1. Attach Parts N and L to Part J using Machine Screws (H1). See Figure 1.1. Embedded Barrel Nuts on Part N must be aligned to screw holes for proper attachment. See Figure 1.1A. Make sure slots on all parts are aligned.

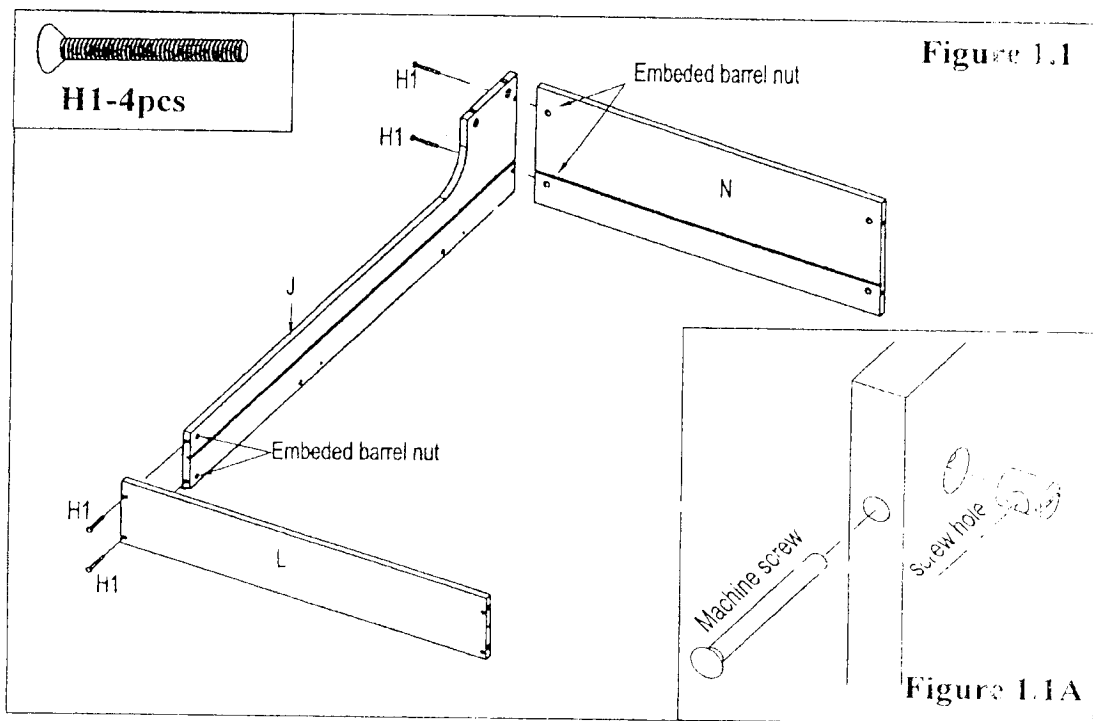

 
2. Screw Allen Bolts (H5) into Embedded nut on Part M.
3. Attach Parts M to Part J using Machine Screws (H1) and Wood Dowel Pins (H4). See Figure 1.2

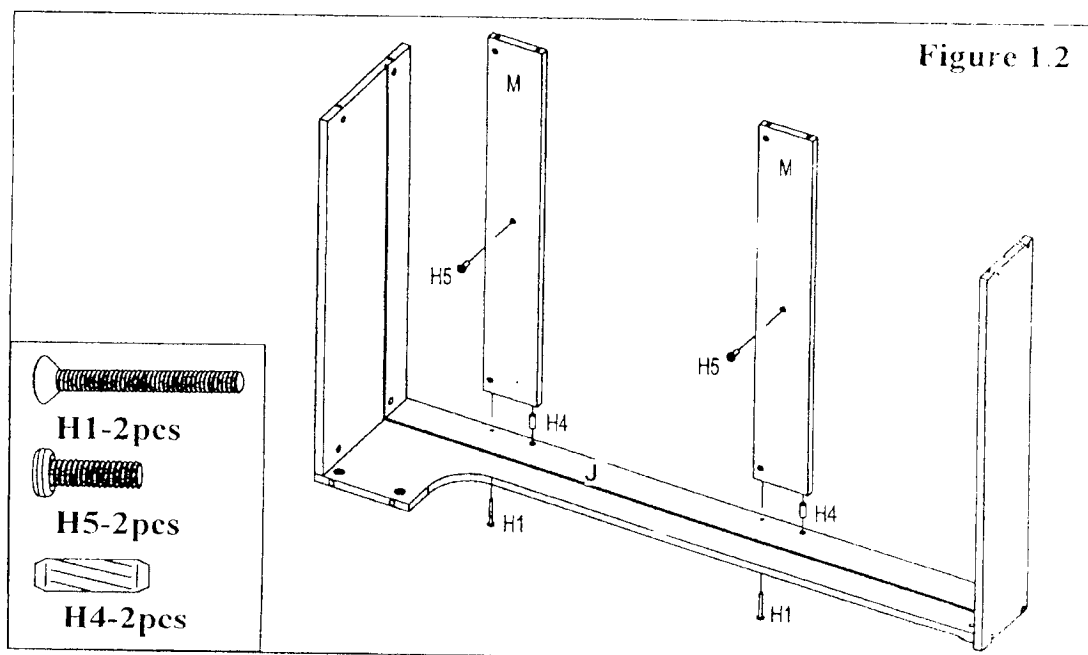

 
4. Hang dartboard on Parts M.

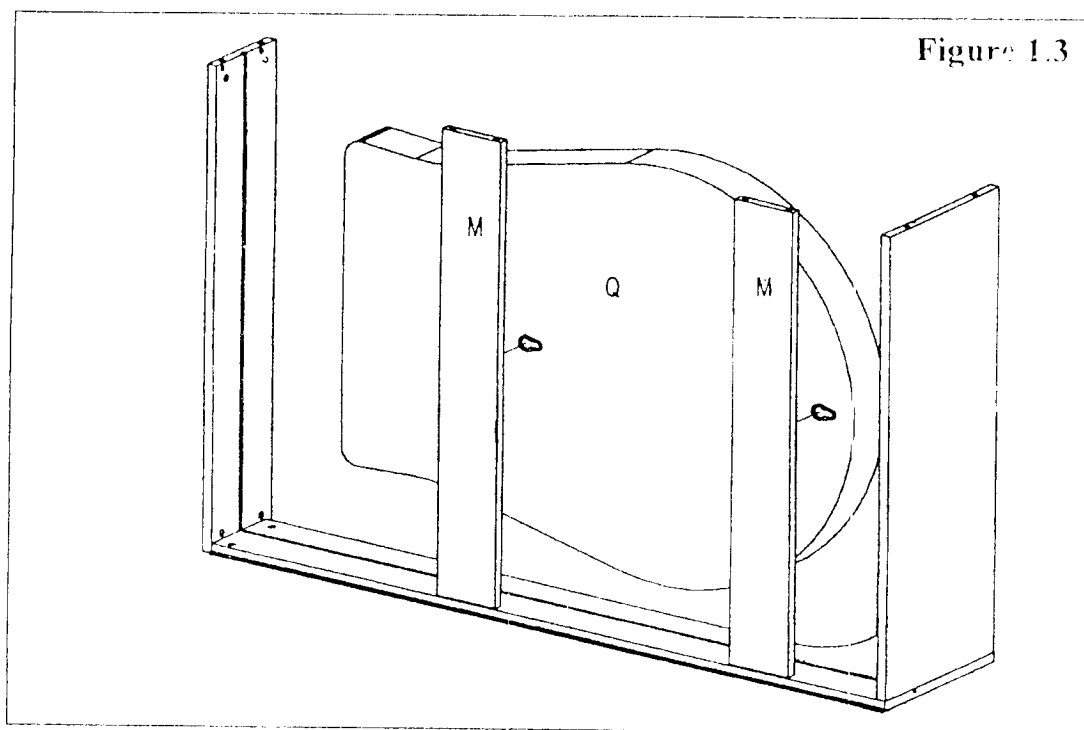

 
5. Slide Part R into slots on Parts N and L and over dartboard until board shows through cut out piece. See Figure 1.4.

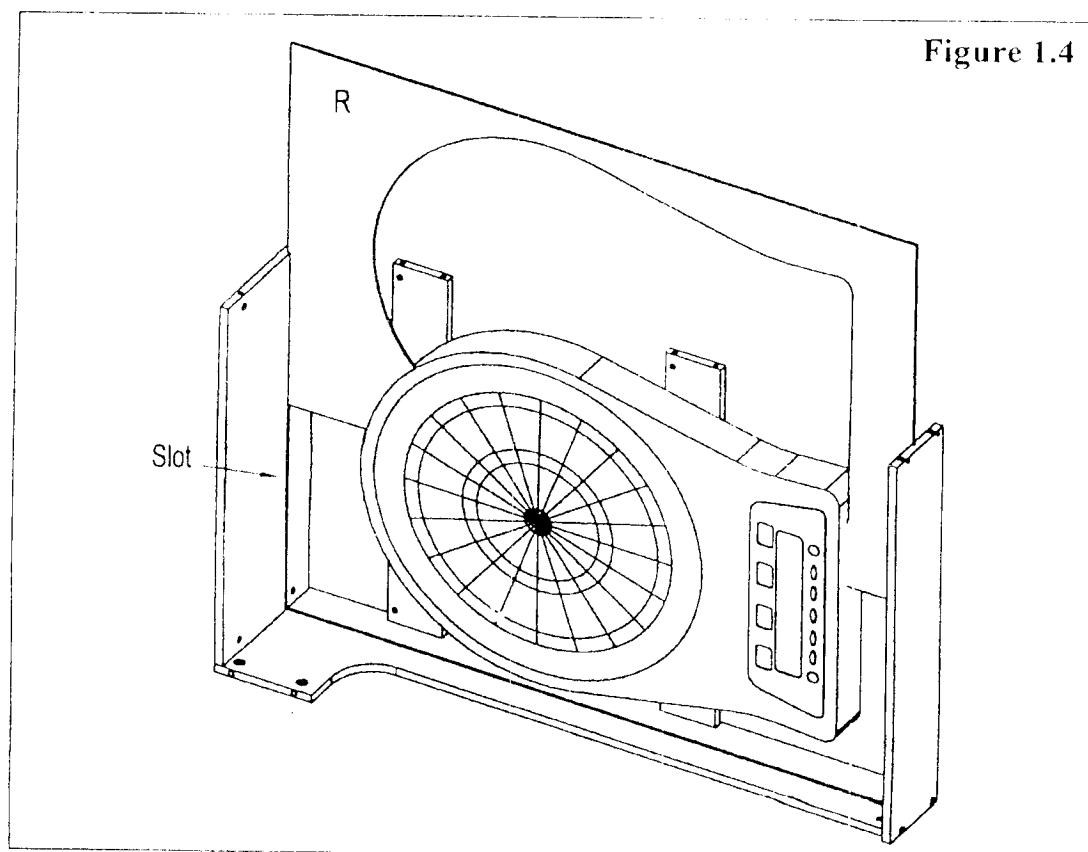

6. Attach Part K to partially assembled Upper Cabinet using Machine Screws (H1) and Wood Dowel Pins (H4). See Figure 1.5.

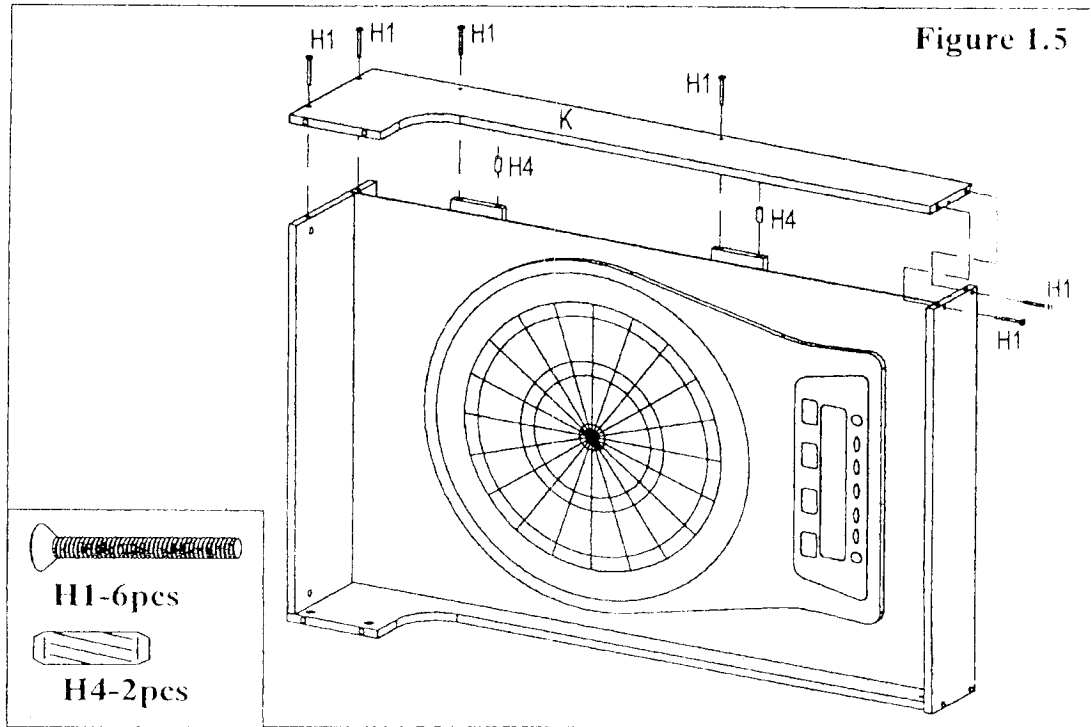 


 7. Screw Panel Bolts (H2) into Embedded Wood nut on Part P.
8. Insert Panel Bolt Locks (H3) into holes on Parts J and K. Make sure the arrow on the Panel Bolt Locks (H3) points toward the Panel Bolt Entry Holes. See Figure 1.6A.
9. Attach Part P to Parts J and K. Tighten Panel Bolt Locks (H3) with a Screw driver. See Figure 1.6.

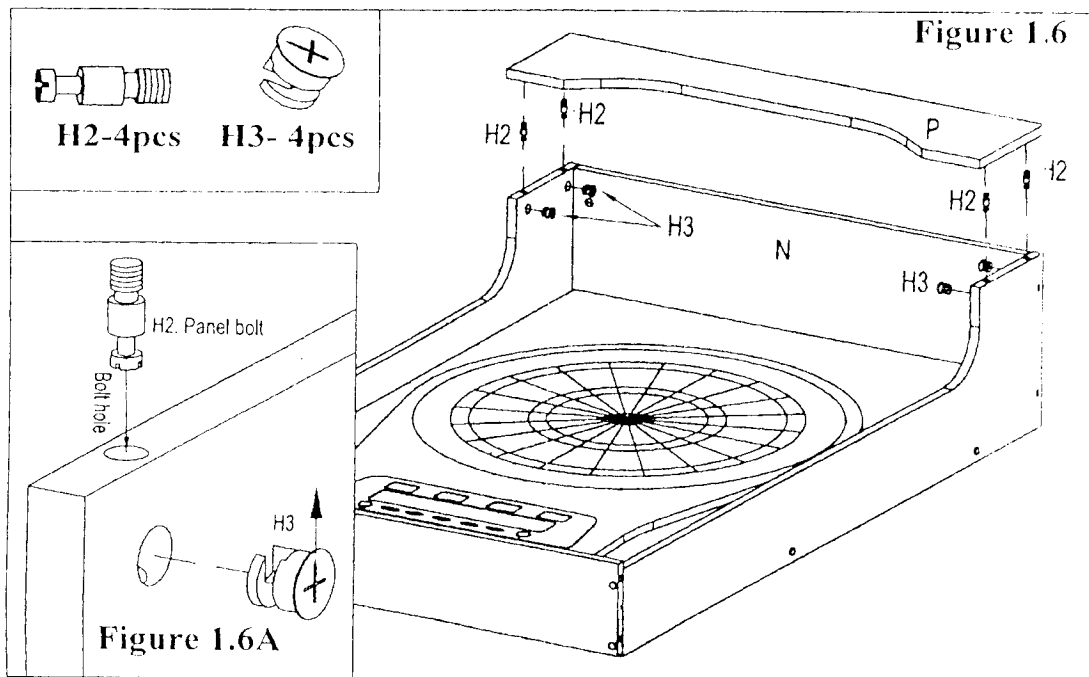


Lower Cabinet Assembly

 
1. Attach Parts C to Part B using Machine Screws (H1). See Figure 2.1.
2. Insert Wood Dowel Pins (H4) into pre-drilled holes on Parts D. Attach Parts D to Part B. See Figure 2.1.

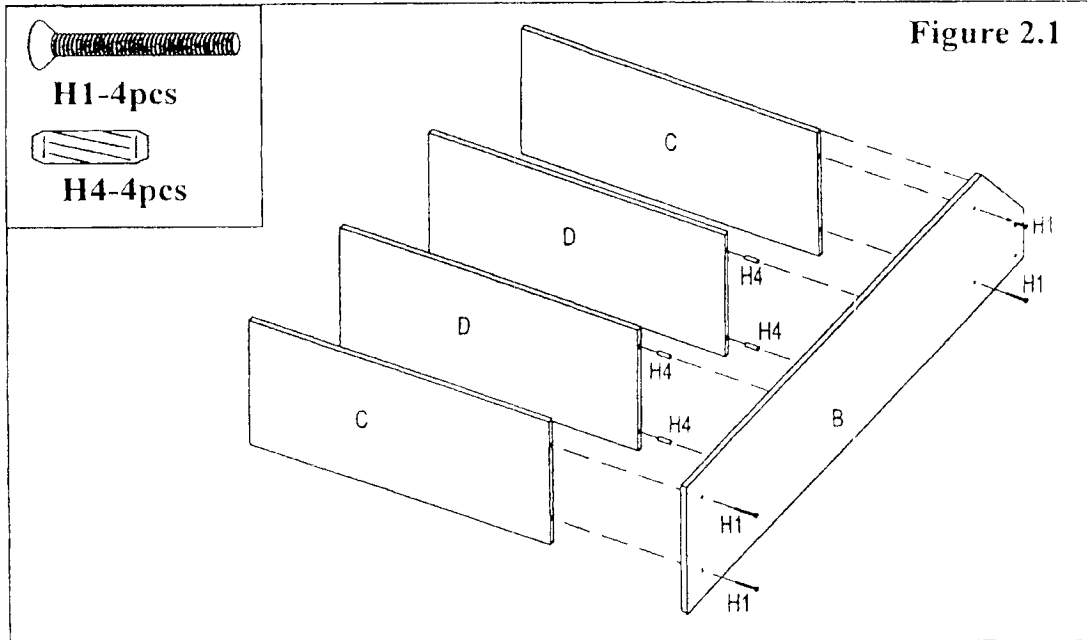

 
3. Insert Wood Dowel Pins (H4) into Part E. Attach Part E to Part B. See Figure 2.2.
4. Attach Part A to partially assembled Lower Cabinet using Machine Screws (H1) to secure it to Parts C. See Figure 2.2. Note: Do NOT fully tighten Machine Screws (H1) until after you have completed step 5
5. Attach Part T to Lower Cabinet using Steel Shafts (H7). See Figure 2.2.
6. Fully tighten all Machine Screws (H1).

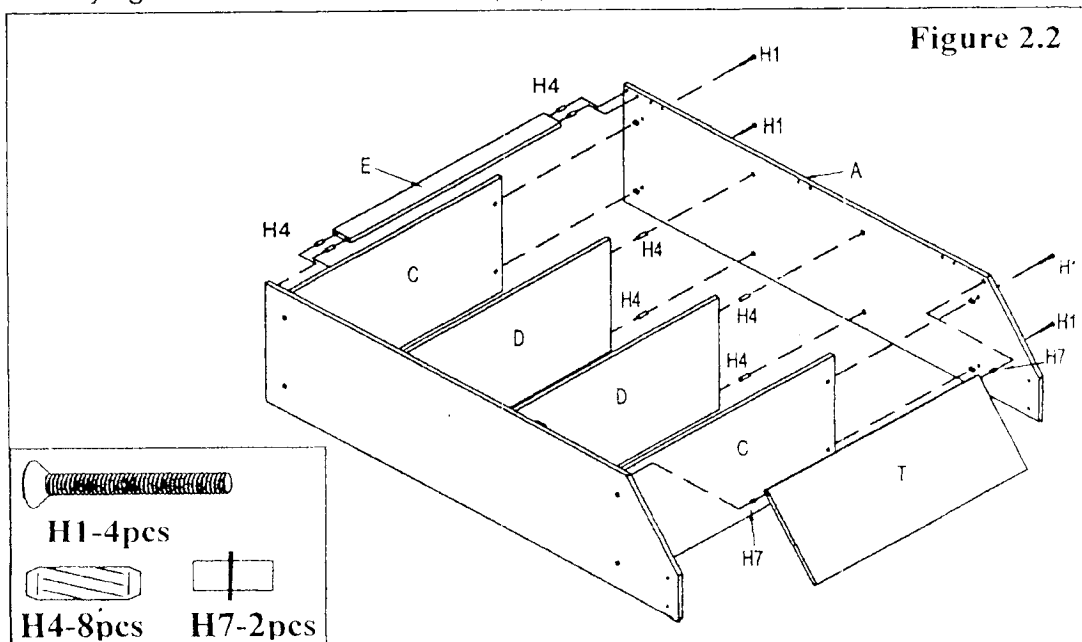


7. Attach Door Magnet (H10) to Part B using Door Hinge Screws (H9). See Figure 2.3.
8. Attach Door Hinges (H8) to Part A using Door Hinge Screws (H9). See Figure 2.3.
9. Attach Door Magnet Attachment (H11) to Part G using 1 Flat Head Screw (H12). See Figure 2.3.
10. Attach Part G to Lower Cabinet using 2 Round Head Screws (H9) and 1 Flat Head Screw (H12) for each hinge. See figure 2.3.

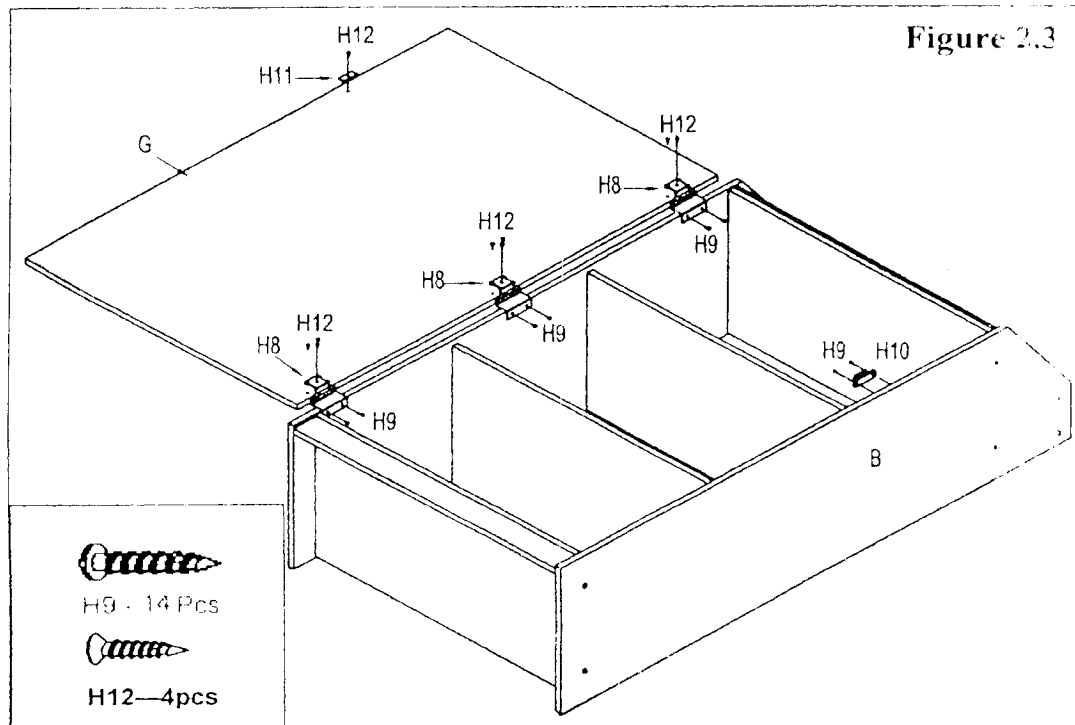 

 
* Be sure to use the screws accordingly when install the door hinge.

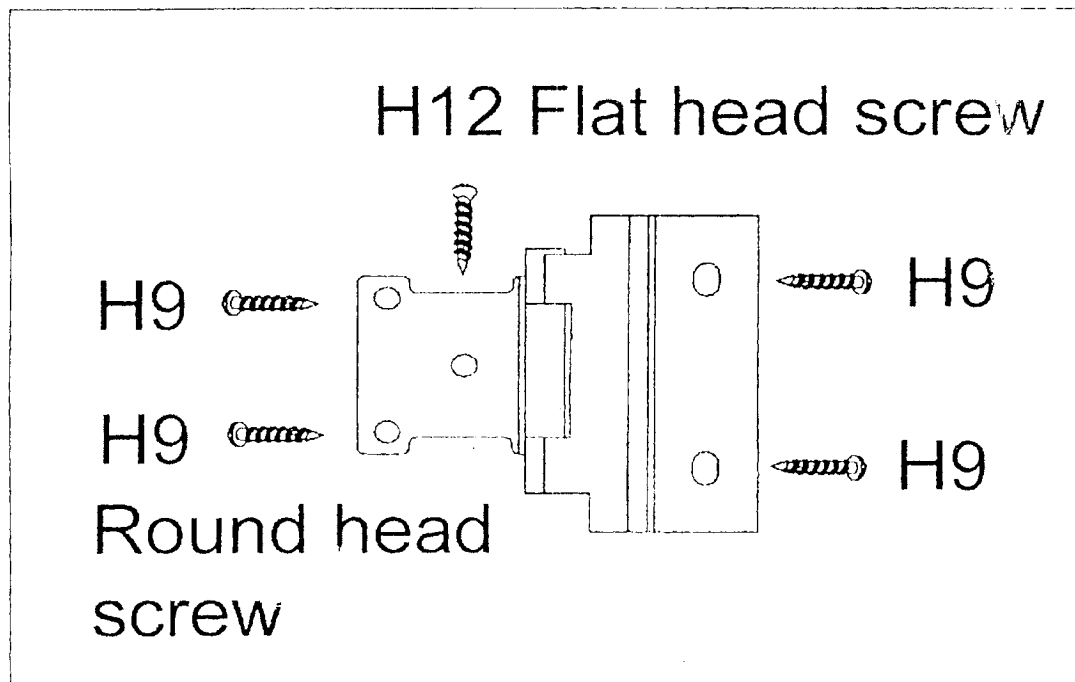

11. Attach Lower Cabinet to Upper Cabinet using Machine Screws (H1). See Figure 2.4.

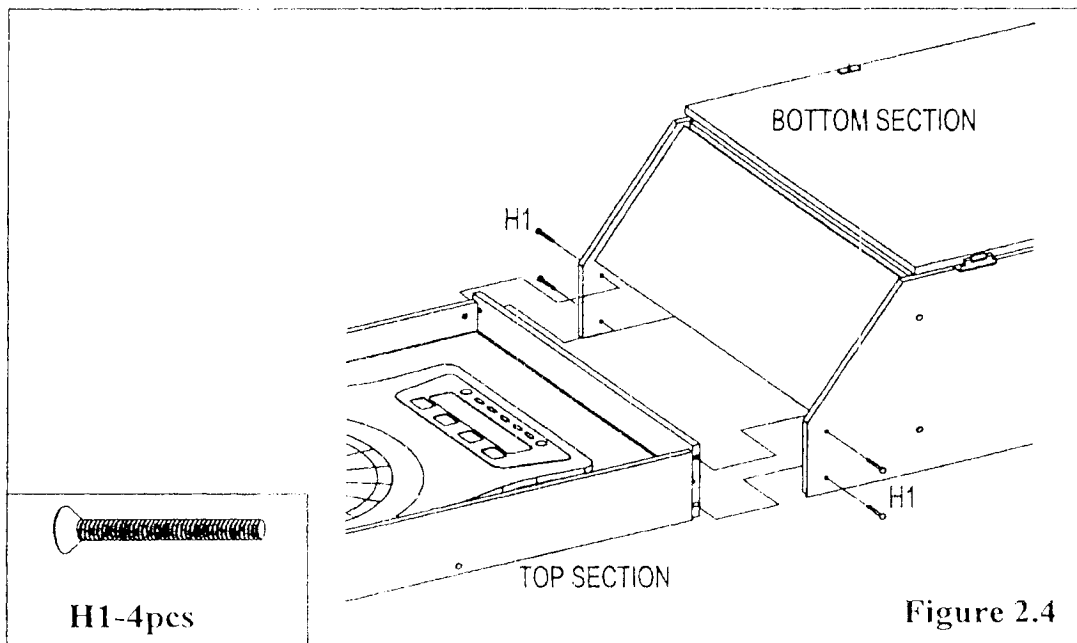 

 12. Plug in the adapter to the back of dart board and pull through opening in part S.
13. Stand up assembled cabinet
Attach Parts S and F to back of assembled cabinet using Flat Head Screws (H6) See Figure 2.5.

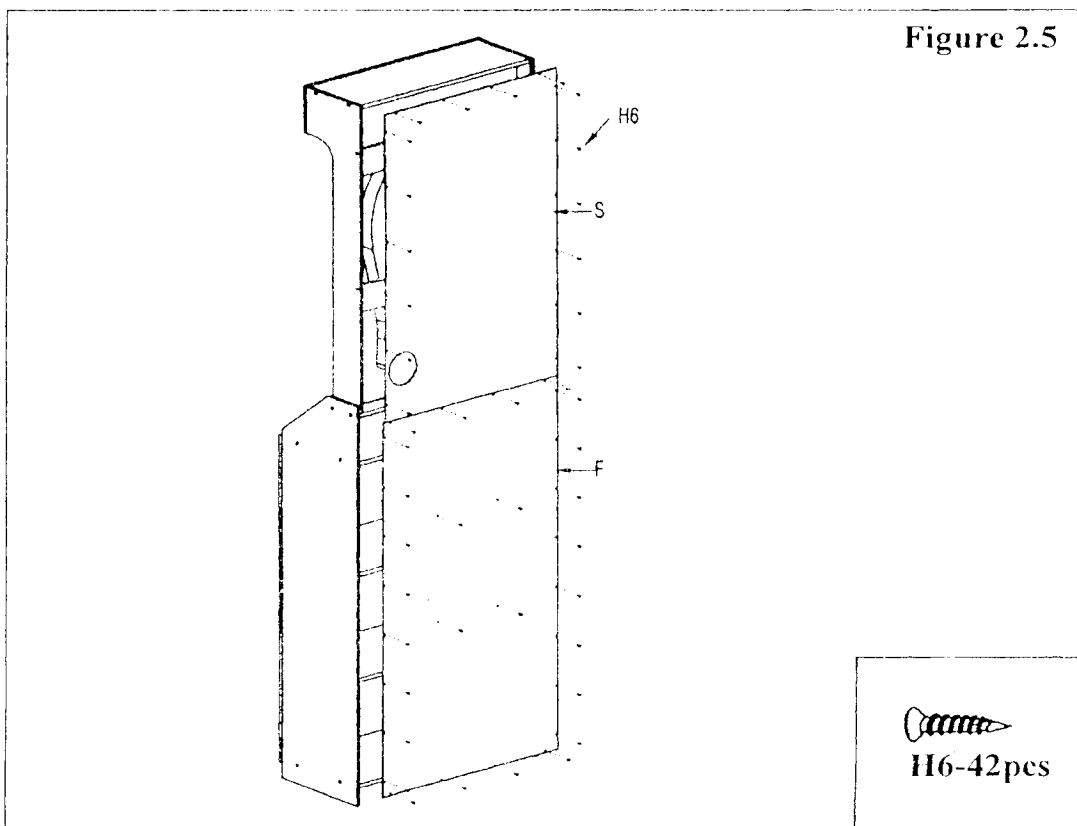

Customer service

We have a commitment to you by providing the very best home entertainment product, backed by our dedicated customer service department and a limited warranty. If you have any questions about the use or operation of your E800FS1010, call our customer service department. Our friendly staff will be available to assist you immediately or, at the very least, have one of our technicians call you back. When ordering parts, please use the model number, part number and description listed on the parts list in the manual.

In the US and Canada, please contact,
DMI Sports, Inc. 1300 Virginia Drive, Suite 401, Fort Washington, PA 19034
Tel: 1-800-423-3220
Email: dmi@dmisports.com

E800FS1010**PARTS RE-ORDER FORM**

Name: _____ Date: _____

REF	QTY	PART#	DESCRIPTION	UNIT PRICE	TOTAL AMOUNT
A		E800FS1010-A	Lower Left Side Panel	\$10.00	
B		E800FS1010-B	Right Side Panel	\$10.00	
C		E800FS1010-C	Connector Panel	\$10.00	
D		E800FS1010-D	Lower Section Shelf	\$10.00	
E		E800FS1010-E	Base Cross Panel	\$10.00	
F		E800FS1010-F	Lower Back Cover	\$10.00	
G		E800FS1010-G	Door Panel	\$20.00	
J		E800FS1010-J	Upper Left Side Panel	\$10.00	
K		E800FS1010-K	Upper Right Side Panel	\$10.00	
L		E800FS1010-L	Upper Section Bottom Panel	\$10.00	
M		E800FS1010-M	Dart Board Anchor Panel	\$10.00	
N		E800FS1010-N	Upper Panel	\$10.00	
P		E800FS1010-P	Upper Section Arched Front Panel	\$10.00	
Q		E800FS1010-Q	Dart Board	\$10.00	
R		E800FS1010-R	Front Baffle Panel	\$10.00	
S		E800FS1010-S	Upper Back Cover	\$10.00	
T		E800FS1010-T	Tilt-down Door Panel	\$10.00	
H1		E650FSBK-H1	Flat Head Machine Screw M5 x 40	\$1.95	
H2		E650FSBK-H2	Panel Bolt M6 x 25	\$1.95	
H3		E650FSBK-H3	Panel Bolt Lock	\$1.95	
H4		E650FSBK-H4	Plastic Dowel Pin	\$1.95	
H5		E650FSBK-H5	Allen Bolt 1/4" x 5/8"L	\$1.95	
H6		E650FSBK-H6	Flat Head Phillips Screw 3 x 15mm	\$1.95	
H7		E650FSBK-H7	Steel Shaft	\$1.95	
H8		E650FSBK-H8	Door Hinge	\$1.95	
H9		E650FSBK-H9	Door Hinge Round Head Screw	\$1.95	
H10		E650FSBK-H10	Door Magnet	\$1.95	
H11		E650FSBK-H11	Door Magnet Attachment	\$1.95	
H12		E650FSBK-H12	Door Hinge Flat Head Screw	\$1.95	
SHIPPING AND HANDLING:			Subtotal:		
Up to \$15.00 add \$2.00 for S&H			PA Residents Add 6% State Sales Tax:		
Over \$15.00 add \$8.00 for S&H			Shipping and Handling Charges:		
Console add \$5.00 for S&H			TOTAL:		

E800FS1010

PARTS RE-ORDER PAYMENT FORM



Method of Payment

Check or money order ☐ Credit Card ☐ VISA ☐ MasterCard ☐ AMEX ☐ Discover ☐

Credit Card Information

Name (as it appears on card)

Billing Address

City **State** **Zip**

Shipping Address (if different)

City **State** **Zip**

Credit Card Type **Expiration Date**

Credit Card Number

Send this form along with your check or money order payable to:

DMI SPORTS Inc. 1300 Virginia Dr • Suite 401 • Fort Washington, PA 19034 • www.dmisports.com



DMI Sports Inc.
1300 Virginia Drive, Suite 401
Fort Washington, PA 19034
Printed in China
082002-V2.0