

# SHARPER IMAGE®

## EASY TO READ DIGITAL CLOCK BY SHARPER IMAGE

Item No. 207279

User Guide




Thank you for purchasing the Easy To Read Digital Clock By Sharper Image. Please take a moment to read this guide and store it for future reference.

### FEATURES


- Twelve alarm settings
- 8" LED screen
- Auto dim options

### HOW TO SET THE EASY TO READ DIGITAL CLOCK UP

- Remove the clock and AC adapter from the packaging
- Peel the screen protector off the display screen
- Plug the input connector of the AC adapter into the DC-in hole on the back of the device
- Plug the clock into an outlet and press the ON/OFF switch or wait 5 seconds and the clock will automatically turn on
- The clock can be used on a desk [includes an adjustable bracket or wall mount]
- **NOTE:** *The clock is pre-set to Eastern Time. It has a small internal battery that maintains time, even when the clock is unplugged or during a power outage. If you receive the clock in another time zone (Pacific, Mountain or Central) you will have to adjust the time by using these instructions.*

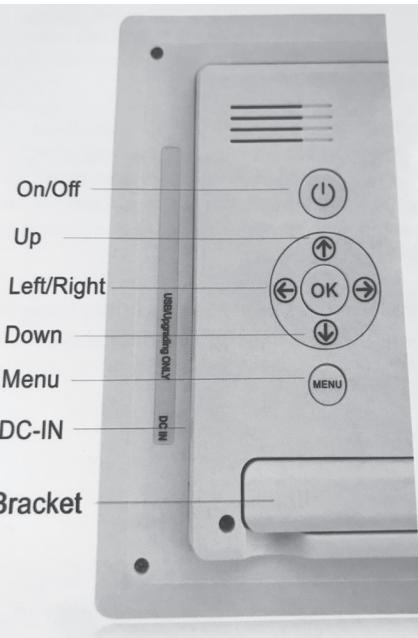

### HOW TO SET THE TIME

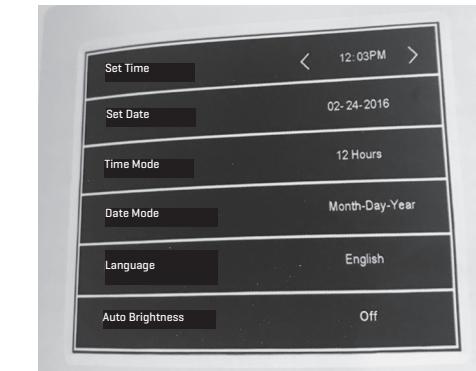

- Press the MENU button to access the settings page. Press the UP/DOWN button to access the 1st line labeled Set Time
- Press OK and then the RIGHT/LEFT button to select the field to be modified
- When the field is underlined with red, use the UP/DOWN button to adjust the number
- After the changes are completed, press the OK button to save the settings
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

### HOW TO SET THE DATE

- Press the MENU button to access the settings page. Press the DOWN button to access the 2nd line labeled Set Date
- Press OK and then the RIGHT/LEFT button to underline the field to be modified
- When the field is underlined with red, use the UP/DOWN button to adjust the number
- After the changes are complete, press the OK button to save the settings
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

### HOW TO USE TIME MODE

- Press the MENU button to access the settings page
- Press the DOWN button to access the 3rd line labeled Time Mode
- Press the RIGHT/LEFT button to switch between 12 hours [A.M./P.M.] or 24 Hours [Military Time]
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## HOW TO USE DATE MODE

- Press the MENU button to access the setting page
- Press the DOWN button to access the 4th line labeled Date Mode
- Press the RIGHT/LEFT button to switch between:
  - Month-Day-Year [Standard U.S. Mode] and Day-Month-Year [Standard European Mode]
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings
- **NOTE:** The clock doesn't change the time automatically for daylight savings time and needs to be adjusted manually.

## HOW TO SELECT LANGUAGES

- Press the MENU button to access the setting page
- Press the DOWN button to access the 5th line labeled Language
- Press the RIGHT/LEFT button to select a language. English, German, French, Italian, Spanish, Polish, Dutch and Welsh are available.
- Press the MENU button to go back to the main display or press the UP/DOWN button to access other settings

## HOW TO USE AUTO BRIGHTNESS

- Press the MENU button to access the setting page
- Press the DOWN button to access the 6th line labelled Auto Brightness
- Press the RIGHT/LEFT button to switch between On or Off
- The brightness will automatically dim at 7 p.m. and resume normal brightness at 7 a.m.

## ALARM STATUS

- Press the OK button to add an Alarm
- Press the OK button to set Alarm 1-12
- Press the MENU button, and then UP/DOWN to select the Alarm Status
- Press the OK button to add an Alarm
- Press the OK button to select Alarm 1
- Press the OK button to select [Set Time/Set Date/Set Repeat/Tag/Start Alarm/Delete Alarm]
- Set Repeat selection: Monday to Sunday
- Tag Selection: Off, Meal, Medicine, Clinic, Shower, Gardening, Cleaning, Appointment, Walk Dog

## VOLUME

- Press the MENU button to access the settings page
- Press the DOWN button to access the 14th line labeled VOLUME
- Press the RIGHT/LEFT button to increase or decrease the alarm volume [1-5]
- After the changes are complete, press the OK button to save the settings
- **Note:** The clock has an auto switch-on function when connected to the power supply. To power the clock off or back on, press and hold the ON/OFF button for a few seconds.

## SPECIFICATIONS

- Dimensions: 8.5" L x 6.8" W x 0.9 lbs.
- LED size: 6.4 x 4.8, 8 inches
- Backlight: LED
- IPS: 4: 3
- Resolution: 1024 x 768
- AC power adapter: Input 100-240V
- AC Output: DC 5V-1A

## WARNINGS

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture
- To prevent fire or shock hazard, do not install this product in a confined space such as a bookcase or similar unit
- Do not remove the cover or backing. No user serviceable parts are inside

## WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.