

 


ONIVA™


a Picnic Time brand

VENTURA SEAT #618-00 INSTRUCTIONS:


TO ERECT: FROM FLAT POSITION, PULL BACKREST FORWARD INTO DESIRED SEATING POSITION.

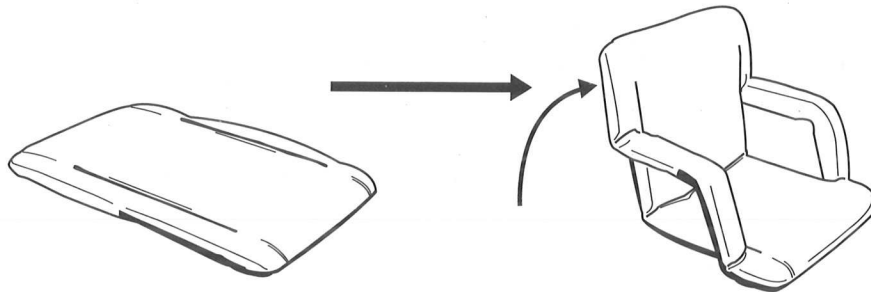

 
TO COLLAPSE: PULL BACKREST FULLY FORWARD, THEN PUSH BACK FLAT.

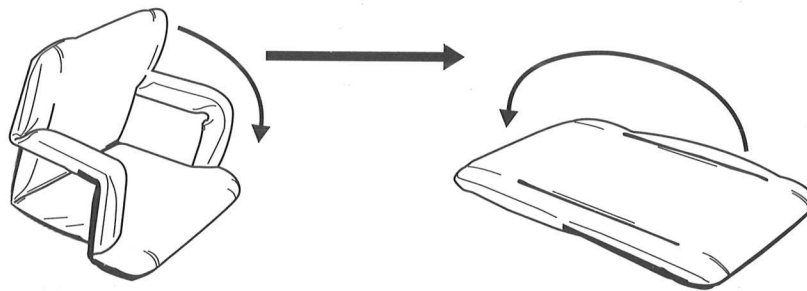

 TO ERECT WITH ARMRESTS: WITH BOTH HANDS ON HINGES, APPLY PRESSURE TO ARMRESTS WITH CHAIR LYING FACE DOWN.

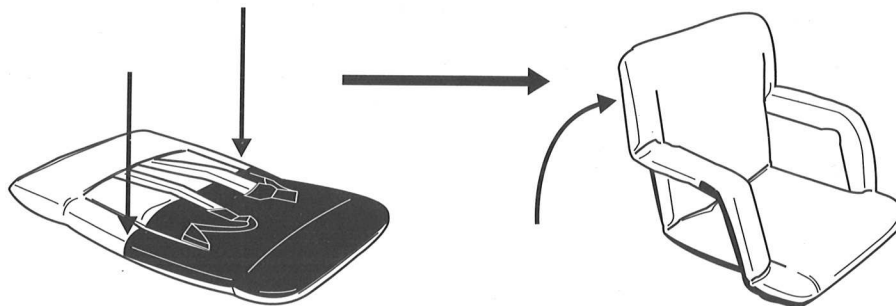

 TO ERECT WITHOUT ARMRESTS: WITH BOTH HANDS ON HINGES, APPLY PRESSURE TO ARMRESTS WITH CHAIR LYING FACE UP.

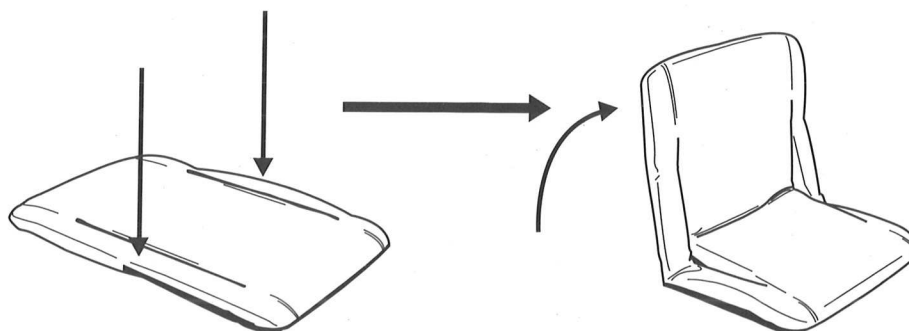




ONIVA™


a Picnic Time brand

CHAISE VENTURA #618-00 NOTICE:

 
POUR ERIGER: DEPUIS LA POSITION A PLAT, TIRER LE DOSSIER VERS L'AVANT
JUSQU'A LA POSITION DESIREE.

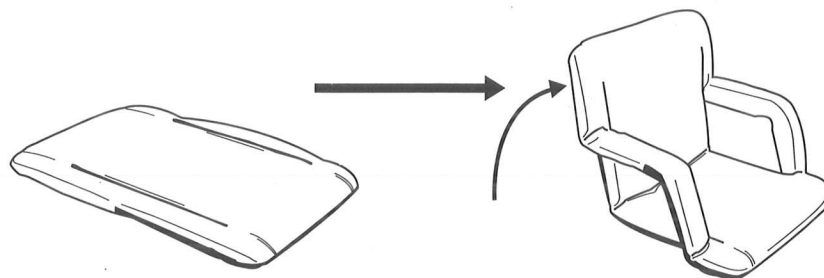

 
POUR REPLIER: TIRER LE DOSSIER COMPLETEMENT VERS L'AVANT,
PUIS APLATIR VERS L'ARRIERE.

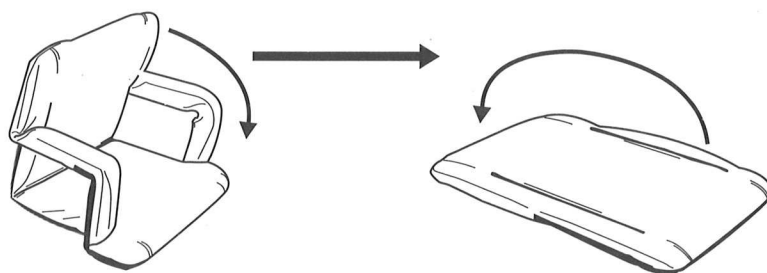

 POUR ERIGER AVEC LES ACCOUDOIRS: AVEC LES DEUX MAINS SUR LES CHARNIERES.
APPLIQUER UNE PRESSION SUR LES ACCOUDOIRS AVEC LA CHAISE FACE CONTRE TERRE.

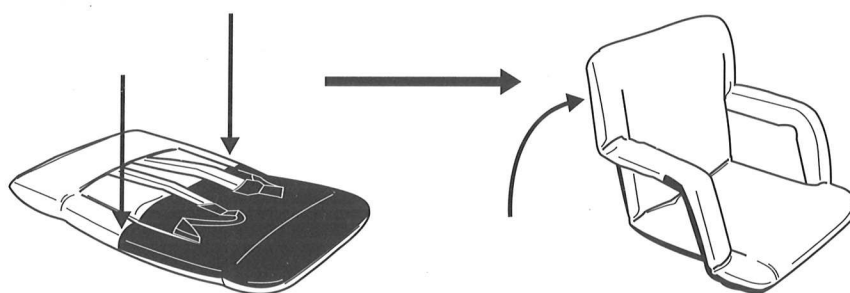

 POUR ERIGER SANS LES ACCOUDOIRS: AVEC LES DEUX MAINS SUR LES CHARNIERES.
APPLIQUER UNE PRESSION SUR LES ACCOUDOIRS AVEC LA CHAISE FACE AU CIEL.

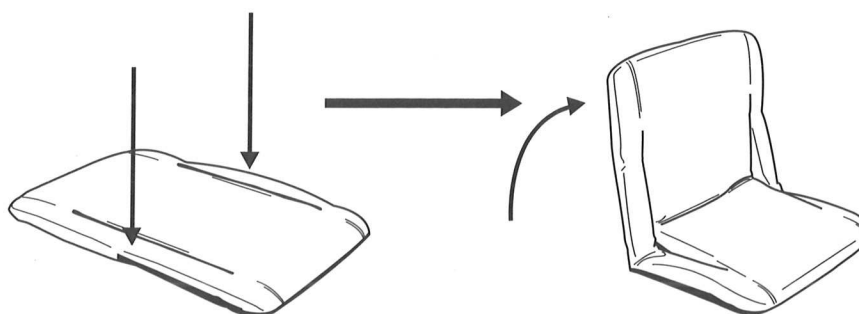




ONIVA™


a Picnic Time brand

ASIENTO VENTURA #618-00 INSTRUCCIONES:

 
PARA ERIGIR: DESDE LA POSICIÓN PLANA, TIRE DE RESPALDO HACIA ADELANTE EN LA POSICIÓN SENTADA DESEADA.

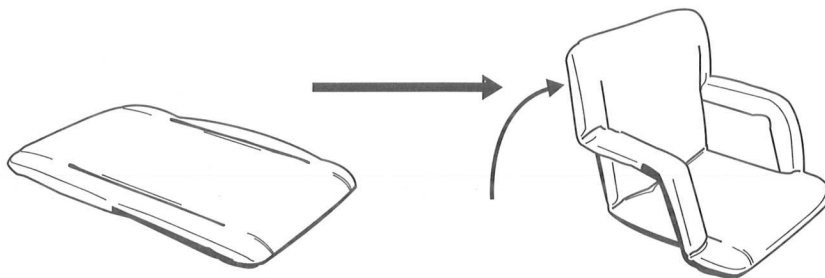

 PARA CONTRAER: TIRE EL RESPALDO COMPLETAMENTE HACIA ADELANTE, LUEGO EMPUJE EL REVERSO PLANO.

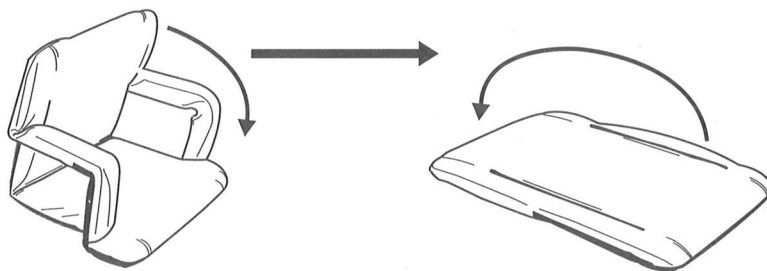

 PARA ERIGIR CON APOYABRAZOS: CON LAS DOS MANOS EN LAS BISAGRAS, APLICAR PRESIÓN A LOS APOYABRAZOS CON LA SILLA BOCA ABAJO.

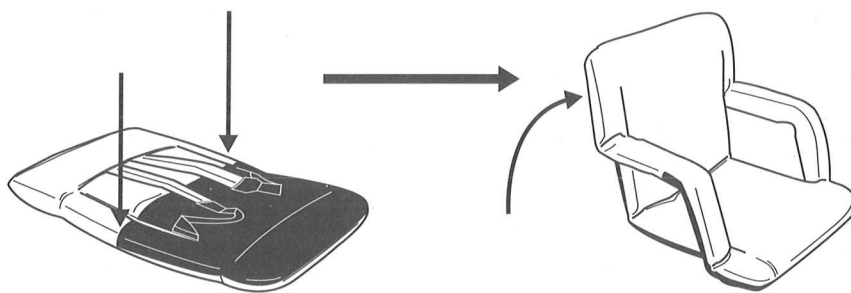

PARA ERIGIR SIN APOYABRAZOS: CON LAS DOS MANOS EN LAS BISAGRAS, APLICAR PRESIÓN A LOS APOYABRAZOS CON LA SILLA BOCA ARRIBA.

