

PL4 FINGERPRINT LOCK













I .USB Interface:

The product is charged by USB. Please fully charge the product at the first time.



Components:

2.Fingerprint Sensor 1.USB Port

3.LED Light


4.Shackle

The indicator has 3 colors. Different color represents different status of the Fingerprint Padlock


Please check the details as below chart:

| Indicator Light | Fingerprint Padlock Status |
|-----------------------------|---------------------------------|
| Red light flashes | Low power |
| Red light on | Recharging |
| Light off | Completely Charged |
| Green light flashes | Collecting fingerprints |
| Green light on | Finish collecting fingerprints |
| Blue light on | Admin fingerprint authorization |
| Green light flashes quickly | Unlock successfully |
| Red light on | Delete fingerprint |
| Red light flashes | Fail to collect fingerprint |
| | |

III . How to Collect The First Administrator's Fingerprint

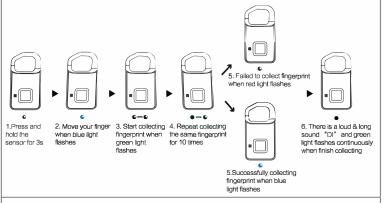

IV. How to Collecting The 2nd to 10th Fingerprints

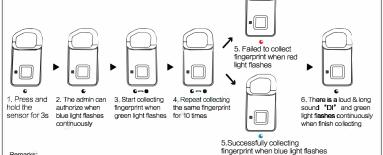

- The first and second fingerprints are the admins by default
 One of the admins fingerprint will be need to authorize when adding fingerprints

V.How to Delete Fingerprints



1. Press and hold the sensor for 6s-10s when the light turns red and move the fingerprint

2. Use one of the admins' fingerp fingerprints to authorize

3. Fingerprints deleted when there is a long sound and green light flashes

VI.Specifications

Support 360 degree angel fingerprint recognize Resolution: 508DPI ESD: +/-12kV air, +/-8kV contact FRR: <1% FAR: <0.002% Recognize time: <300mS Battery: 3.7V 80mAh Charger: 5V 200MA

Remarks;
Only the administrator can delete the fingerprint and delete all the fingerprints at one time

VII.Low voltage

When the voltage ≤3.5V, the red indicator flash fast for 15s. If keep in the status of low batter, it will alarming per minute.