



# USER GUIDE



**THE ELECTRONIC DECANTER THAT EXPLODES  
THE GLORIOUS TASTE OF WINE AND SPIRITS IN MINUTES**

## **TABLE OF CONTENTS**

IMPORTANT SAFETY PRECAUTIONS	2
CLEANING AND MAINTENANCE	4
CORRECT DISPOSAL OF THIS PRODUCT	4
GENERAL BATTERY PRECAUTIONS	4
INCLUDED IN THE BOX	5
MEET YOUR WAKE UP WINE™ PRO	6
BEFORE USING	7
CHARGING THE DECANTING BASE UNIT	8
TOUCH CONTROL PANEL	9
DECANTING PROCEDURE	11
FCC WARNING STATEMENT	13

## **IMPORTANT SAFETY PRECAUTIONS**

When used in the directed manner, this product has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards.

1. Read all instructions before using.
2. Keep the instructions at a safe place for future reference.
3. Keep the product and its power cord out of reach of children under 8 years old.
4. This product can be used by adults aged from 18 years or above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the product in a safe way and understand the hazards involved.
5. Children shall not play with the product.
6. If the micro USB cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Before operating ensure the micro USB cable is in perfect condition.
8. Uncoil the micro USB cable completely.
9. Close supervision is necessary when the device is connected, used by or near children.
10. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable.
11. Unplug from outlet in following situations:
  - a. At the end of each use
  - b. Before cleaning
  - c. In case of interruption or malfunction
12. Only use micro USB cable and accessories recommended or sold by the manufacturer.

13. Always ensure the Power Switch on the back of the decanting base unit has been pressed to "OFF" status before removing the plug from the power outlet.
14. Do not operate any product with a damaged cable or plug, or after the product malfunctions or is dropped or damaged in any manner. Contact WAKE UP WINE™ Customer Support ([support@wakeupwine.com](mailto:support@wakeupwine.com)) to report any malfunction of or damage to the decanting base unit.
15. Place the product on a flat, horizontal, dry and not slippery surface.
16. Do not place the product near the edge of the table or surface during operation.
17. Do not use in moving vehicles or boats. Misuse may cause injury.
18. Do not expose to fire, heat, rain or sun.
19. Do not fill the glass decanter above the "Max" fill line, which is below the WAKE UP WINE™ logo printed on the glass decanter (750 ml).
20. Do not place anything on top of the product.
21. To protect against electric shock, do not immerse the micro USB cable, power plug or decanting base unit in water or any other liquid.
22. This product is designed to decant wine. It can also be used with spirits. The use of other liquids is strictly prohibited.
23. The product should be used under a clean, free of dust, non-corrosive, and non-toxic gas environment.
24. Do not overcharge the battery.
25. Do not use the product for other than its intended use.

**Warning: This product may contain chemicals known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, visit [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). (California law requires this warning to be given to customers in the State of California.)**

## CLEANING AND MAINTENANCE

- Turn off and unplug the decanting base unit from the power outlet before cleaning or maintenance. Wipe the surface of the decanting base unit with a clean, dry cloth (or a damp cloth where needed).
- The glass decanter is dishwasher safe. It can also be hand washed and rinsed with water then let it dry.
- Do not clean the product with abrasive cleaners, steel wool, or other abrasive materials.

## CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please contact WAKE UP WINE™ Customer Support ([support@wakeupwine.com](mailto:support@wakeupwine.com)). They can take this product for environmental safe recycling.

To dispose of the product, follow the instructions below:

- Never dispose of electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of electronics in accordance with the prevailing community regulations.



## GENERAL BATTERY PRECAUTIONS

- Never disassemble the unit and do NOT attempt to change or remove the battery. Doing so will void the warranty and could cause injury, and damage to your unit.
- Never use or charge a battery if it appears to be leaking or in any way abnormal.
- Avoid charging a rechargeable battery when the temperature is not within 5° - 35° C (41° - 95° F).

## INCLUDED IN THE BOX



PRO Decanting Base Unit



Super Fine Sediment Strainer



Airtight Glass Stopper



Micro USB Cable



750 ML Glass Decanter  
with S-Velocity Spinner



User Guide

## Technical Specification\*

Model:	PRO
Item Number:	WUW201802
Micro USB Charger:	DC+5V/2A
Power Consumption:	14.8W
Battery Type:	Li-Ion
Battery Capacity:	3.7V 4000mAh
Dimension (base unit):	155 (L) x 155 (W) x 28 (H) mm

\*All subject to change without prior notice.

 
 
## MEET YOUR WAKE UP WINE™ PRO




PRO Decanting Base Unit



Back View of Decanting Base Unit

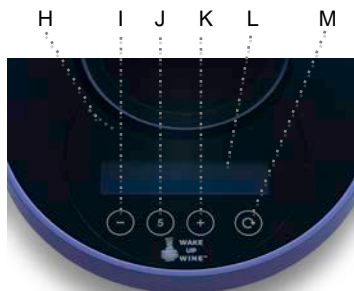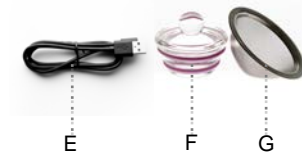

Touch Control Panel

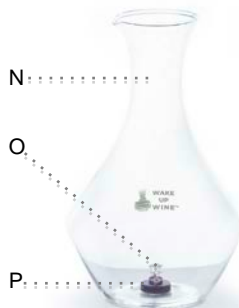 

- A. Decanting Base Unit
- B. LED Lights
- C. Power Switch
- D. Micro USB Charger Port
- E. Micro USB Cable
- F. Glass Stopper
- G. Sediment Strainer
- H. Battery Fuel Gauge
- I. Minus (-) 1 Minute Button
- J. 5-Minute Button
- K. Plus (+) 1 Minute Button
- L. LCD
- M. Reset Button
- N. 750 ML Glass Decanter
- O. 4, 6, 8 oz. Measuring Marks
- P. S-Velocity Spinner

## BEFORE USING

1. **Make sure the S-Velocity Spinner is permanently and properly placed onto the spindle in the glass decanter.** Do NOT shake the glass decanter vigorously or remove the spinner from the spindle. The product's decanting feature will NOT work without it.
2. Slowly remove the protective cardboard (Figure 1) affixed to the spinner and spindle in the glass decanter. **Keep the protective cardboard.** Use it to reinstall the spinner onto the spindle in the event it accidentally comes off.
3. Wash glass decanter, sediment strainer, and glass stopper in soapy water before first use.
4. Check out the Recommended Decanting Times Guide (Figure 2). The Guide is provided to make it easier to determine the decanting time necessary for each varietal and type of spirits. **Keep in mind that delicate and old vintage fine wines may not need decanting or need less time.**

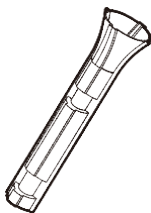 


Figure 1. Protective Cardboard



Figure 2. QR Code – Recommended Decanting Times Guide



## CHARGING THE DECANTING BASE UNIT

### Charge Unit Before Portable Use

WAKE UP WINE™ PRO can run for up to four (4) hours with a 3.5-hour charge. Plug the small end of the micro USB cable into the port located on the back of the decanting base unit, and then plug the larger end into a phone charger or computer. The Battery Fuel Gauge determines the rechargeable battery's state-of-charge (SOC).

The Battery Fuel Gauge light blinks and a flash ⚡ symbol is displayed on the LCD while the unit is charging. When charging is complete, all five (5) Battery Fuel Gauge lights are turned on and steadily lit.

### Check the Charge Level

The Battery Fuel Gauge lights indicate how much charge is left in the battery:

- 5 lights signal full or near-full charge
- 4 lights signal 80 percent charge
- 3 lights signal 60 percent charge
- 2 lights signal 40 percent charge
- 1 light signals 20 percent charge

**i The unit can still be used for decanting while charging provided the On/Off power switch is in the ON position.**

**During portable use, a buzzer will sound for 10 seconds before the unit automatically turns off when the battery is low and needs to be recharged.**

## TOUCH CONTROL PANEL

The LCD (Figure 3) displays information when the unit is switched on:



Figure 3. LCD

HELLO

Initial greeting displayed  
when unit is switched on

WAKE UP WINE  
No Decanter

Information displayed when  
there is no glass decanter  
detected on the round recess  
of the decanting base unit

WAKE UP WINE  
00 Mins STOP

Information displayed when a  
glass decanter is placed and  
detected on the round recess  
of the decanting base unit

WAKE UP WINE  
5 Mins 4:56

Decanting time

Countdown  
timer (decanting  
time remaining)

Information displayed when  
decanting

There are four (4) round touch-enabled buttons and a Battery Fuel Gauge on the Control Panel:

Press once to **set decanting time for 5 minutes**, twice for 10 minutes, and three times for 15 minutes (maximum) for each decanting cycle

Battery Fuel Gauge



Press to **increase decanting time** in increments of 1 minute (maximum of 15 minutes per decanting cycle)




Press to **decrease decanting time** in increments of 1 minute (minimum of 1 minute per decanting cycle)

Press once to **reset** the remaining time left on the countdown timer to zero and stop the decanting cycle or turn the notification sound off at the end of a decanting cycle

## DECANTING PROCEDURE


1. **Pour wine or spirits into the glass decanter.** Do not exceed the MAX level, which is below the WAKE UP WINE™ logo printed on the glass decanter (Figure 4). If necessary, place the sediment strainer on top of the glass decanter to filter sediments typically found in older wines.
2. **Place the glass decanter on the round recess of the decanting base unit.** Make sure it is centered in the middle of the round recess.
3. **Turn on the power switch.** After one (1) second, "HELLO" will be displayed on the LCD. After 3 seconds, "WAKE UP WINE" will be shown on the display.



4. **Set decanting time.** Refer to the Recommended Decanting Times Guide. For example, press the  button for a 5-minute run time. Press  to increase or  to decrease decanting time.

For a 5-minute decanting time, "05 Mins" will be shown on the display. The "STOP" on the display will change to "05:00" then the countdown timer will automatically begin. After one (1) second, the LED lights under the round recess of the decanting base unit will turn on and the decanting cycle will begin.

**ⓘ Lifting the glass decanter from the decanting base unit will pause the decanting cycle and turn off the LED lights. Place the glass decanter back on the base unit to resume the decanting cycle.**

5. **Decanting is completed.** When the countdown timer ends, decanting will automatically stop. The end of decanting cycle tone will be activated and LED lights under the round recess of the decanting base unit will flash once decanting is complete. The tone and flashing LED lights will stop when the glass decanter is lifted from the decanting base unit or after 30 seconds or when the Reset button  is pressed.


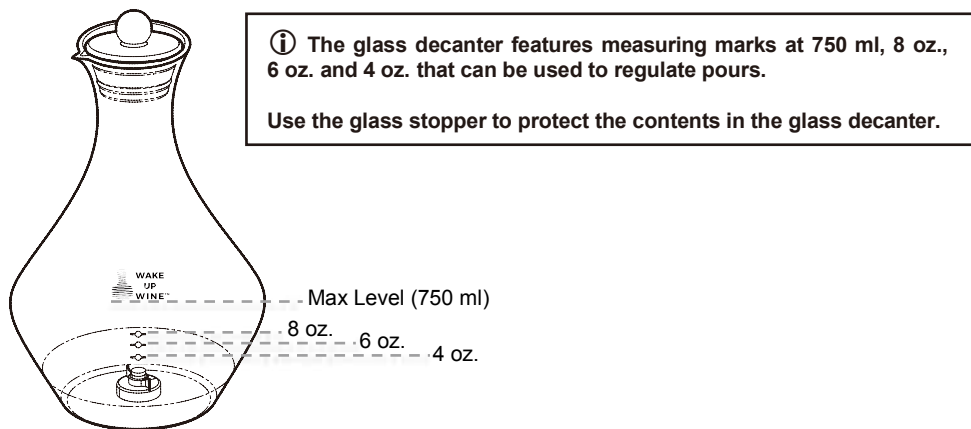 


Figure 4. Measuring Marks

## FCC WARNING STATEMENT

 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



FCC ID: 2AR2DPRO