 
Go (ang It!)

GET TO KNOW GO HANG IT! PRO

- A REMOVABLE LEVEL Snaps off and sets on the edge of your frame to perfectly level your pictures.
- B REMOVABLE PUSH PIN Used to mark nail holes through the HOOKS (See E.) when hanging pictures with wire hangers.
- MAGNEKEYS Remove and insert into the notch of our SINGLE-NOTCH PRECISION HANGERS, sawtooth or D-ring hangers to perfectly mark your nail holes.
- D CENTER BUTTON Telescopes and extends the base of the unit for wire-hanging pictures. Simply push the button and pull.
- BUILT-IN HOOKS Used to suspend wire hanger pictures on the wall where desired. Insert the PUSH PIN into the guide holes to mark where your nails go.
- SILICONE LATCH Keeps the removable hardware case attached to the unit.



HARDWARE ESSENTIALS INCLUDED



SAWTOOTH PICTURE HANGING

Follow these steps for D-ring hangers too.

1 INSERT MAGNEKEYS
Remove the MAGNEKEYS and insert into sawtooth or SINGLE-NOTCH PRECISION HANGERS.



LEVEL & MARK HOLES

Place removable LEVEL on top edge of the frame. Position and level frame on wall then firmly push directly over hangers to mark your nail holes.



3 INSTALL HARDWARE

Locate the marks on the wall made by MAGNEKEYS. Install nails straight into the wall marks.

4 HANG YOUR PICTURE



WIRE PICTURE HANGING

1 EXTEND & HOOK

Press CENTER BUTTON to extend the base. Suspend the frame wire on the BUILT-IN HOOKS, then position and level picture. Use the two, outer HOOKS for heavier frames and the single HOOK for lighter frames.



2 MARK HOLES

Pressing firmly against the wall, remove your frame. Locate the removable PUSH PIN (located beneath the LEVEL) and mark nail holes through the hooks.



1 INSTALL HARDWARE

Locate the marks on the wall made by the PUSH PIN. Install picture hook hardware.

4 HANG YOUR PICTURE

Works with most picture hanging hardware.



Suggested weight limits: Nails in wood studs - 50 lbs Nails in drywall - 10 lbs