

# SHARPER IMAGE®

## HEATED PANTS

Item No. 207559

### User Guide

Thank you for purchasing the Sharper Image Heated Pants. Please take a moment to read this guide and store it for future reference.

## FEATURES

- Unisex heated pants
- Provides heat in the legs and abdomen area
- Body fabric: 90% Polyester, 10% Spandex
- Knee/abdomen fabric: 65% Polyester, 25% Cotton, 10% Spandex
- 5-minute Pre-heat cycle
- 3 temperature settings [Low / Medium / High]
- Average heat 89°F - 102°F
- Operates 2.8 to 8.6 hours on a full charge [depending on heat setting]
- Includes two 2600mAh single-cell rechargeable batteries
- Includes AC charger / adapter

## SIZING INFORMATION

Sizes	Measurement Guide	S	M	L	XL
Pants Length	Measure waist to leg opening [back side]	36.6"	37.4"	38.2"	39.4"
Waist	Measure around the waist	26.8"	28.3"	30.3"	31.9"
Hip	Measure around the hips	36.2"	38.2"	39.8"	41.7"

## CHARGING THE BATTERIES

1. Plug the AC adapter into an outlet.
2. Connect the two batteries to the AC adapter plugs until they are fully charged.  
**Note:** Do not force the plugs into the batteries. There are two indicator lights for each battery: **Red** = Charging **Green** = Fully Charged
3. For best results, charge the batteries fully before the first use. Failure to charge the batteries fully prior to the first use may reduce battery life.
4. When fully charged, disconnect the batteries from the charger.

## INSTALLING THE BATTERIES

1. Locate the input plugs inside the small pouches in the Heated Pants, and connect the charged batteries. Place the batteries into the pouches once connected.
2. Press and hold the control button in the Heated Pants for three to five seconds, or until the LED light flashes red with one long vibration. This will be Pre-heat mode.
3. After approximately five minutes, the LED light will change to solid white, indicating the Heated Pants are no longer in Pre-heat mode. The temperature can now be adjusted by pressing the control button. When you change heating modes, the LED color will change, and you will feel vibrations as indicated in the chart below.
4. To turn off the Heated Pants, press and hold the control button for three to five seconds or until the LED light turns off with one long vibration.
5. Unplug the batteries when the Heated Pants are not in use. Store batteries inside the pouches of the Heated Pants when not in use. Note: The Heated Pants should only be used with the included batteries and charging cable. Do not use any other batteries or charging cables.

## TEMPERATURE ADJUSTMENT CHART

Mode	LED Color	Vibrations	Average Temperature*	Run Time
Pre-heat	Flashing Red	1 long	N/A	N/A
High	Solid Red	3 short	102°F	2.8 hrs.
Medium	Solid White	2 short	95°F	4.3 hrs.
Low	Solid Blue	1 short	89°F	8.6 hrs.

**\*NOTE:** Run time tested under an average room temperature of 82.4°F

## CLEANING AND MAINTENANCE

- Always remove batteries from the Heated Pants before cleaning.
- Spot clean with a damp cloth.
- Hand wash in cold water with mild detergent or machine wash gently in cold water.
- Line dry only.
- Do not twist the garment, as this can damage the cables.
- Do not dry clean or bleach.
- Do not tumble dry.
- Do not iron.

## BATTERY USE AND CARE

- Do not use the batteries if you notice a change of shape [lumps], overheating when charging, rust or corrosion on the battery connectors.
- Charge the batteries regularly [recommended a minimum of once every 3 months].
- Charge between each use.
- The battery life is 300+ cycles before the batteries will diminish in capacity output.
- Lithium-ion batteries provides a diminished capacity output at extreme cold temperatures. Keep the batteries away from cold to minimize the impact.

- For best performance, it is recommended NOT to fully charge the batteries if the product is not being used for a longer period of time. Charge for 30 minutes only and after 3 months charge the batteries again for about 30 minutes. Charge the batteries completely before using product again.
- When batteries are not in use, keep them away from other metal objects like paper clips, coins, nails, screws or other small metal objects that can make a connection from one terminal to another.
- Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the batteries: avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the batteries may cause irritation or burns.

## **SAFETY WARNINGS**

- Do not expose product to rain. Water will increase the risk of electrical shock.
- Do not abuse the power cable. Never use the cord for carrying, pulling or unplugging the heated product. Keep the cord clear from heat, oil, sharp edges or moving parts.
- Do not use on open wounds, sensitive skin areas or in the presence of poor circulation. Check skin frequently during use to ensure rashes or burns are not developing. The FDA and CPSC recommend the following precautions be taken to avoid hazards associated with the use of heated clothing:
- Do not submerge Heated Pants or batteries into water while in use.
- Do not cut, puncture or tear into the lining of the product.
- Do not allow the batteries to have contact with water or other liquids. If water or liquids enter the batteries' interior, immediately disconnect the product from the batteries. Allow the batteries to dry completely before use.
- Do not penetrate, strike, short-circuit or disassemble batteries.
- Keep all electronic components of your product away from fire and extensive heat.
- Do not leave product unattended while connected to the batteries.
- Only use the charger and batteries included with this product.
- If you experience any discomfort while using this product, remove it immediately and consult your physician before resuming use.
- If you have heart disease, a pacemaker, diabetes, circulatory problems, sensitivity to heat, are pregnant or are under 13 years of age, check with your physician if it is advisable to use this product.

## **ALWAYS:**

- Inspect the heating unit before each use to ensure it is in proper working order.
- Discard if it looks worn or cracked, or if the electrical cord is frayed.
- Read and follow all instructions prior to use.

## **NEVER:**

- Use on an infant.
- Use on a person who is paralyzed or has skin that is not sensitive to temperature changes.
- Use on a sleeping or unconscious person.
- Use in an oxygen enriched environment or near equipment that stores or emits oxygen.
- Sit on this device.
- Crush this device.
- Unplug this device by pulling its connecting cord.
- Use pins or other metallic fasteners to hold this device in place.

## **WARRANTY/CUSTOMER SERVICE**

Sharper Image branded items purchased from [SharperImage.com](http://SharperImage.com) include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.