

# **SHARPER IMAGE®**

## **4X6 SMARTPHONE PHOTO PRINTER**

Item No. 207579

User Guide



Thank you for purchasing the Sharper Image 4x6 Smartphone Photo Printer. Please take a moment to read this guide and store it for future reference.

## SAFETY PRECAUTIONS

- Use only recommended power sources.
- Do not attempt to disassemble, alter, or apply heat to the product.
- Avoid dropping or subjecting the product to severe impacts.
- Do not touch the interior of the product if it has been dropped or otherwise damaged.
- Do not use, place, or store the product in the following: Places with direct sunlight, places with a temperature higher than 40 ° C (104°F), places with high humidity or dust, and places with strong vibrations.
- Stop using the product immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.
- Do not use organic solvents such as alcohol, benzene, or thinner to clean the product.
- Do not let the product come into contact with water or other liquids.
- Do not allow liquids or foreign objects to enter the product.
- Do not handle the power cord with wet hands.
- Keep out of reach of children.
- Keep the printer in a safe area to avoid people tripping over the power cord.
- Please stay at least 7.9 inches away from the printer when in use.
- Unplug the power cord when the product is not in use.
- Unplug the power cord periodically, and using a dry cloth, wipe away any dust or dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.
- Do not stick your hand or objects into the printer interior.
- Do not place heavy objects on top of the product.

- Do not touch the paper while it is printing.
- Do not pull out the paper while it is printing.
- Do not place anything on top of the printer while it is in use.
- Use the latest app for optimal results. You may download the latest app through Google Play or Apple App Store.
- Never reuse paper. Reusing paper may cause paper jams or cause the ink sheet to adhere to the paper causing printer damage.
- Do not reuse ink cartridges.
- Do not unplug the printer while it is printing.



## PACKAGE CONTENTS

Before use, make sure the following items are included in the package:

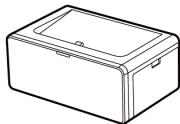 


Photo Printer Dock



Paper Cassette



Power Adapter




Power Cord

\* Specifications or design may change without notice for product optimization.

## CONSUMABLE [SEPARATE PURCHASE]

 Before printing, purchase an Ink Cartridge/Paper Set

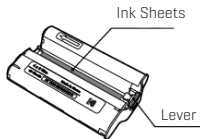

Ink Cartridge

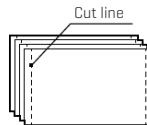 




Photo Paper

## CONSUMABLE SET

  
Model	Print Size	Paper Type	Print Sheets
PHC-40	4 x 6 inch [100x150 mm]	Print Paper	40 Sheets

\*Ink cartridge and paper are sold as a set.

## IDENTIFICATION OF PARTS

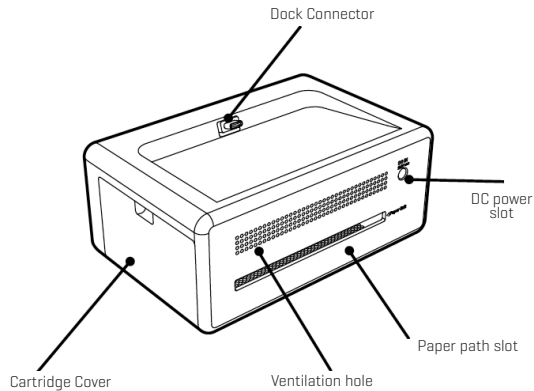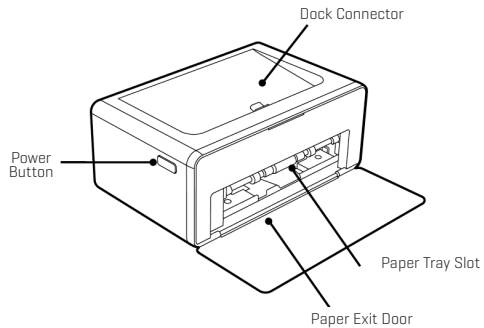


## INSTALLING PHOTO PRINTER DECK

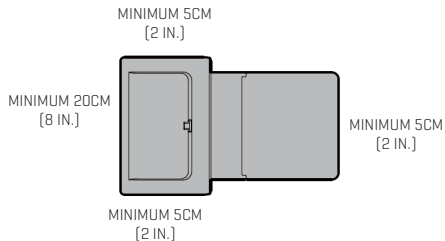 


Choose the right place to put the 4x6 Smartphone Photo Printer. Place the printer on a table or other flat, stable surface. Do not place the printer on an unstable or tilted surface.

- Leave a minimum of 5 cm [2 in.] of open space around the printer.
- Leave a minimum of 20 cm [8 in.] in front of the printer.
- Make sure the power cord is not interfering with the area where the paper comes in and out.
- Avoid using the printer in dusty areas. It may damage the printer or cause a malfunction.


## INSERTING CARTRIDGE

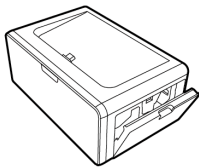 

 1. Open the cartridge cover.

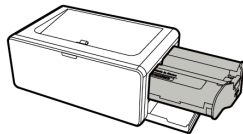

 
2. Insert the cartridge using the arrow specified until you hear a clicking sound.

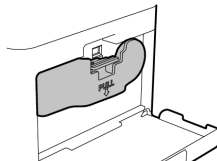

3. Press down and pull out the lever to replace used cartridges.

- When inserting the cartridge, do not touch the ink sheet with your hands.
- Do not reuse used cartridges. This could result in a product malfunction.


## INSERTING PAPER CASSETTE

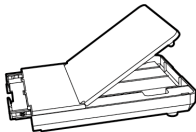 


1. Open the cassette cover.



 2. Insert paper facing shiny side up. You can insert up to 20 sheets. Inserting over 21 sheets may cause a malfunction. Avoid touching the coated paper with your hands as it may affect the photo quality.

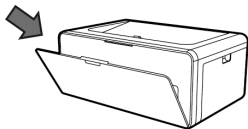

 3. Open the printer's cassette cover.

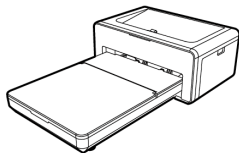

4. Insert the cassette until it clicks into place.

### 1. iPhone, iPad and iPod



SI SMARTPHONE PRINTER



- Visit the App Store via your device.
- Search for "SI Smartphone Printer."
- Install the application.

### 2. Android Phones and Tablets



SI SMARTPHONE PRINTER

 


- Go to the Play Store via your device.
- Search for "SI Smartphone Printer."
- Install the application.

## PRINTING PHOTOS USING BLUETOOTH



1. Turn on the printer by pressing the power button on the top left corner. Turn Bluetooth on in your smartphone.

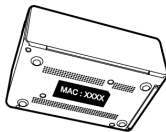

2. Go to Bluetooth setting in your smart phone and find "SI-XXXX". Printer name [XXXX] is variable [4 characters].



3. App launch.



4. Choose a photo. To start printing, push the print button in the App.

\* You can find your printer Model No. on the label at the bottom of printer.


## PRINTING SMARTPHONE CASE VIA APP



 Select "Phone Case Print" and follow the guide in APP.



Select the photo in your phone gallery.




Phone Case Print


## CHARGE YOUR DEVICE
 
### 1. Using the dock

Docking to the printer will charge your device.

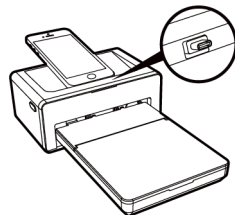

## POWER AND LED STATUS INDICATORS

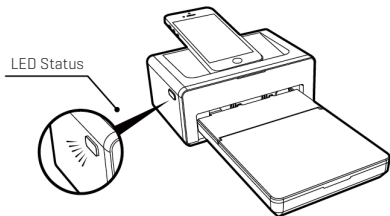 

STATUS	LED
Power On	Red LED Blinking for 10 seconds then White LED
Power Off [2 Seconds]	NONE
Printing	White LED Blinking
Firmware Update	RED LED Blinking
No Cartridge/Firmware Updating	Red LED Blinking for 10 seconds then White LED
No Cassette/Removing Cassette	Red LED Blinking for 10 seconds then White LED
No Paper	Red LED Blinking for 10 seconds then White LED
Error (Paper Jam, etc)	Red LED Blinking for 10 seconds then White LED
Loading, Cooling	White LED Blinking

## TROUBLESHOOTING

INDICATION	SOLUTION
Paper Jam	- Turn the printer off and on. The printer will automatically eject the paper. If problem is not solved, please contact Customer Support.
Low Resolution	- The resolution of the original photo may affect print quality. We recommend photo with 1280x2448 pixels and above.
Printer Not Printing	- Turn the printer off and on. - Check if the cartridge is inserted properly. - The printer will not print once it reaches a certain temperature. This is not a malfunction. Please wait until the printer cools down.



## PRODUCT SPECIFICATION

<b>Model</b>	<b>PD-460</b>
<b>Connectivity</b>	<b>BLUETOOTH</b>
<b>Docking</b>	<b>C-Type Lightning Dock</b>
<b>Print Size</b>	<b>4 x 6 inch [100 x 148mm]</b>
<b>Supported Image Format</b>	<b>JPEG [Baseline], PNG</b>
<b>Cartridge</b>	<b>ICRG-40, ICRG-80, ICRG-120</b>
<b>Optimal Printing Conditions</b>	<b>Temperature: 15-35C / Humidity: Below 70% RH [35C]</b>
<b>Printing Type</b>	<b>Dye Sublimation Thermal Transfer</b>
<b>Power</b>	<b>DC 24V 2.5A</b>
<b>Printer Size</b>	<b>168.5 x 103.2 x 68.5mm</b>
<b>Supported Devices</b>	<b>Android Ver 4.0 and above / iOS Ver 6.0 and above</b>

## FCC REQUIREMENTS PART 15

**Caution:** Any changes or modifications in construction of this device which are not expressly approved by the responsible for compliance could void the user's authority to operate the product.

**NOTE:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interface.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to this equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the radio or television off and on, the user is encouraged to try to correct interference by one or more of the following measures.

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on another circuit.
4. Consult the dealer or an experienced radio/TV technician for help.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.