

**TIPS:**


Your suggestions and comments for Costway are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

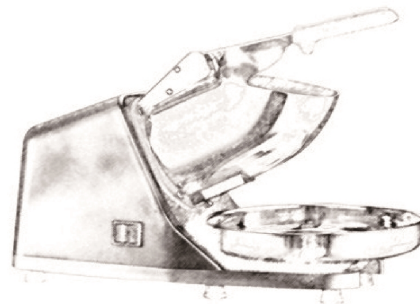

USER'S MANUAL
ICE CRUSHER
KC38774

PRODUCT ASSEMBLY**Manual for Ice Crush****1. Operation inStruCtionS**

(1) Check whether the power voltage conforms to that on the designation plate and the power should connect to the reliable ground wire.

(2) Raise ice crushing handle to the upper stop, connect to the power, turn on the master switch and place the ice basin on the underframe with the ice cubes put into the ice crushing barrel.

(Note: Quantity of the ice cubes should not exceed the ice crushing barrel level).

Then press down the ice pressing handle to make the protective switch automatically turned on and crush the ice.

After finishing, please raise the ice crushing handle to the upper stop again and repeat the above mentioned operation process.

PRODUCT ASSEMBLY**2. Keep clean**

After using the ice crusher, the switch should be turned off. Disconnect the power plug and wipe dry the body, then place the machine in the dry place.

3. CautionS

When using, the outlet of ice cubes cannot be jammed or the cutter head may get stuck and the motor may be burnt out.

If the abovementioned conditions appear, please find out the reasons immediately, cut off the power and raise the handle.

4. Technical parameters

Voltage: 110V—120V

Power: 300W

Frequency: 50Hz~60Hz

Weight: 11 LBS

Revolution: 2000R/M

Crushing weight: 143 LBS per hour