 





BUMPER CARS

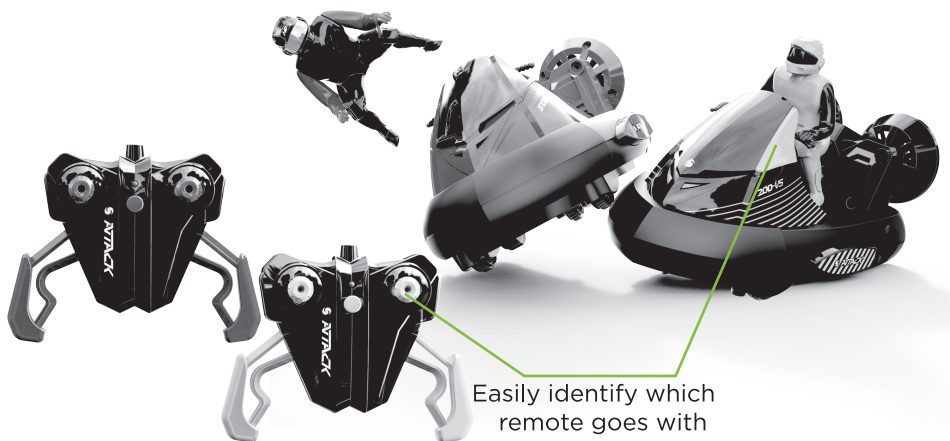

Easily identify which remote goes with which car by matching the colors the car with the remote buttons.

SETTING UP THE BUMPER CARS

 1. Turn off the power switch.
2. Use a phillips screwdriver to open the battery cover.
3. Install 3xAAA batteries taking care to match the correct polarity (+/-).
4. Close the battery compartment, reinstall the screw, and switch the power switch to ON.
5. Repeat this process for the other Bumper Car.

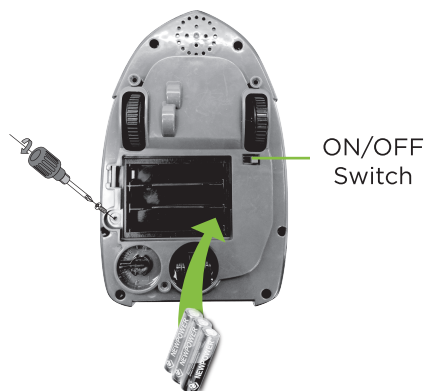

SETTING UP THE REMOTE CONTROL

1. Use a phillips screwdriver to open the battery cover.
2. Install 2x new AA batteries taking care to match the correct polarity (+/-).
3. Close the cover and reinstall the screw.



OPERATING THE BUMPER CAR CONTROLLER

- For best results the Bumper Cars need to be within a 15' foot range of their respective controller.

Controller Functions

Forward &
Reverse

 


Left & Right
Steering

Controller Power
ON/OFF

Bumper Car Movement

Forward

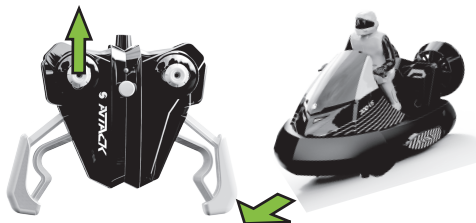

Reverse

 


Bumper Car Movement

Turn Left



Turn Right

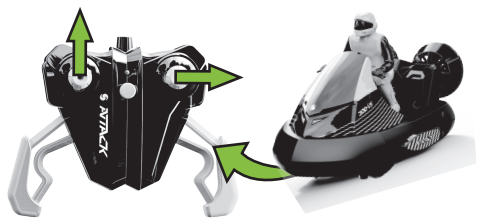

Reverse & Turn Left



 
Reverse & Turn Right



OPERATING THE BUMPER CARS

The object of the Bumper Car game is to eject your opponent's action figure from their Bumper Car. To setup the game follow these steps

1. Assemble the action figure onto their color matching Bumper Car. Align the slot on the seat of the Bumper Car with the corresponding locking peg on the action figure and press down firmly until they click together.
2. The side buttons on the Bumper Car activate the ejector seat below the action figure. The winner of the game is the first player to successfully bump into their opponents car and eject the their opponents action figure.

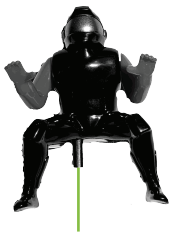

Action Figure
Locking Peg



Ejector Buttons



For Customer Service please email:
Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-115 • Bumper Cars



Please do not return this product to the store.

For questions or assistance on installation, parts or
operation contact: Odyssey Toys at 1-(305)-933-4480.
Hours of operation: 10:00am - 5:00pm EST
Email: Care@OdysseyToys.com
or visit us online at: www.odysseytoys.com/support
20855 NE 16 AVE C-4, Miami FL, 33179

CAUTIONS & WARNINGS

- Suitable for ages 8 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from the Bumper Car when powered on.
- If Bumper Cars will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.

CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

MADE IN CHINA

