

Function Switch **M**

Single press "M" Switch Dual Nozzles Continuous Mist

Single press "M" twice dynamic intermittent mist

Press "M" switch third times turn off mist



Long press -/+ adjust the mist volume

single press -/+ can exchange one or dual Nozzles spray



Light Switch **M**

First long press **M** turn on white light

twice long press turn on 7 color light

Third long press switch fix the light color

Fourth long press turn off light

