
COSTWAY®

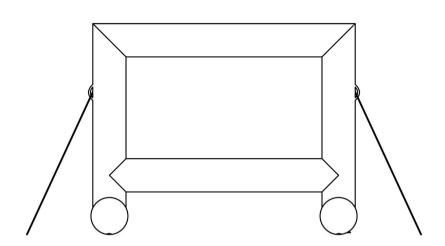

USER'S MANUAL Inflatable Projection Screen **OP70571**

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com











Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- Please read all instructions carefully.
- A Retain instructions for future reference.
- ♠ Separate and count all parts and hardware.
- A Read through each step carefully and follow the proper order.
- Me recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

 \triangle

CAUTION: ELECTRICALLY OPERATED PRODUCT

Not recommended for children under 14 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

 \triangle

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OF DEATH

Do not use extension cords with this product. Outdoor use only. Read all instructions before assembling this inflatable device. Keep instructions for future use.

Λ

WARNING:

ELECTROCUTION RISK:

- KEEP ALL ELECTRICAL LINES, RADIOS, SPEAKERS AND OTHER ELECTRICAL DEVICES AWAY
- FROM THE CONSTANT AIR INFLATABLE.
- NO NOT PLACE THE CONSTANT AIR INFLATABLE.

SAFETY WARNINGS: ELECTRICAL BLOWER

RATED VOLTAGE RANGE: MODEL NO.: BR-6 0.8A AC110V - 120V. 60Hz

A DANGER

CAUTION: ELECTRICALLY OPERATED PRODUCT

DANGER - TO PREVENT ELECTRIC SHOCK, DO NOT IMMERSE IN WATER. WIPE CLEAN WITH DAMP CLOTH.

MARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH. ADULT SETUP AND SUPERVISION REQUIRED.

CAUTION: The blower is a high volume blower, and is capable of moving lots of air very quickly. Place the blower in an area where it will not suck in dirt or leaves. Keep away from water and traffic. Keep children away from the blower. Only the blower supplied should be used for inflation

INSTRUCTIONS FOR BLOWER INSTALLATION

NOTE: Set up as close to power source as possible. The product should be periodically examined for potentially unsafe conditions such as: damaged cord, plug, housing or parts, and that in the event such damage is found, the product should not be used until properly repaired. Never leave the blower outside in the rain or exposed to the elements when not in use. When in use, do not place the cord across traffic areas, water or damp areas. The blower should be placed on a stable surface and anchored per product instructions.

- 1) Make sure that the blower switch is in the "OFF" position. Plug the blower into a 120V outlet.
- Set the power switch of the blower to "ON" to inflate. After use, turn the power to "OFF".
- To disconnect, have an adult grip it tightly and pull the plug from wall outlet.

WARNING: Failure to follow these instructions could result in serious injury or death.


- ADULT SET-UP AND SUPERVISION REQUIRED.
- This blower is for residential use only. It is not intended to be used in commercial or industrial settings.
- Never insert fingers, pencils or any other object through the grill at ANY time.
- Do not operate blower with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
- Do not operate in the presence of explosive and/or flammable fumes.
- Never connect the blower to any solid state speed control device.
- To reduce the risk of fire or electric shock, do not use this blower with any solid-state speed control device.

INSTRUCTIONS FOR BLOWER CLEANING AND STORAGE

Do not immerse the blower in water. Unplug the blower before cleaning. To clean: wipe with a damp cloth. The blower does not require any lubrication and has no user serviceable parts. Do not attempt to service the blower. When not in use, store the blower indoors in a dry place. Store the blower upright on a stable surface. Loosely coil the cord and place it beside the blower.

This blower is not a toy. Use under the direct supervision of a competent adult. Keep away from children.
READ AND SAVE THESE INSTRUCTIONS.

PART LIST

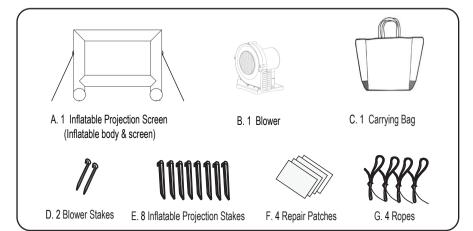

WARNINGS



No sharp objects.



Do not use in windy conditions.



Do not allow children to touch fan or electrical cord.



Must be anchored using stakes.



Do not leave out in rain.

Only for domestic use. For outdoor use only.

Adult supervision required. Adult assembly required. Keep away from fire. Instruction manual included. Read the instructions.

DO NOT:

- Attach or leave any items on / inside the product.
- Jump off / onto the product.
- Use in public areas or as a rental.
- Use in windy conditions.
- Leave out in the rain.

Instructions:

- Place the product on a level ground at least 2m (6.6') away from any other objects (fences, buildings, trees, electrical wires, walls, bodies or sources of water, etc...)
- Ensure the product is properly anchored using the stakes provided. Strong wind may lift the product off the ground.
- Keep the fan and its power cord away from children, water and traffic.
- The Air Blower MUST remain turned ON during use. Air loss through the seams is normal.
- Thoroughly dry before use.







 $\mathop{\hbox{\rm CAUTION}}\nolimits_{\!\scriptscriptstyle \Lambda}$ Heed all signs and warning labels on the blower motor.

△ BLOWER CAUTIONS:

- Do not open or try to service the blower. If blower needs servicing, take it to a reputable dealer.
- Clearly mark the path of the power cord to avoid tripping and/or damage by yard equipment such as lawn mowers, etc.
- Do not leave blower unattended.
- Do not allow blower to be used or played with by children.
- Do not cover the air intakes when the blower is being used and do not insert small objects into any part of the blower.
- WARNING Electrical Hazard DO NOT USE EXTENSION CORDS WITH THIS PRODUCT.
- Disconnect the blower from the power source when moving the slide.
- WARNING To reduce the risk of fire or electric shock, do not use this blower with any solid - state speed control device.
- The blower should be securely staked to the ground before use.

SET-UP

- 1. Remove Inflatable Projection body and Screen from its packaging.
- 2. Unroll and unfold the Inflatable Projection body and Screen in the center of the designated area.
- Attach longer fabric tube to blower unit making sure the tube is not twisted. Wrap drawstring around the tube and end of blower once, and tie tightly in place.



- 4. Mounting buckle.
- 5. Plug in power. Switch power on from blower.
- 6. Fix the 4 ropes on both sides of the screen.
- Secure the Inflatable Projection to the ground with the provided stake. To prevent tripping, pull the stake loops all the way out, then drive stakes completely into the ground.
- 8. Secure the blower to the ground with the provided stakes.

DEFLATION & STORAGE

- 1. Turn off the blower and unplug it from the outlet.
- 2. Pull out the stakes of the screen, also pull out the stakes of the blower.
- 3. Until the drawstring from the Intake tube and allow the Inflatable Projection to fully deflate.
- 4. Undo the grommet.
- 5. Fold over, Compress air out as you are rolling up inflatable.
- 6. Fold over only.
- 7. Put it into the carrying bag.


REPAIR PATCH INSTRUCTIONS



WARNING: Repair patches must be applied by an adult only.
KEEP OUT OF REACH OF CHILDREN.

INSTRUCTION:

- 1. Deflate the item, clean the area and allow to dry thoroughly.
- 2. Cut a portion of the patch to the size needed and round the corners. (See Fig).
- 3. Remove the adhesive backing from the patch material, position the patch over the damaged area and smooth out any bubbles.
- 4. Allow to sit for 30 minutes before re-inflating.

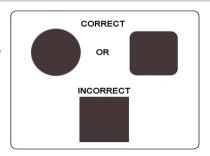

INSTRUCTIONS FOR INFLATABLE PROJECTION MAINTENANCE

- As an outdoor product, the Inflatable Projection is subject to wear and deterioration. Inspect for signs of fabric failure; weak or torn surfaces must be repaired promptly.
- To keep the product clean: wipe the Inflatable Projection or blower using a dry cloth or a cloth dampened with a neutral, non-inflammable, nontoxic cleaning and sanitizing solution or pure water.
- Product should never be stored wet. Allow to dry before rolling up.

DISPOSAL

- Disassemble and dispose of the equipment in such a manner that no hazardous conditions exist at the time the equipment is discarded.
- Blower should be returned to a collection center.

INSTRUCTIONS FOR BLOWER MAINTENANCE

- · Blower must be unplugged before servicing.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Product should be periodically examined for potentially unsafe conditions such as damaged cord, plug, housing, or parts, and that in the event such damage is found, the product should not be used until properly repaired. If these checks are not carried out, the product could overturn or otherwise become a hazard.
- The blower does not require any lubrication and has no user serviceable parts. Do not attempt to service the blower.
- Do not immerse the fan in water. To clean, wipe with a damp cloth.
- Regularly check the intake and output openings and keep free of dirt, leaves, etc.
- When not in use, store the blower indoors in a dry place.
- Store the blower upright on a stable surface.
- · Loosely coil the cord and place it beside the blower.
- When in use, do not place the cord across traffic areas, water or damp areas.
- The blower is a high volume blower, and is capable of moving large volumes of air very quickly. Place the blower in an area where it will not draw in dirt or leaves.



'Let's care for the environment!'
The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Please keep this manual as it contains important information.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be guite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE. GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana. California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.





