

Charging the DL012

1 Charging with USB cable

The battery is not fully charged when products leave the factory. Please charge battery up before use.

2 Use USB cable for charging to computer, power bank or cell phone. Adaptor may be used if the power source is not standard.

LED light flashes during charging, and it will stop when fully charged. Remove the protection film before use.

Charging Time

For first time use, please charge up to 5 hrs. Regular charging time is 2.5 hrs for about 80 min usage. Please charge the device if it is unable to boot after long press the power button. Charge the device if it starts to make "bi-bi-bi" noise. It is an indication that the battery is out of power, and it will turn off shortly. Auto shut off feature in 10 min.

Instructions

Cleansing

1 Press the power button for 2' to turn on device.

2 Press the button one time to select the Cleansing mode.

Wash your face/neck with warm water before cleansing mode. Deep cleansing is more effective when you hold the metal bar on the both sides of the device. Oily and non-sensitive skin: 2~3 times a week; dry/combination and sensitive skin: 1~2 times a week.

3 Apply a few drops of cleansing liquid on face.

4 Move the sonic scraping metal bar in directions as indicated in the figure.

Moisturizing

1 Press the power button for 2' to turn on device.

2 Press the button twice to select the Moisturizing mode.

Deep moisturizing is more effective when you hold the metal bar on the both sides of the device. The proper operation time is about 2-5 minutes. Please do not use the device repeatedly on same skin area.

3 Apply a few drops of moisturizer.

4 Move the sonic scraping metal bar in directions as indicated in the figure.

Operation of the DL012

Lifting

1 Press the power button for 2 seconds to turn on device.

2 Press the button three times to select the Lifting mode.

Avoid sensitive areas on your skin. Avoid lip and eye area.

3 Apply a few drops of essential oil in area needed.

4 Move the sonic scraping metal bar in directions as indicated in the figure.

Cleaning & Maintenance

1 Device shall be powered off.

2 Clean up device with cotton pads or soft fabric.

DO NOT use chemical solvent and corrosive material to clean sonic head to avoid damage to the device.

3 Place device in a dry and cool place.

DO NOT place the device in humid area. DO NOT let Children to play with it.

DL012 Ultrasonic Facial Toning Massager

Lifting

Moisturizing

Cleansing

User Manual

Charging Method

Sonic Head

Ionic Conductor

State Display

Power Switch

Mode Conversion

USB Charging Interface

Lifting

Moisturizing

Cleansing

Other Accessories

Products Manual

USB Charging Line

Product Introduction

Ultrasound technology has long been used in the medical field, but is now widely adopted for nonsurgical skin tightening. Ultrasound therapy has been shown to lift and tighten loose neck and chin skin – sometimes referred to as a “turkey neck” – as well as smooth away the lines and wrinkles in other areas of the face and upper chest.

The focused ultrasound energy is delivered to pre-planned depths within the tissue below the surface of your skin to stimulate collagen growth. Ultrasound therapy literally bypasses the surface of the skin, targeting the deep, structural skin tissues where collagen resides.

The Prospera Ultrasonic Facial Toning Massager has three functions in one device: it cleanses, moisturizes, and lifts. This small, elegant device provides deep cleansing through high-frequency ultrasonic vibrations to quickly remove blackhead, acne, dead skin, oil and make up residue. Moisturizing mode breaks down large nutrition molecules for easy absorption and penetrates deep skin layers to achieve optimal result. Lifting mode firms your skin, reduces wrinkle and fine lines and makes your skin look healthy and youthful. Treat your skin today!

Product Specifications

• Deep cleansing, dead skin removal, pimple and acne reduction

• Nutrition molecules penetration

• 3 auto modes for easy use

• Ultrasound frequency: 24K Hz

• Recommend using: 3-5min, once per day

• Power Supply: 2W rechargeable lithium battery

• Charging time: 3 Hours

• Output Voltage: 5V/600mA

• Time: 10 minutes auto shut off

• Net weight: 3.5 oz

• Dimension: 6.8" x2" x0.5"

• UPC 00850011335031

Product Features

Features:

Cleansing Mode-Deep cleansing opens up the pores to remove dirt and impurities, enhances the shedding of the aged and aberrant cells

Moisturizing Mode-The device helps more readily absorbed nutrients such as Vitamin C or mineral ingredients into the skin

Lifting Mode- Massaging on your face with this device helps reduce the appearance of fine lines and wrinkles.

How to use

Step 1. Wash your face/neck with warm water and keep your skin wet, please re-wet your skin during using if skin is dry.

Step 2. Power on the device, select "Cleansing" mode for deepen cleansing function

Step 3. Power on the device, select "Moisturizing" mode to help skin absorb nutrition easily

Step 4. Power on the device, select "Lifting" mode for lifting your skin

Attention

1. Clean your skin with mildly wash or water (keep skin wet) before using this device

2. The proper operation time is about 2-5 minutes

3. Please do not use the device repeatedly on same skin area

4. Deep cleansing and moisturized will be more effective when you hold the metal bar on the both sides of the device

5. Oily and non-sensitive skin: 2~3 times a week; dry/combination and sensitive skin: 1~2 times a week

6. Avoid sensitive areas on your skin. Avoid lip and eye area

Package Included:

1* Skin Scrubber

1* USB Power Charging Wire

1* English user manual

Product Parameters

Name: DL012 Ultrasonic Facial Toning Massager

Power supply: AC100V-240V 50HZ/60HZ

Output power: 5V/600mA, 2W

Net weight: 3.5 oz

Dimension: 6.8" x2" x0.5"

Rechargeable (lithium battery)

Common Issues

| Issues | Cause analysis | Solution |
|----------------------------------|--|---|
| Power supply cannot be connected | Insufficient charge | Please refer to the instruction "charging method" |
| | The battery power shortage | |
| Shutdown in use | Automatic shutdown function (auto-shut-off function after about 1 minutes) | Normal function, non fault |
| | The battery power shortage (the device makes a sound "bi-bi-bi") | Please refer to the instruction "Charging Method" |
| Unable to recharge | USB interface is not connected with rechargeable device | Please connect the USB charging line |
| | Lithium battery charging device for mobile phone used in charging | Please replace the charging device |
| | The charging device failure | Please restart the charging device |
| | The adapter (sold separately) fault | Please use other charging devices |