SHARPER IMAGE®

HEATED WEARABLE BLANKET

Item No. 207821

User Guide



Thank you for purchasing the Sharper Image Heated Wearable Blanket. Please take a moment to read this quide and store it for future reference.

PLEASE NOTE: For your safety, this blanket must be used flat. Do not sit on, crumple or lay on top of this blanket while it is turned on.

FEATURES

- · Chest/abdomen level heating area
- · Adjustable heat (Low/Medium/High)
- · 30-minute auto shutoff timer

HOW TO USE

- · Connect the male end of the power adapter to the female end of the Heated Wearable Blanket.
- · Plug the power adapter into an AC outlet.
- Put on the Heated Wearable Blanket so that the heating panel is facing front and remains flat and smooth.
- · Press and hold the power button on the Heated Wearable Blanket for three seconds. The default setting is High heat and will display a RED light.
- · Press the power button once to change the heat setting.
- To turn OFF the Heated Wearable Blanket, press and hold the power button for three seconds or until the LED light turns OFF.
- For safety, the power will turn OFF automatically within 30 minutes in every setting. **NOTE:** Unplug the power adapter from the AC outlet when not in use.

CAUTION

- · This device is not intended to be used by children.
- · Excessive exposure to heat can lead to burns.
- Discontinue use if you see redness on the skin.
- · Do not modify the unit or use it for any unintended purpose.
- · Stop using the product immediately if you experience overheating or discomfort.
- · Do not use the product when wet.
- · To prevent injury, do not sit on, crumple or lay on top of this blanket while it is turned on.
- Do not use this device if the cord appears frayed or damaged. Contact Sharper Image Customer Service immediately.

CARE AND MAINTENANCE

- · Unplug the Heated Wearable Blanket from the AC outlet before cleaning.
- Machine wash cold with similar colors.
- · Do not bleach.
- · Do not iron.
- · Line dry.
- · Do not dry clean.

SPECIFICATIONS

Adapter Input: 100-240V~50/60Hz Adapter Output: DC 12V 2.0A

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE