# SHARPER IMAGE®

# CANNED BEER DRAFT SYSTEM

Item No. 207850

User Guide



Thank you for purchasing the Sharper Image Canned Beer Draft System. Please take a moment to read this guide and store if for future reference.

## INTRODUCTION


The Canned Beer Draft System uses ultrasonic vibrations to create a dense micro-foam thatboosts the flavor of any canned beer. Just open a can of your favorite beer, place it into the base and pull the dispensing handle.

## **FEATURES**

- · Turns canned beer into bubbly draught beer
- · Ultrasonic vibrations create a dense micro-foam
- · Improves the flavor and texture of canned beer
- · Compatible with most beer cans, including 12-oz., 330 ml (Japanese imports) and 16.9 oz. "tall boys"
- · Insulated design
- · Easy to clean

## **IDENTIFICATION OF PARTS**


- 1. Dispensing handle
- 2. Top cap
- 3. Main body
- 4. Pedestal
- 5. Base
- 6. Beer output

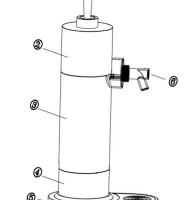


## **HOW TO OPERATE**

## Battery Installation

1. Remove the top cap from the main body by turning counterclockwise.

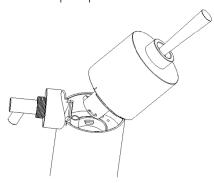


2. Open the battery cover and insert 2 AA batteries (not included).

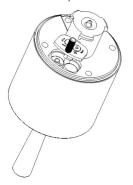

3. Replace the battery cover.



4. Replace the top cap and turn clockwise. The parts are locked when the markings on the main body and top cap are aligned.

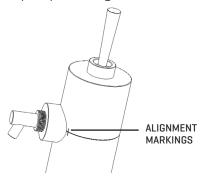


# Inserting a Can of Beer


1. Detach the main body from the pedestal by turning counterclockwise.




2. Open your beer can and place it into the pedestal.

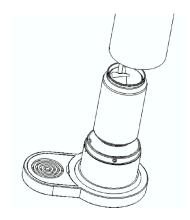

3. Replace the main body on the pedestal and turn clockwise. The parts are locked when the markings on the main body and pedestal are aligned.

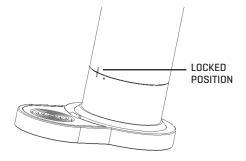

4. Place a glass on the base platform or hold it under the tap. **PULL** the dispensing handle toward you to start the beer flow. When the cup is mostly full, push back on the dispensing handle to create the amount of foam (head) you desire on your beer. **NOTE:** Start with a cold beer can for the best results and taste.

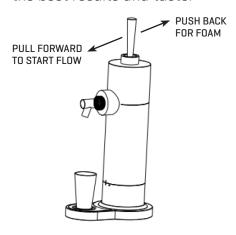

## **SPECIFICATIONS**

Power source: 1.5V, 2pcs AA alkaline batteries (not included )

Operating principle: Ultrasonic vibration

Compatibility: Most common canned beer cans (330ml/350ml/500ml)

Material: ABS, Silicone Gel

Working current: 260mA

## **MAINTENANCE**

- 1. Remove the silicone beer tube from the main body for hand washing if needed.
- 2. Remove the base for hand washing if needed.
- 3. To clean the inner tubing, fill an empty beer can with hot water and dispense the hot water.
- 4. Remove the batteries if this device will not be used for a long time.
- 5. This appliance contains electronic components, please do not immerse it in water, especially the top cap.
- 6. Do not disassemble this device. There are no user-serviceable parts. Contact Sharper Image Customer Service if you require assistance.

# **WARRANTY / CUSTOMER SERVICE**

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

## SHARPER IMAGE