



TRIUMPH

FUN SIZE TUMBLE INSTRUCTION MANUAL



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings

This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully.

Be sure to check out all the exciting a games has to offer. Visit our web site at:



www.escaladesports.com

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES

 


DARTBOARDS

Escalade Sports
817 Maxwell Avenue
Evansville, IN 47711
1-800-467-1421
www.escaladesports.com

©2016 copyright Escalade Sports® all rights reserved.

Parts List



54 solid wood blocks (6" x 2" x 1.25" ea.)

Canvas carrying bag

Game Rules

1 or more players

Set up the game

1. Find a flat, firm and level surface to build the Triumph Fun Size Tumble tower.

2. Triumph Fun Size Tumble is played with 54 wooden blocks. To set-up the game, the initial tower has 18 levels of three blocks placed adjacent to each other along their long side and perpendicular to the previous level (for example, if the blocks in the first level lie lengthwise east-west, the second level blocks will lie north-south).

3. Repeat stacks until all blocks are stacked, alternating the direction of the blocks on each level. The completed stack of blocks should form a neat, uniform, rectangular tower.

How to play

After the Triumph Tumble wood blocks are stacked on top of each other, using only one hand, the players take turns pulling a piece out and stacking it on top of the highest level. Players can touch other blocks to find a loose block, but must return the block to its original position before touching another block. Players can pick any spot on the highest level to place their piece. As players take turns pulling out blocks the tower becomes less stable and much taller. Ultimately the tower tumbles. The last player to take a turn before the tower falls is the winning player.

Choose a starting player at random or the player who caused the last tower to fall goes first. Play then continues to the left.

On a player's turn, they must remove a block from anywhere BELOW the highest completed story. The player then stacks it on top of the tower, perpendicular to the blocks just below it.

A player's turn ends 10 seconds after you stack your block, or as soon as the player to your left touches a block.

Keep removing and stacking blocks until the tower falls.

Warning: These are solid wood blocks. Please exercise caution when the large tower of blocks is falling.