 


GYM TRIM™
THERMOSLIM

 
Product Manual

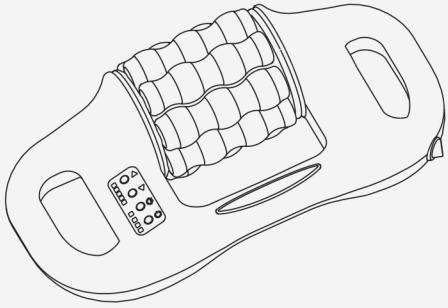

JL-802

Please read the instructions carefully before using the product.

Product Content

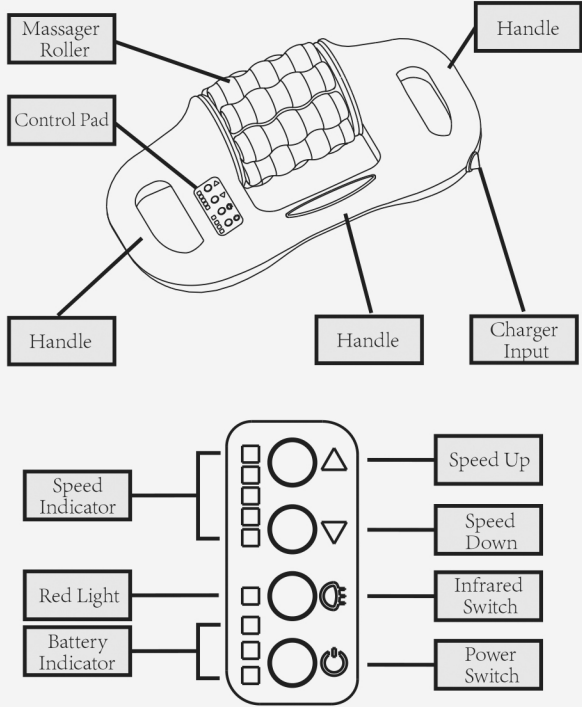

Product Information

Name: Gym Trim™

Model: JL-802

Massager Motor: 6 V, DC

Power: 15W

Charger Input Voltage: AC 100V-240V, 50/60Hz

Charger Output Voltage: 9V, DC, 1A

Battery: 2000mAh

Charge Time: 3 hours (180 minutes)

Contact Us: cscare2021@gmail.com

Product Care and Maintenance

※Please read carefully before using ※

Please use the product follow the instructions.

- Please only use accessories provided by the manufacturer for repair and maintenance.
- Only use the charger provided. Unspecified charger or adapter may cause overheating, explosion, electric shock or fire.
- This product is intended for domestic use. Commercial use will cause premature breakdown of the product.
DO NOT attempt to repair this massager. There are no user-serviceable parts.



Warning: Injures and emergencies may occur if the instruction is not followed. Please stop using the product and contact us if wire or power cable are damaged.

100% Customer Satisfaction.
Customer Support
Phone: (516) 653-0666.
Email: cscare2021@gmail.com
www.IGIA.com
This is not a weight loss system, nor a medical device.
*Model, design, shape and color may vary. Fat Freezer Inc.

User Manual


First Time Charging

When using the product for the first time, please insert the charging adapter of the power adapter into the charging port and charge for 3 hours. The power indicator will light up, and the battery is full when 3 lights are shown up. (Please use the original power adapter from manufacture.)


Start Massaging

1. Turn on the switch, the power indicator lights up to show the power level, the massage roller start rotating, the default speed is the third gear, and the corresponding speed indicator is on.
2. Switch the speed control button to increase or decrease the speed level of the massage roller, and set an optimum speed for massage.
3. Turn on the infrared switch, the red light is on, press the infrared switch again, the red light is off.
4. Press the power switch, the massager stops, and the massage ends.


Product Components

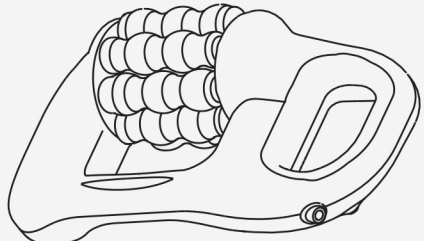

Roller Massager
GYM TRIM™

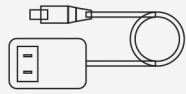

Charger

 

Product Manual

Troubleshooting

Performance	Solution
Unable to turn on	-Low battery. Please charge before using. -Make sure all product components are correctly assembled. -The product automatically stopped after 30 minutes continuous using. -Do not continuously use for more than 40 minutes to prevent over heating.
Unable to charge	-Please use the original power adapter cable. -Make sure the charging cable is connected correctly with charging port.
Slow rolling speed	-Low battery. Please charge. -Please make sure there is no stuff between roller and main body. -Please do not load more than 10kg of force.
Unable to switch speed	-The product starts rolling at 60% ordinary speed at beginning. -Speed varies depending on the loading force on product.

※ Please contact us for more troubleshooting.

Electric Rolling Massager: “Press+Tab+Rolling” to relieve pain and help increase blood circulation.



Lumbar Pain



Low Back Pain



Neck Pain



Knee Pain



 
Back & Spine Pain



Shoulder Pain



Shoulder Pain

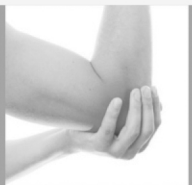

Elbow Pain



Neck Pain

Product Safety and Caution

- Keep product out of reach of children or pets.
- Keep the product away from heating appliances such as oven, microwave, hot cooking utensils, high pressure cooker. This may cause a degradation of the batteries and/or product malfunction.
- Do not use product on heat generating material. This may cause the batteries to overheat and cause malfunction or overheating.
- Do not apply heavy force to the product.
- Do not drop, apply excessive force or heavy weight over massager for it can cause malfunction and/or damages.
- Do not keep or use the product in areas where temperature changes drastically or where humidity is high. This may cause damage to electrical circuits and batteries.
- Do not use the massager with wet hands. Do not insert any object into the charger input. This may cause damage to the product or electric shock.

- Do not clean the product while using.
- Do not use product when it is wet or immersed in water.
- Do not put hand in the gap between the roller and the body during use to avoid finger injuries. Be careful not to get your hair caught.
- Please wrap the roller with massage cover when not use the product.
- The charging time is around 3 hours. Do not charge for a long time. Please unplug the power cord from the socket after charging.

Product Safety and Caution

- Do not take apart, modify or change the parts. This may cause electric shock and the product will no longer be covered under manufacturer warranty.
- Do not use the product other than the usage stated in the manual, for it can cause breakdown.
- Do not use during pregnancy. Pregnant women should consult their health care provider before using a massage tool.

- If you have a pre-existing medical condition including implants or pacemakers, consult with your physician prior to use.
- Do not use if you have blood clotting or are subject to blood clotting.
- Avoid use if you have bleeding disorders, low blood platelet counts and by people taking blood-thinning medications such as Warfarin. Consult with a physician prior to use.
- Do not use on areas of the body with blood clots, fractures, open or healing wounds, skin infections, weakened bones (such as from osteoporosis or cancer) or where there has been a recent surgery.
- Any direct pressure over a tumor usually is discouraged. Cancer patients should discuss any concerns about massage therapy with their oncologist.
- The product does not constitute medical treatment and is not a substitute for a medical examination or diagnosis. If you are dealing with a serious health condition check with your health care provider before using.

Warranty (1-Year Limited)

For your safety and to avoid any property damage, please read this manual carefully and use as indicated.

The manufacturer’s warranty is void under the following circumstances but not limited to:

1. Improper or inadequate maintenance or modification.
2. Accident, misuse, abuse, contamination or other external causes.
3. The use of unspecified adapter and accessories.
4. Loss or damage in transit.
5. Damages that occurs as a result of one’s failure to follow the instructions.

This Warranty does not apply to expendable or consumable parts and does not extend to any product from which the serial number has been removed.