## Item name: Cordless Picture Frame Light

Item number: 208104-01

## INSTALLATION (Picture Frame):

- 1. Loosen thumbscrew and detach the light from the base.
- 2. Mark a vertical line in the center of the frame. (on the back)
- 3. Install the base to the frame using the screws provided. (Use a minimum of 2 screws)
- 4. Replace picture; slide the light into the base and tighten thumbscrew.

## **INSTALLATION (Wall):**

- 1. Loosen thumbscrew and detach the light from the base.
- 2. Mark the wall (with a dot) at the center line of frame-level with the top of the frame.
- 3. After removing picture from the wall, draw a vertical line downwards from the dot.
- 4. Install the base to the wall using the screws and anchors provided. (using all 3 screw/anchors) is recommend, but use no less than 2.
- 5. Replace picture; slide the light into into the base and tighten thumbscrew.

## **BATTERY REPLACEMENT:**

- 1. Detach the light from the base
- 2. Turn light upside down
- 3. Using thumb, slide battery door towards oneself and remove.
- 4. Insert batteries.