


# Nail Clipper Mate<sup>TM</sup>

## Ergonomic Grip

Ergonomic firm-grip styling provides increased gripping power.


## Battery Replacement

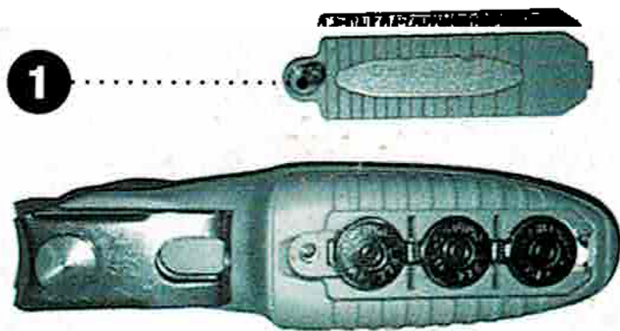

1. Carefully loosen screw (1)
2. Remove cover using your thumbnail or place a paper clip in the screw hole and gently pry up.
3. Remove and replace all batteries with #LR44 batteries.  
Do not mix old and new batteries.  
Do not mix alkaline, standard, or rechargeable batteries.
4. Replace cover and turn screw to close securely.  
Do not overtighten screw.

## Features

- A. Swiveling, Rotating Head
- B. Super Bright LED Light
- C. Durable Stainless Steel Blades
- D. Extended Easy Grip Handle for Increased Control
- E. Built-In Nail File

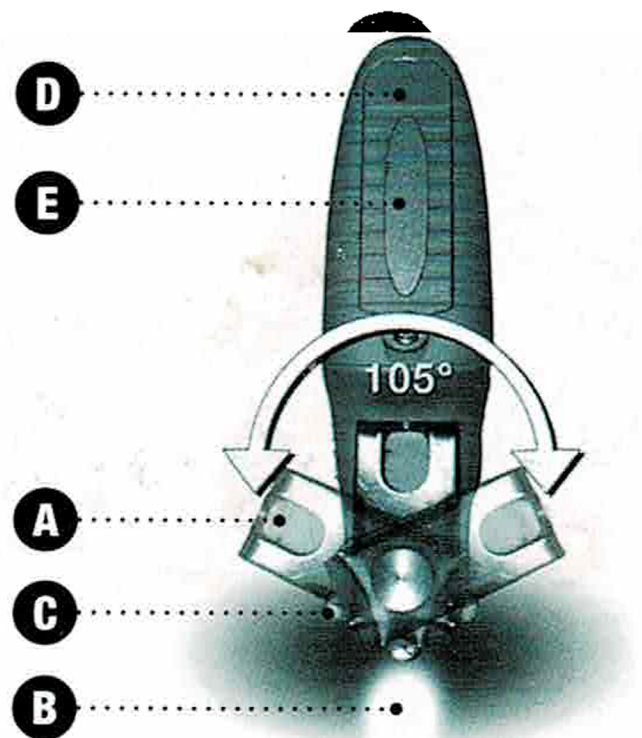

## Clipper Head Swivels

Clipper Head Swivels 105°  
Clips Your Nails Safely  
& Comfortably from Any Angle

# Nail Clipper Mate<sup>TM</sup>

**CLIP YOUR NAILS SAFELY  
& COMFORTABLY FROM  
ANY ANGLE**



## Important Safeguards

---

- This device is intended only for trimming or filing human fingernails and toenails.
- Do not use on irritated, ingrown, or infected fingernails or toenails.
- Consult a physician before use if any nail conditions exist.
- Do not rinse unit with water. Only clean the outside of the unit with a soft, dry cloth. Clean blade surfaces with alcohol and a cotton swab.
- If any part of the Wonder Clipper appears to be damaged or broken, discontinue use immediately.
- Exercise caution when using near children or near individuals with disabilities.

### Save These Instructions

## Tips

---

- For best results, soak nails in warm water for about 40 seconds before using the Wonder Clipper. Nails will also be ready for trimming after bathing or showering.
- Dry your fingers or toes thoroughly before using the Wonder Clipper. Avoid getting water inside your Wonder Clipper.