Instruction Manual

Item Name: Bluetooth Speaker Picnic Blanket

Item number: 208374-01

Picnic Blanket has a pair of dual-channel stereo speakers and speaker protection net with Bluetooth functionality. The Lithium-Ion battery is charged via the included Micro USB charging cable.

Instruction manual:

This product is a BT speaker, which is connected and using your device's wireless Bluetooth mode. Please be familiar with the following steps before use:

- 1. Please connect the speakers connection line to the BT wireless connect host by inserting 3.5mm audio line into the round hole of the BT battery box. The needle should be completely inserted into the round hole. Either hole can be used.
- 2. Turn on the BT Wireless connect box switch to ON, and the BT wireless connect indicator lights (blue) up, accompanied by a short boot tone. If your unit does not give these cues, please ensure it is fully charged.
- 3. When connecting BT wireless connect speaker with mobile phone, open Bluetooth mode of mobile phone, scan device, search local identification name, click on the connection, and after successful connection, there will be beep prompt sound.
- 4. When the connection is successful, the music will be played from the BT wireless connect speakers.
- 5. After use, please turn off the power switch to OFF.
- 6. Low power, produces multi-frequency beep sound. At this time, stop using and charge after shutdown.
- 7. Please use the charging line equipped with this unit for charging. Connect the USB charging port with output voltage = 5V. Do not use high voltage charging. When charging, the red indicator lights up. After filling, the red indicator lights out. After filling, unplug the charging line and stop charging.