




# UPSHOT



## PARTS OF THE BOW

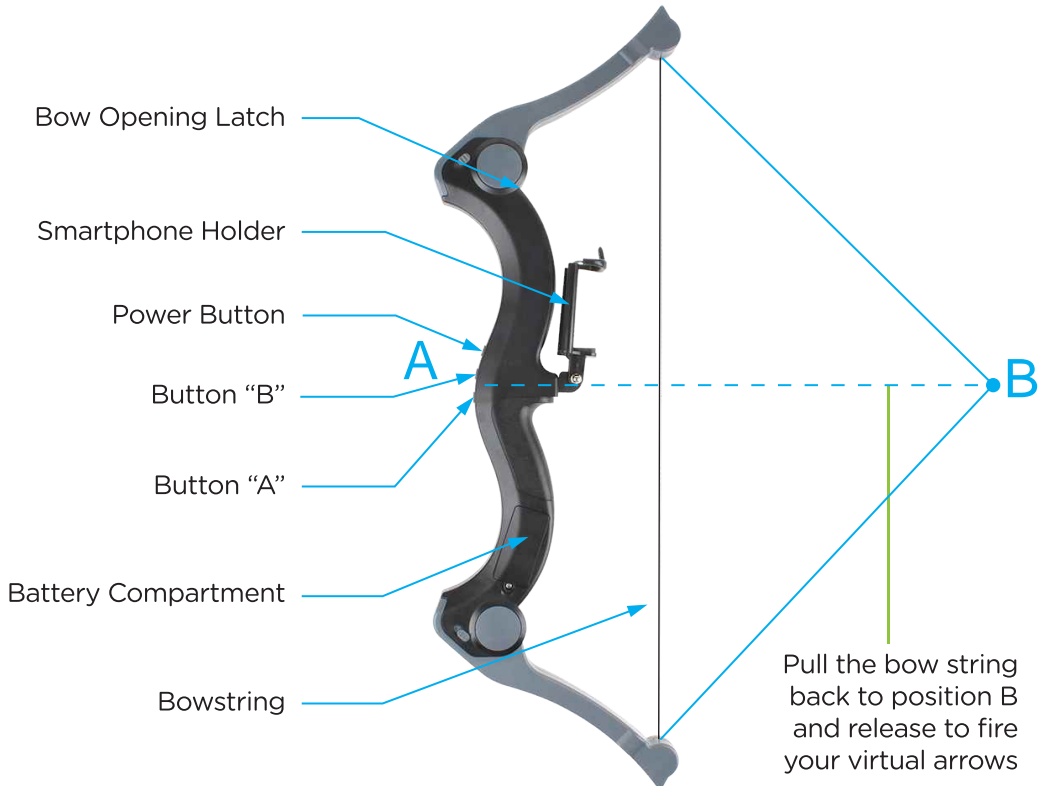

## INSTALLING THE BOW BATTERIES

1. Using a Phillips screwdriver, unscrew the battery cover screw and open.
2. Install 2x new AAA batteries taking care to match the correct polarity (+/-).
3. Close the cover and tighten the battery cover screw.



## DOWNLOAD THE APPS

UpShot is compatible with 3 APPs. To download either app scan a QR code below. Apple and Android users can also search for “Kig of Archer”, “Super Archer” or “VR Bow Hunt Deer” in the App Store and Google Play.

App Store QR Codes:



QR Code for the  
“King of Archer”  
App



QR Code for the  
“Super Archer”  
App



QR Code for the  
“VR Bow Hunt Deer”  
App

**Age rating for Bow Hunt 12+**

Google Play QR Codes:



QR Code for the  
“King of Archer”  
App



QR Code for the  
“Super Archer”  
App



QR Code for the  
“VR Bow Hunt Deer”  
App

**Age rating for Bow Hunt 12+**

## BLUETOOTH CONNECTION

1. Make sure your bluetooth is on, but you don't need to connect to the bow - the APP will automatically search and connect to your Bow.
2. Press the power button on the bow and then open either APP on your smartphone.
3. When you are finished playing long press the power button for 5 seconds to turn the bow off.



For questions or assistance on installation, parts or operation contact Odyssey Toys at 1-(305)-933-4480.

Hours of operation: 10:00am - 4:00pm EST

Email: [Care@OdysseyToys.com](mailto:Care@OdysseyToys.com)

Upshot

or visit us online at: [www.OdysseyToys.com/support](http://www.OdysseyToys.com/support)

Model - ODY420AR

20855 NE 16 AVE C-4, Miami FL, 33179

## CAUTIONS & WARNINGS

- Suitable for ages 9 and up. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away from the bow.
- If bow will be stored and unused for an extended period of time, please remove the batteries.
- Check the batteries regularly for potential leakage or corrosion that may occur.
- When installing the batteries carefully follow the polarity marking +/-.
- Do not mix different battery types.
- Remove exhausted or drained batteries.

FCC ID: 2AMJW-BOW

FCC STATEMENT: This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference receiver, including interference that may cause undesirable operation.

## CARE & MAINTENANCE

- Do not submerge the unit in any liquids.
- Keep the unit dry.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.

### 60 DAY LIMITED WARRANTY

Odyssey Marketing/ Odyssey Toys warrants to the original purchaser when used in USA only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of USA is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**\*\* THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES. EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS. \*\*** ©2017 Odyssey Marketing Corp.

MADE IN CHINA

