

■ WARRANTY

USJ-201 SWING MASTER

Consumer Limited Warranty: ONE-YEAR WARRANTY

This warranty guarantees that the product purchased is to be free from defects in material and workmanship under normal usage and local voltage for a period of one year. This warranty expires in **TWO (2) years on parts, and ONE (1) year on labor** after the date of purchase.

U.S. Jaclean, Inc. (referred to as "the Warrantor") will repair this product with new or rebuilt parts in case of defects in material or workmanship, free of charge, in the USA provided that:

- 1) The product is operated in accordance with the printed instructions supplied.
- 2) The product is used under normal conditions for which designed.
- 3) The product is not subjected to misuse, negligence, or accident.
- 4) The product receives proper care, protection, and maintenance.

This warranty is extended to the original end-user when purchased from an authorized U.S. Jaclean, Inc. distributor. A purchase receipt or other proof of date of the original purchase is required for service and parts replacement under this warranty. This warranty does not cover shipping charges for defective items if a claim is made more than 30 days after the date of purchase.

This warranty only covers failures due to defects in materials and workmanship, and does not cover normal wear or cosmetic damages. This warranty does not cover damages which occur in shipment, or failures which result from: accident, misuse (including, without limitation, failure to comply with instructions and use limitations contained in the Operating Instructions), abuse, neglect, mishandling, faulty installation, set-up adjustments, improper operation or maintenance, alteration, modification, power line surge, lightening, improper line voltage, commercial use such as hotel, office, restaurant, or other business or rental use of product, service by anyone other than from U.S. Jaclean, Inc., or damage that is attributable to "acts of God."

Continued use of this product after discovering a defect voids this warranty. This warranty shall be governed by the state of California, United States of America.

IMPORTANT: DO NOT return defective product to the store.

Contact U.S. Jaclean, Inc. for repair services.

Please retain this Warranty Certificate, together with the original purchase receipt, and present it to our technician for inspection during service.

For assistance and more information, please contact U.S. Jaclean, Inc.



SWING MASTER

AEROBIC EXERCISER



Thank you for purchasing the Swing Master.
Please read this manual carefully to ensure optimum performance and safety.

SAVE THESE INSTRUCTIONS

INSTRUCTION MANUAL



Distributed by U.S. Jaclean, Inc.
1816 West 135th Street
Gardena, CA 90249

1-800-241- 2221
9AM - 5PM PST (Monday - Friday)

usjclean.com

■ THE FIRST STEP TO A HEALTHY LIFE

Thank you for purchasing USJ-201 Swing Master.
Please read these instructions carefully before operation this machine. Please keep this instruction manual in a safe place, along with the purchase receipt for future reference.

Note: Due to constant upgrades, you may find slight differences between the design and functions stated in this manual and those on the actual device.

■ IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the machine from the electrical outlet immediately after use.
- Always unplug the machine from the electrical outlet before cleaning.
- To reduce the risk of short-circuit and fire, make sure that the power plug is inserted all the way into the outlet before each use.
- The machine should never be left unattended while plugged in. Always unplug the machine when not in use.
- Do not stand on the machine.
- Do not attach any accessories other than those recommended by the manufacturer.
- Never operate the machine if it has been dropped or damaged, if it has a damaged cord or plug, or if it has been exposed to or immersed in water.
- Keep the power cord away from heated surfaces.
- Only operate this machine under its intended usage, as described in this manual.
- To reduce the risk of injury, warm up and stretch prior to exercise. This will prepare muscles and joints for exertion.
- Immediately discontinue use if you experience illness, dizziness, nausea, discomfort, or other abnormal symptoms.
- Do not use this machine in a location of high humidity. Electric shock may occur.

■ FEATURES

- Variable-speed, handheld controller
- 15-minute automatic shut off
- Heavy-duty motor
- Padded vinyl ankle cradle




■ OPERATION

1. Place the Swing Master on a flat, even surface of the floor. Insert the power plug into a standard wall socket.
2. Lie on your back, placing your ankles on the footrest with the SWING MASTER under your feet, and relax.
3. Switch on the power by turning the speed control dial clockwise (to the right) from the ON/OFF position. To increase the intensity of motion, continue turning the dial clockwise toward the High Speed setting.
4. The machine contains a built-in timer. Each session lasts 15 minutes.

We recommend the following:

- Begin using the machine at a slow speed until you become familiar with the unit. Gradually increase the speed according to your needs.
- Remain lying down for 2-3 minutes after using the machine.
- Do not use this machine in the 30 minutes immediately following a meal.
- Drink a glass of water before and after each session.

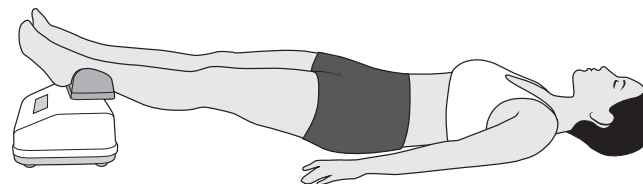

■ MAINTENANCE

- Disconnect the power plug from the wall socket before cleaning the Swing Master. Wipe the entire machine with a soft, damp cloth. Do not immerse the machine into any liquids for cleaning.
- When the Swing Master is not being used, store it in a dry location. Do not store this machine near intense heat or an open flame.
- Do not leave this machine under direct sunlight for prolonged periods of time.
- Do not twist or wrap the power cord around the machine.
- Keep the Swing Master out of the reach of pets and young children.

■ SPECIFICATIONS

Product Name: Swing Master
Model #: USJ-201
Power Supply: AC 120V–60Hz
Power Consumption: 15W
Weight: 8.3 lbs.
Dimensions: 9 x 8 x 11.5 inches