



# Inflatable Car Travel Air Mattress

Zone Tech inflatable mattress is your trusted travel companion, providing everything you need for on-the-go living. A good use during road trips, long trips, hiking, camping, and any outdoor activities.



Package Content


## How to Inflate the mattress:



1. Unpack the carrying bag and remove the air bed.



2. Take out the other content, and prepare the air pump.

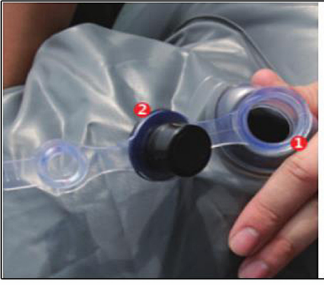

3. Open the large valve of the mattress.



4. Insert the cigarette lighter plug into the air pump and turn on the switch. Note: Start the car 3-4 mins then insert the air pump.



5. Attached the large nozzle into the air pump.



6. Inflate the air bed 70% using the large nozzle and cover the lid of the large valve.



7. Cover the lid of the large valve.



8. Use the middle size nozzle to fill the air bed.



9. Close the lid of the middle valve once the bed is fully inflated press firmly the valve into the mattress.

## Tips

1. Before you inflate your bed, make sure you set your air mattress somewhere that's free of potential popping hazards.
2. Excessive heat can also damage your air bed, so distance it from space heaters, heat vents, or campfires.
3. Inflate your mattress to the proper capacity. Over-inflating your mattress will put stress on the seams and could cause a blowout.
4. Repair kit contains chemical, do not put in your eyes. Keep it away from children.

Thank you for purchasing our product



36 Chadwick Street  
Paterson NJ 07503  
info@zonetechauto.com  
718-480-5123