



**DO** use ambient light as a way to activate your music box.

Your music box is fitted with a light sensor that uses the lid of the music box and the light within the room to know when to turn on and turn off.

**DO** charge your music box periodically.

Letting the battery drain completely is not recommended. Overtime, the battery can degrade and will no longer be able to reach a full charge. Eventually, the battery will be unable to keep a charge.

Please use included USB cable for charging. We recommend using a wall adapter.

**DON'T** pry open your music box.

Please do not forcefully open the music box housing. This can damage internal components as well as sever wires. Please contacts us first if you have any problems.

**DON'T** leave your music box in direct sunlight.

Overtime, direct sunlight can comprise the integrity of the music box. The type of battery used in our music box is very powerful and can keep a charge for hours of playing time. With that said, be mindful as this type of battery can heat up when exposed to direct sunlight. Prolong exposure can compromise the internal electrical components including the battery.

## UPLOADING YOUR OWN MUSIC

Uploading the music yourself gives you the freedom to be as creative and expressive as you would like to be. Surprise your love ones with a new message every day or a song that fits the moment. Whatever your reasons, you will find that it is a simple process to change out the content of your sound module music box.

### Loading the sound module

- Plug male side of micro USB cord (included) into music box
- Plug other end into available USB port on computer
- Open windows explorer (should automatically open when plugged in)
- Go to folder titled "music" located in the sound module drive
- Locate your audio file (.mp3)
- Drag and drop (click file, hold, drag over to music folder, and unclick)

### TIPS

If you have multiple music files and want them to play in a particular order just add the prefix; 1\_ , 2\_ , 3\_ to the title of the file name. (For example: 1\_you are my... , 2\_somewhere over the rainbow...)

- Supports .mp3 files only
- 95 mb onboard storage
- 90 mins for complete charge
- 3 hrs of continous play (on full charge)

\* Keep in mind, you might need to edit the file to obtain optimal quality.

If you've purchased the (L1) module there will be no on/off switch or volume control. The (L2) module will have the on/off switch but no volume control. Only the (L3) has the on/off switch plus volume control.

### Still have questions?

call us at

(866) 622-8842

or email us at

[help@musicboxattic.com](mailto:help@musicboxattic.com)