


UNCOMMON
CARRY



RGB TUBE CLOCK

USER GUIDE

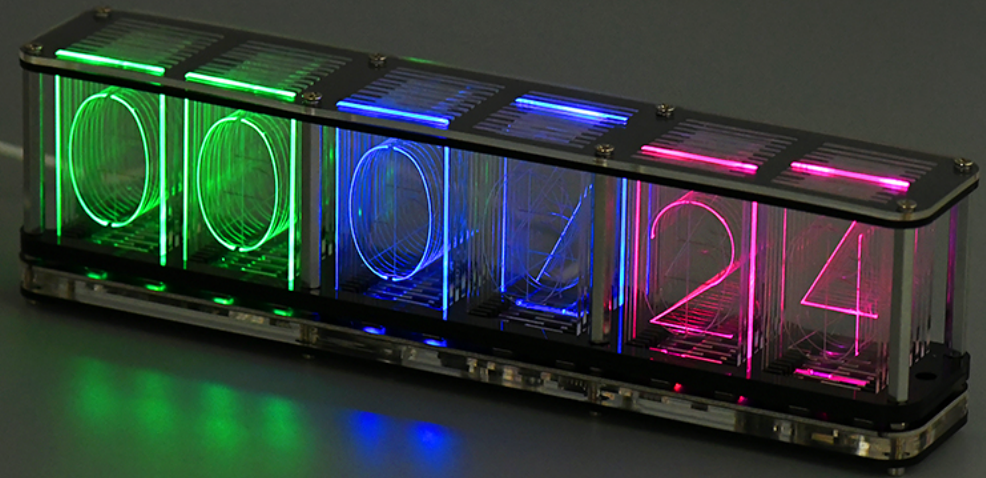

DISTRIBUTED BY
UNCOMMON CARRY

207-536-1174
www.uncommoncarry.com
10 W Point Ln., Suite 10-215,
Biddeford, ME 04005

TABLE OF CONTENT

RGB TUBE CLOCK

FEATURES

- 01 ALARM FUNCTION
- 02 TIMER FUNCTION
- 03 STOPWATCH FUNCTION
- 04 AURORA GRADIENT EFFECT
- 05 HIGHLIGHT RGB COLOR EFFECTS
- 06 MUSIC SPECTRUM DISPLAY FUNCTION

SPECS

HIGH-PRECISION

DS3231 CLOCK CHIP

MULTI-LAYER

ACRYLIC SHELL

OVERALL SIZE

10"x 1.8"x 2.75"
(25.2*4.6*7cm)

WEIGHT

1.15 lbs (520g)

POWER SUPPLY

USB DC 5V

INSTRUCTIONS



SETTING BUTTON



SWITCH BUTTON



Long press the setting button to:
SWITCH {
 CLOCK MODE FUNCTION
 MUSIC SPECTRUM DISPLAY FUNCTION



Short press the setting button to:
PAUSE THE COLOR CHANGE



Short press the switch button to:
SWITCH THE COLOR EFFECT

Color Effect List:

- 01 Rainbow gradient effect
- 02 Two grid cool color gradient effect
- 03 Aurora color gradient effect
- 04 Two grid rainbow gradient
- 05 Full color gradient effect
- 06 Two-cell Aurora color gradient effect
- 07 Cool aurora gradient effect
- 08 Full color same color gradient effect
- 09 Display custom colors

CLOCK MODE



ENTER & EXIT MENU:

Press setting & switch button at the same time.



SWITCH BETWEEN PARAMETERS:

Short touch the switch button.

Parameters List:

- | | |
|---------------------------------------|--|
| 00 Time Setting | 08 Switch voice-activated wake-up function |
| 01 Date setting | 09 Custom number color |
| 02 Alarm setting | 10 Set the hourly and half-hourly chime animation effect |
| 03 Format setting | 11 Set the second digital conversion effect |
| 04 Switching effect selection | 12 Countdown function |
| 05 Switching duration setting | 13 Stopwatch function |
| 06 LED effect selection at the bottom | 14 Set the color gradation speed |
| 07 Switch automatic dimming function | |



ENTER THE SETTINGS:

Short press the setting button.



MODIFY PARAMETER VALUE:

After you entered the settings, use the switch button to modify parameter value.

PARAMETER SETTINGS:

00 TIME SETTING



Press switch button to modify the flashing parameter value.



Press setting button to confirm the modification.

01 DATE SETTING

The modification sequence is: **year-month-day**.

02 ALARM SETTING

0-Turn on the alarm and enter the alarm time setting.

1-**0**- Turn off the alarm.

03 FORMAT SETTING

0- **HOUR FORMAT**: 24-24 hour system mode / 12-12 hour system mode

1- **DATE FORMAT**: 12-31: month-day mode / 31-12: day-month mode

2- **TEMPERATURE FORMAT**: Celsius / Fahrenheit

04 SWITCHING EFFECT SELECTION

0-Only time display

1-Sweeping effect from left to right

2-Overall sweeping effect

3-The middle to the two sides one by one lighting effect

4-Light up the effect one by one from left to right

5-Random sweep effect

6-Sweeping effect from the middle to both sides

Note: The order of switching display is: time-temperature-date week

05 SWITCHING DURATION SETTING

- Switch every 5 seconds;
- Switch every -10 seconds;
- Switch every -30 seconds;
- Switch every -60 seconds;
- Switch every 5 minutes;
- Switch every 10 minutes;
- Switch every 15 minutes;
- Switch every 30 minutes;
- Switch every 60 minutes;

06 LED EFFECT SELECTION AT THE BOTTOM

- 0-Turn off the bottom LED effect
- 1-Rainbow color gradient
- 2-Press the button to turn off the light
- 3-Cool color gradient
- 4-Candlelight color effect
- 5-Aurora color gradient

07 SWITCH AUTOMATIC DIMMING FUNCTION

- 0-TURN OFF dark mode
- 1-TURN ON the automatic dark mode
When the ambient light is detected to be dark, it will automatically enter the low brightness mode.

08 SWITCH VOICE-ACTIVATED WAKE-UP FUNCTION

- 0-TURN OFF the voice-activated wake-up function
- 1-TURN ON the voice-activated wake-up function
Tap the desktop or press any touch button to wake up.

09 CUSTOMIZE THE COLOR OF THE NUMBER



Press switch button to modify the color value of the flashing number (a total of 17 colors).



Press setting button to confirm the modified color and enter the color setting of the next number.

10 SET THE HOURLY AND HALF-HOURLY CHIME ANIMATION EFFECT

- 0-No conversion effect
- 1-Sweeping effect
- 2-Fading effect
- 3-Mixing effect - the hourly chime enters the sweep effect, the half-hourly chime enters the fade effect

11 SET THE DIGITAL CONVERSION EFFECT OF SECONDS

- 0-No transformation effect
- 1-Digital progressive effect
- 2-Digital breathing effect
- 3-Mixed effect-automatically switch every day

12 COUNTDOWN FUNCTION

Enter the minutes and seconds, press the set button (square icon) to start the countdown, the countdown ends the buzzer buzzer, and any touch key to exit the countdown;

13 STOPWATCH FUNCTION

- Maximum timing is 99 minutes, 60 seconds, and 990 milliseconds.



START TIMING:

Press switch button.



PAUSE TIMING:

Press switch button again.



RESET THE TIMER:

Press switch button again.



EXIT THE STOPWATCH:

Press setting button.

14 SET THE COLOR GRADIENT SPEED

- Seven level settings 1-7: from fast to slow;

15 TEST THE QUALITY OF LED



SWITCH THE TEST COLOR:

Press the switch button to switch the test color.

A total of three colors of red, green and blue are tested.



EXIT THE TEST:

Press setting button.

MUSIC SPECTRUM MODE

- To enter the music spectrum mode you only need to put out the music playback device (mobile phone, speaker, MP3 player, etc.).
- **MUSIC SPECTRUM BOUNCE EFFECT** is better when placed on the back of the microphone.