Electric Peeler Manual



PL907E

1.Product Structure



2.Product Features

a. Advanced Technology

The first hand-held electric peeler with unique patent all over the world.

b. Safe Design

Using low voltage DC motor which is much safer to use. Ergonomic Handle Design provides a soft and comfortable grip when using.

c. High Quality Rechargeable Battery

Built-in efficient and high quality lithium battery provides a long life time use.

d. Compact Appearance Design

Made of environmental material in a fashion and ergonomic design.

3.Functions



a.One-edge Peeler:

This blade is designed to peel thicker fruits and vegetables specially.

With one-edge blade, peel them with only one direction as you want.

b.Y Peeler

The Y Peeler is named after its Y-shaped handle, Y peelers tend to be ambidextrous and can peel fruits and vegetables in two-way. It's more suitable for thinner fruits and vegetables.

c.Julienne Peeler

It creates fine shreds of vegetables such as carrots and zucchini: it is also excellent in extracting zest from citrus fruits like lemon 7. Troubleshooting

4.Product Operation

- a. Open the package, check the product and accessories
- b. Press power button, check if the peeler works correctly or not then turn it off
- c. Choose one blade and then plug it into the front dashboard following the installation guide.





- d. Press the power button and start your cooking journey.
- e. If need to change the blade, just take it out and repeat step C and D.

5.Package included

| a. | PL907E X 1 | c. | Charging Cable X 1 |
|----|------------|----|--------------------|
| b. | Blades X 3 | d. | User Manual X 1 |

6.Cautions

- a. Please charge peeler with standard 5V voltage and output 1A current, avoiding battery damage or affecting service life.
- b. Don't charge peeler with excessive current in case of battery or adapter damage.
- c. Please clean the used blades after paring for the sake of blades' service life. Put the shell back to storage when the

product is cleaned and dried out.

- d. Sharp edges, Handle with care. Never peel towards your
- e. Do not wash the handle with running water. And it's also not applicable to dishwasher.
- f. Blades are dishwasher safe. Easy clean with running water.

| Problem | Possible Reason | Solution | |
|------------------------|---------------------------------|--------------------------|--|
| Stop working | Battery ran out of power | | |
| Not powerful enough | Battery is running out of power | Recharging the Peeler | |

8. Specifications

| Model | PL907E | |
|------------------|--------------|--|
| Voltage | DC 3.7V | |
| Power | 2W | |
| Battery Capacity | 1500mA | |
| Dimensions | 190*90*60 mm | |

9. Care and Maintenance

- a. Take moisture-proof, anti-sun and anti-pollution measures.
- b. Clean the fuselage should be in the state of shutdown.
- c. The product should be placed in a safe place after use.
- d. Please keep the professional technician in service when there is a failure disassembly of products.

10.Warranty

Any questions please feel free to contact: Service Email: info@unitefortune.com