

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCE RADIO/TV TECHNICIAN FOR HELP.

Made In Taiwan
Franklin Sports Inc.
Stoughton, MA 02072

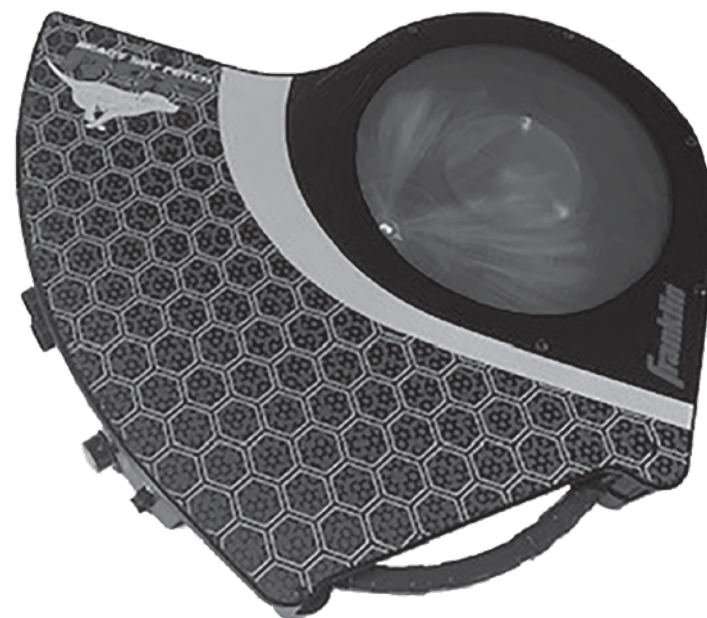 


For replacement parts:
Visit: franklinsports.com/instructions
Email: parts@franklinsports.com
Call: 1-800-225-8649



FLYING DISC LAUNCHER

ITEM NUMBER: **90080X**



PATENT PENDING



ALWAYS read, understand and follow all warnings and instructions for your RSF Disc Launcher before use. Keep for future reference.

NOTE: PRINT FRONT TO BACK, BOOKLET STYLE



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **franklinsports.com/instructions**

If possible, please include product part number and parts description so we can best assist you.

WE'RE HERE FOR YOU!

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!



ITEM#: **90080X**

1

For replacement parts:
Visit: franklinsports.com/instructions
Email: parts@franklinsports.com
Call: 1-800-225-8649

SAFETY INFORMATION

- The user must read and understand these Instruction sheets prior to use.
- Please inspect your RSF Flying Disc Launcher for signs of wear, damage and fatigue before each use. If damaged, do not use.
- This product is only intended for recreational use to throw Flying Discs (diameter approximately 8.75in/22.2cm). Franklin RSF Flying Discs are recommended for best performance. Do not use any other disc in the machine. Doing so may cause damage to your machine or injury.
- Never attempt to remove a disc that is inside the machine when powered on. If a disc is stuck, turn the machine off and disconnect the power. Wait until the motor and wheels stop moving.
- Your RSF Flying Disc Launcher is NOT a child's toy.
- Do not attempt to modify your RSF Flying Disc Launcher or any of the system components.
- Review all warnings and instructions carefully before using your RSF Flying Disc Launcher.



WARNING:

To prevent **SERIOUS INJURY:**

- **INSPECT** for signs of wear, corrosion, and fatigue BEFORE each use. **DO NOT** use if damaged.
- **DO NOT** operate when any part of the machine is wet or standing in water. **DO NOT** use when raining. An electric shock hazard may exist if the unit is plugged in while or after it has been exposed to water.
- **DO NOT** attempt to modify your RSF Flying Disc Launcher or any of the system components.
- **NEVER** stand or allow your pet to stand directly in front of the Flying Disc Launcher
- **DO NOT** point toward breakable objects, including windows, light fixtures, and picture frames.
- **DO NOT** point toward people or the animal.
- **DO NOT** put hands or fingers inside the machine or put your body in front of the launcher when the machine is on.
- **DO NOT** allow pets to put their face or paws inside the machine.
- **ENSURE** all people, pets and breakable objects are not in the path of the launcher.
- **IMPROPER** use could result in physical injury.
- **ALWAYS** ensure pets health during use.
- **NOT** intended for indoor use or wet conditions.

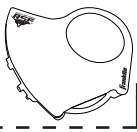 


 


 


ITEM#: **90080X**

2

For replacement parts:
Visit: franklinsports.com/instructions
Email: parts@franklinsports.com
Call: 1-800-225-8649

PARTS LIST

A  Main Unit QTY x1	B  Foot Connector QTY x3	C  Power Adaptor QTY x1	D  Straight Steel leg QTY x2
E  Adjustable Steel Leg QTY x1	F  Screws QTY x12	G  Disc QTY x1	
Rep. Part: 90080X-R2		Rep. Part: 90080X-R1	

Note: Additional disc can be purchased at FRANLINSports.COM Item # 90081Z

SET UP AND PLAY INSTRUCTIONS

SET UP

Step 1. Remove all components from the carton.

Step 2. Flip the main unit Part A upside down and place on a protected surface. Locate Part B foot connectors and Part F screws. With a Philips head screw driver (not included) attach the connectors to the main unit.

Step 3. Insert and twist Part D straight steel legs to the front foot connectors. Make sure you hear the click to ensure it is locked and secure.

Step 4 Insert the Adjustable Steel Leg Part E into the foot connector closes to the handle. Make sure the leg locks in position.

Step 5. Flip the main unit onto its legs.

Step 6. Insert the Power Adaptor into the machine and then into the 120V standard power outlet. Wait for the red light to turn off to confirm the battery is charged and ready to use.

Step 7. Now you are ready to play. Find a suitable open area that is safe for your pet to play. Position the machine on a flat surface.

FEATURES

- **On/off /Power Dial-** Turn on and off and Set the distance based on how much area your dog has to run. The disc will launch up to 75 ft (22.9m) based on weather conditions.
- **Height Adjustment-** The back leg can be adjusted to get different angles.
- **Rechargeable Battery-** Insert the Power Adaptor into the machine and then into the 120V standard power outlet. When charging the red light will turn on, wait for the red light to turn off to confirm machine is fully charged and ready for use.
- **Please Note-** Charger will automatically turn off once the machine is fully charged. To recharge simply replug the machine back into a power outlet. The machine will stay in the off position when the charger is connected, make sure to unplug the power adaptor to use machine.

PLAY

Turn the unit on and select the desired launch distance. Make sure you select the proper distance for play area.

- Insert only one RSF disc into the machine at a time.
- Teach your dog to fetch for continuous play.
- Readjust the position of the RSF Disc Launcher as needed.



WARNING:

To prevent **SERIOUS INJURY** or **PROPERTY DAMAGE:**

- Never put hands or fingers inside the RSF Flying Disc Launcher.
- Make sure all persons and pets are clear of the RSF Flying Disc Launcher and the path of the disc before powering on.
- Only USE RSF Flying disc (8.75in/22.2cm diameter) with your RSF Flying Disc Launcher. Never attempt to use your RSF Flying Disc Launcher with any other object.



WARNING:

To prevent serious injury to your pet:

- **ALWAYS** consider your pet's health during use.
- **NEVER** exercise your pet to the point of exhaustion. Turn the RSF Flying Disc Launcher off when your pet needs to rest and recover.



WARNING



THIS PRODUCT IS NOT INTENDED FOR USE BY CHILDREN

- Do not put hands or fingers inside the machine or put your body in front of the launcher when the machine is on.
- Do not allow pets to put their face or paws inside the machine.
- Ensure all people, pets and breakable objects are not in the path of the launcher.
- Improper use could result in physical injury.
- Always ensure pet's health during use.
- Not intended for indoor use or wet conditions.

Adults supervision is required, this is **NOT A CHILD'S TOY.**



WARNING:

- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- Risk of fire, explosion, or burns.
- Do not disassemble or incinerate.
- Do not overcharge battery.

AFTER PLAY

1. ALWAYS turn your RSF Flying Disc Launcher OFF after use. Turn the Dial to off until it clicks off. Also remove the power adaptor from the input.
2. Store your RSF Flying Disc Launcher indoors after play in a clean, dry and dust free location.



NOTE: DO NOT LEAVE THE UNIT OUTSIDE. WATER MAY CORRODE THE INTERNAL COMPONENTS CAUSING THE RSF FLYING DISC LAUNCHER TO NO LONGER FUNCTION PROPERLY.

MAINTENANCE & CLEANING

- Your RSF Flying Disc Launcher requires no regular maintenance.
- If your RSF Flying Disc Launcher needs to be cleaned, use a slightly damp cloth. DO NOT use chemicals or abrasive cleaners.
- ALWAYS turn your RSF Flying Disc Launcher OFF prior to cleaning.
- DO NOT attempt to clean the launch mechanism.



ITEM#: **90080X**

5

For replacement parts:
Visit: franklinports.com/instructions
Email: parts@franklinports.com
Call: 1-800-225-8649

FREQUENTLY ASKED QUESTIONS

- Do I have to use only the RSF Flying Disc in the launcher?
Our RSF discs perform the best, They are the optimal weight and diameter.
- If my dog slobbers a lot and the disc is super wet will the disc still launch? Yes, the disc will launch but the distance will be decreased. Please use dry discs or wipe prior to inserting in the machine.
- How do I get the best performance from the machine? Charge the machine 100% prior to use or Use the included power adaptor.
- What if I left the machine outdoors and the machine has some slight dew on it? Use a cloth to remove the excess moisture and wait for the unit to dry before powering on. This unit is not meant to get wet so please store inside.
- Why won't the machine power on? Check to ensure the unit is charged and you see a green light. If no visible light try recharging. You can also try turning the power dial on.
- What happens if I put other things into the machine? This is very dangerous. You should only use the RSF flying disc with this machine. Failure to do so may cause injury or damage to your machine.

CAUTION:

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE:

THE EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE; PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:



ITEM#: **90080X**

6

For replacement parts:
Visit: franklinports.com/instructions
Email: parts@franklinports.com
Call: 1-800-225-8649