

AFTER PLAY

1. ALWAYS turn your RSF Automatic Pet Launcher OFF after use. Turn the Distance Dial to off until it clicks off. Also remove the power adaptor from the input. Wait for the motor to stop.
2. Store your RSF Automatic Pet Launcher indoors after play in a clean and dry location.



NOTE: DO NOT LEAVE THE UNIT OUTSIDE. WATER MAY CORRODE THE INTERNAL COMPONENTS CAUSING THE RSF AUTOMATIC PET LAUNCHER TO NO LONGER FUNCTION PROPERLY.

MAINTENANCE & CLEANING

- Your RSF Automatic Pet Launcher requires no regular maintenance.
- If your RSF Automatic Pet Launcher needs to be cleaned, use a slightly damp cloth. DO NOT use chemicals or abrasive cleaners.
- ALWAYS turn your RSF Automatic Pet Launcher OFF prior to cleaning. DO NOT attempt to clean the launch mechanism.

FREQUENTLY ASKED QUESTIONS

- Do I have to use only the RSF Automatic Tennis Ball or all weather ball?
Our RSF tennis balls or all weather ball perform the best, however most other tennis balls that are approximately the same size and weight (e.g. official tennis balls) should launch.
- If my dog slobbers a lot and the ball is super wet will the ball still launch? Yes, the ball will launch but the distance will be decreased. Use a dry ball or all weather ball for optimal performance.
- How do you get the best performance from the machine? Use the included power adaptor and a fresh ball.
- If the distance is not being met what should I do? Check the power dial? Check the height trajectory and ensure its at the highest position, and lastly use a new ball.
- What if I left the machine outdoors and the machine has some slight dew on it?
Use a cloth to remove the excess moisture and wait for the unit to dry before powering on.
- Why won't the machine power on? Check to ensure the power adaptor is plugged in. Check to make sure the power dial is turned on and also if you are using batteries you may need to replace them.
- What happens if I put other things into the hopper? This is very dangerous. You should only use tennis balls or all weather balls with this machine. Failure to do so may cause injury or damage to your machine.

Made In China
Franklin Sports Inc.
Stoughton, MA 02072



For replacement parts:
Visit: www.franklinsports.com/90120X
Email: parts@franklinsports.com
Call: 1-800-225-8649



AUTOMATIC PET LAUNCHER

ITEM NUMBER: **90120X**

For all your replacement part needs, please visit:
www.franklinsports.com/90120X



This unit is equipped with a warning sensor for an audible sound ball launching alert. This can be turned **ON** or **OFF** depending on your pets preference in training.



ALWAYS read, understand and follow all warnings and instructions for your RSF Pet Launcher before use. Keep for future reference.

NOTE: PRINT FRONT TO BACK, BOOKLET STYLE



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: **www.franklinsports.com/90120X**

If possible, please include product part number and parts description so we can best assist you.

WE'RE HERE FOR YOU!

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!



ITEM#: **90120X**

1

For replacement parts:
Visit: www.franklinsports.com/90120X
Email: parts@franklinsports.com
Call: 1-800-225-8649



WARNING:

To prevent **SERIOUS INJURY** or **PROPERTY DAMAGE**:

- **NEVER** put hands or fingers inside the RSF Automatic Pet Launcher or look down the barrel when the unit is powered on and the motors are in use.
- Make sure all persons and pets are clear of the RSF Automatic Pet Launcher and the path of the ball before powering on.
- Only USE provided balls or tennis balls of the same diameter (2.6 in/ 6.6cm diameter) with your RSF Automatic Pet Launcher. Never attempt to use your RSF Automatic Pet Launcher with any other type of ball or foreign object.



WARNING:

To prevent **SERIOUS INJURY TO YOUR PET**:

- **NEVER** allow your pet to place any part of their body inside the RSF Automatic Pet Launcher or look down the barrel when the unit is ON.
- **ALWAYS** consider your pet's health during use.
- **NEVER** exercise your pet to the point of exhaustion. Turn the RSF Automatic Pet Launcher off when your pet needs to rest and recover.

WARNING:

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THE EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE; PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THE EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

 
 


ITEM#: **90120X**

6

For replacement parts:
Visit: www.franklinsports.com/90120X
Email: parts@franklinsports.com
Call: 1-800-225-8649



STEP 3

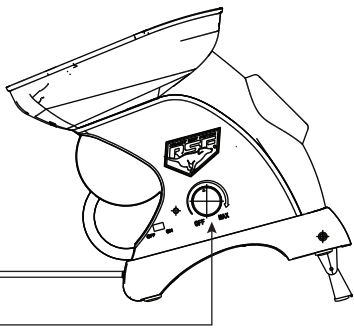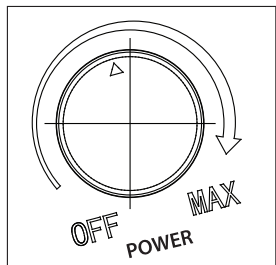

NOTE

Use the distance dial to turn on/off and to select the desired distance.

  STEP 4

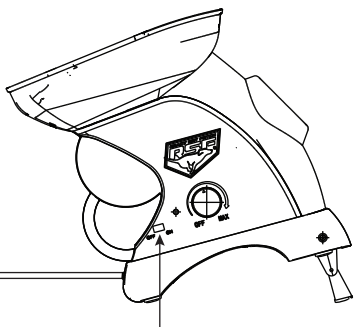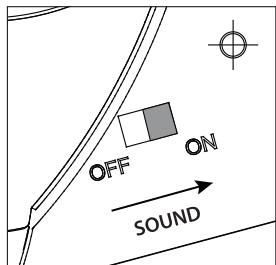

NOTE

Turn the warning indicator to the on position. You may choose to shut this sound off if the noise is bothering you and your pet is trained on the device.

YOU ARE NOW READY TO PLAY!

PLAY

To play, turn the POWER dial to full power then adjust back to the desired power level. This will engage the ball feeding mechanism. Most pets need time to adjust to the sound of the motor. Some training may be required.

Consider using the ball launch warning sensor by turning the switch on or off. Make sure you select the proper power setting for play area.

Wait for the motor speed to power up then insert only one ball into the hopper at a time. Train your pet to retrieve the ball.

Readjust the position of the launcher as needed. Supervision is required. Watch to ensure your RSF Automatic Pet Launcher stays upright and is functioning properly at all times. Use DRY tennis balls or all weather balls for optimal performance.

SAFETY INFORMATION

- The user must read and understand these Instruction sheets prior to use.
- Please inspect your RSF Pet Launcher for signs of wear, damage and fatigue before each use. If damaged, do not use.
- This product is only intended for recreational use to throw tennis ball sized (diameter approximately 2.6 in/ 6.6cm) or provided all weather ball. The official RSF Tennis Balls and all weather balls are recommended for best performance. Other official size tennis balls may be used. Do not use any other type of ball in the machine. Doing so may cause damage to your machine or injury.
- Never attempt to remove a ball that is inside the machine when powered on. If a ball is stuck, turn the machine off and disconnect the power. Wait until the motor and wheels stop moving.
- Your RSF Pet Launcher is NOT a child's toy.
- Do not attempt to modify your RSF Pet Launcher or any of the system components.
- Review all warnings and instructions carefully before using your RSF Automatic Pet Launcher.



WARNING

THIS PRODUCT IS NOT INTENDED FOR USE BY CHILDREN

- Do not put hands or fingers inside the chute or put your face in front of the chute when launcher is on.
- Do not allow pet to put their face or paws into the chute when launcher is on.
- Ensure all people, pets and breakable objects are not in the path of the launcher.
- Improper use could result in physical injury.
- Always ensure pet's health during use.
- Not intended for indoor use or wet conditions.

Adult supervision is required, this is **NOT A CHILD'S TOY.**


 

 
 


WARNING:

To prevent **SERIOUS INJURY:**

- **INSPECT** for signs of wear, corrosion, and fatigue **BEFORE** each use. **DO NOT** use if damaged.
- **DO NOT** operate when any part of the machine is wet or standing in water.
- **DO NOT** use when raining. An electric shock hazard may exist if the unit is plugged in while or after it has been exposed to water.
- **DO NOT** attempt to modify your RSF PET LAUNCHER or any of the system components.
- **NEVER** stand or allow your pet to stand directly in front of the RSF PET LAUNCHER.
- **DO NOT** point toward breakable objects, including windows, light fixtures, and picture frames.
- **DO NOT** point toward people or the pet.

PARTS LIST

| | | | |
|---|---|--|---|
| A  RSF Pet Launcher Rep. Part: N/A | B  Power Adaptor Rep. Part: 90038-R1 | C  Official RSF Tennis Ball Rep. Part: 90038-R2 | D  Screw Driver Rep. Part: N/A |
| E  All Weather Ball Rep. Part: 90077 | | | |

GENERAL NOTES

Your RSF Pet Launcher is best used with the included power adaptor for unlimited playing time.

There is an optional battery compartment which holds [8] size "D" Alkaline batteries, use small Phillips head screwdriver to open compartment. (batteries sold separately)

Requires 8 "D" size batteries (not included).

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

Rechargeable "D" size batteries may also be used. 10000 mAh Ni-MH D cell (sold separately)

 
QUICK FEATURE GUIDE

Ball Hopper:

Insert only one ball into the hopper at a time.

Battery Compartment:

Holds [8] D Alkaline batteries.
(Batteries Not Included)

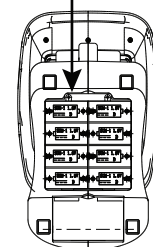

Warning Sensor:

This feature should be used for an audible warning sound to alert the user and/or pet the ball will be launched.

Power Input:

Use an extension cord to the desired location and plug the power adaptor into the outlet, then plug into the back of the unit.

Height Adjustment:

Set the front foot to the desired position.

Power On/Off Distance Dial:

 
Set the distance based on how much area your pet has to run. The ball will launch up to 40 ft (12.2m)

ASSEMBLY INSTRUCTIONS

GENERAL NOTES

Make sure your RSF Automatic Pet Launcher is on a flat, level surface before each use.


STEP 1

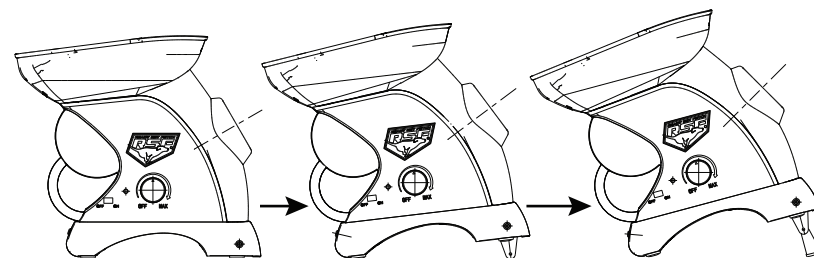

NOTE

Adjust the front foot of the **RSF Pet Launcher (A)** to the desired trajectory.

 STEP 2

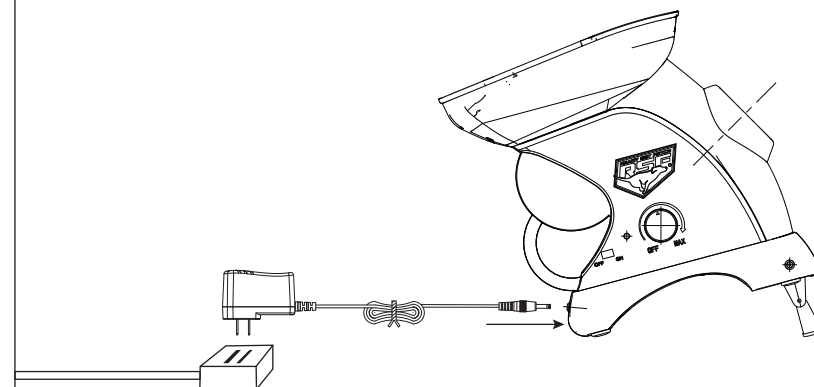

NOTE

Use an extension cord (not included) to the desired location and plug the **Power Adaptor (B)** into the outlet, then plug into the back of the **RSF Pet Launcher (A)**.