


Time Timer[®]


WASH[™] + Soap Dispenser

Automatic Soap Dispenser with Visual Handwash Timer

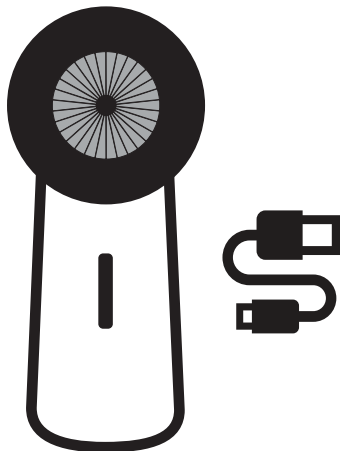

1. CHARGE DISPENSER


Dispenser does not need to remain plugged in for operation.

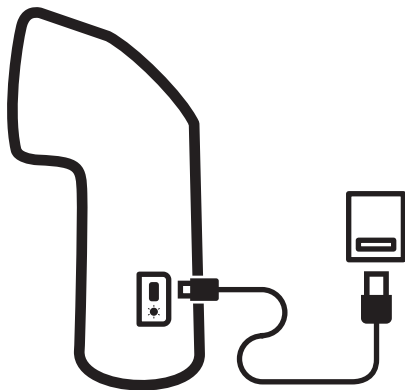


Solid green light represents full charge. Low battery indicator will display on the face.

2. FILL PUMP


Note: Do not overfill. Do not use exfoliating soap, foaming soap, or hand sanitizer.

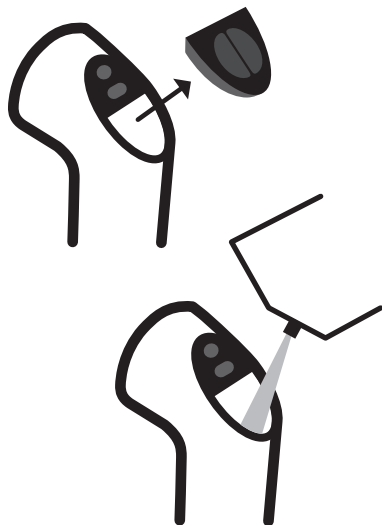

3. ON/OFF

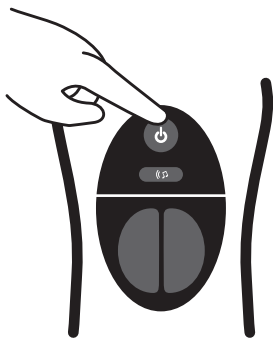


4. ADJUST SOUND

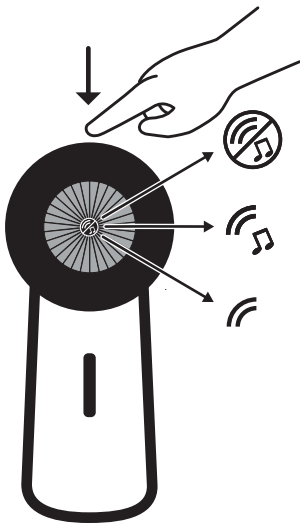

5. WASH HANDS

Time initiates automatically when soap is dispensed.

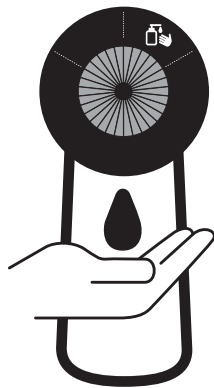

TIPS

Clean spout regularly to prevent clogs. If spout becomes clogged, run pump with warm water solution.

If sensor is not reading, turn pump off, then wipe the sensor area to remove any build up.

Do not submerge pump in water or use in shower.

Make Every Moment Count!®

timetimer.com

ONE-YEAR 100% SATISFACTION GUARANTEE

Support

support@timetimer.com • timetimer.com/support



You may also like:

Time Timer WASH™ – Touchless Handwashing Timer
Allows extra time to get soap from a dispenser of your choice!