

DIGITAL TEMPERATURE DISPLAY FRY PAN

Item No. 208859

User Guide

Thank you for purchasing the Digital Temperature Display Fry Pan. Please read this guide carefully and store it for future reference.

FEATURES

- 9.5" nonstick cooking surface
- Digital temperature display shows cooking temperature in real time
- Alarm function when optimum temperature is exceeded
- Bakelite heat-resistant handle (up to 428°F)
- Requires 2 AAA batteries

OPERATING INSTRUCTIONS

1. Insert 2 AAA batteries (not included) into the battery compartment in the handle.
2. Click the POWER button on the display screen to turn the device ON. The temperature of the cooking surface will be displayed in real time.
3. Place the frying pan on an induction cooker or electric cooktop. As the temperature of the frying pan begins to rise, the digital screen temperature will increase accordingly.

NOTE: *This product can be used in an induction cooker or on an electric cooktop. It is NOT designed for use on open flame (gas stove, grill, etc.).*

4. When the temperature is below 356°F, the indicator light will be solid GREEN, indicating that the pan is NOT ready for cooking.
5. When the temperature reaches 356°F to 428°F, the indicator light will be solid BLUE, indicating that the pan IS READY for cooking.
6. When the temperature exceeds 428°F, the indicator light will flash RED, and an audio alert will sound, indicating that the pan has exceeded healthy cooking temperature.
7. After cooking food, click the POWER button on the display screen to turn the device OFF. The digital display will begin to shut down.
8. When the frying pan has cooled to room temperature, you may wipe it with a clean wet cloth. Store the frying pan in a dry, ventilated area.

NOTE: *Hand wipe the cooking surface only. Do not immerse the device in water or clean it in the dishwasher.*