



Inflated size:
60 in Dia. x 15 h in
(152.4 cm Dia. x 38.1 cm h)

LED POOL with WATERPROOF SPEAKER • INSTRUCTION MANUAL

**Please read carefully and keep for future reference.
Repair patch included**



▲ WARNING	▲ WARNING	▲ WARNING
<p>PREVENT DROWNING</p>  <p>CHILDREN—ESPECIALLY TODDLERS—ARE AT HIGH RISK OF DROWNING. CLOSELY WATCH CHILDREN WHO ARE IN OR NEAR THE POOL. EMPTY POOL OR PREVENT ACCESS WHEN NOT IN USE.</p>	<p>NO DIVING</p>  <p>YOU CAN BREAK YOUR NECK AND BE PARALYZED</p>	<ul style="list-style-type: none">• READ AND FOLLOW ALL SAFETY INFORMATION AND INSTRUCTIONS.• CHILDREN UNDER 5 ARE AT HIGHEST RISK FOR DROWNING.• EMPTY THE POOL WHEN NOT IN USE TO PREVENT CHILDREN FROM GAINING UNAUTHORIZED ACCESS AND DROWNING.• NEVER LEAVE CHILDREN UNATTENDED.

MODEL No.
PC6860TP3

AGES 6+

IMPC100PL



CAUTIONS & WARNINGS

Read and follow all safety information and instructions. Keep for future reference. Failure to follow these warnings and instructions can result in serious injury or death to users, especially children.

Prevent Young Children From Drowning:

- Install fencing or approved barrier around all sides of pool.
- State or local laws or codes may require fencing or other approved barriers.
- Check state or local laws and codes before setting up pool.
- Drowning occurs silently and quickly. Assign an adult to supervise pool and wear provided water watcher tag.
- Keep children in your direct sight when they are in or near pool and when you are filling and emptying pool.
- When searching for a missing child, check pool first even if you think your child is in the house.
- Pool presents a drowning hazard even during filling and draining of the pool
- Maintain constant supervision of children and do not remove any safety barriers until the pool is completely empty and stored away.
- Refer to the list of barrier recommendations and guidelines as described in CPSC Publication No.362.
- Assign an adult to be responsible for watching children in the pool. Give this person a 'water watcher' tag and ask that they wear it the entire time they are in charge of supervising children in the pool. If they need to leave for any reason, ask this person to pass the "water watcher" tag and the supervision responsibility to another adult.

POOLCANDY LED POOL with WATERPROOF SPEAKER PC6860MP

POOLCANDY is a trademark of B&D GROUP.
©2022 All rights reserved. All rights reserved.

If you have any questions or would like additional information on PoolCandy products, please contact us at service@banddgroup.com or via telephone at 305.964.7295



www.PoolCandy.net

  @PoolCandy

 **WARNING:**
**THIS IS NOT A LIFESAVING DEVICE. DO NOT LEAVE
CHILD UNATTENDED WHILE DEVICE IS IN USE.**



HOW to USE the LED LIGHTS & WARNINGS

NOTE: Please install batteries prior to using the pool to avoid getting water in the battery compartment.

BATTERY REQUIREMENTS

This product requires 3 x AA batteries, not included.

BATTERY INSTALLATION

1. Remove water-resistant cap by unscrewing it counter-clockwise
2. Slide the expired batteries out of the compartment
3. Insert 3 new AA batteries, making sure to follow the polarity as marked inside the compartment.
4. Insert the battery cartridge back into the housing.
5. Screw the cap back on – do not over-tighten.

HOW to OPERATE the LED LIGHT OPTIONS

Press the top button on the compartment to turn on.

The product features 3 light modes:

MODE 1 – FAST CYCLE

MODE 2 – SLOW CYCLE

MODE 3 – ALWAYS ON

Do not mix Old and New batteries.

**Do not mix Alkaline, Standard (Carbon-Zinc),
or rechargeable (Nickel-Cadmium) batteries.**



WARNING:

**CHOKING HAZARD – SMALL PARTS
NOT FOR CHILDREN UNDER 3 YEARS.**





WARNING:

ADULT ASSEMBLY REQUIRED!



HOW to USE the BLUETOOTH SPEAKER

Product Overview

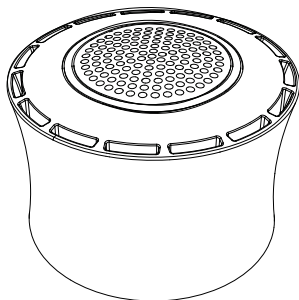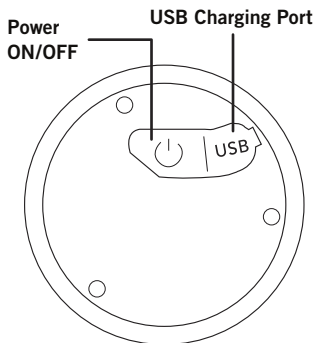

Charging the Integrated Battery:

This product is powered by an integrated rechargeable lithium battery; a USB charging cable is included.

1. Insert the charging cable into the USB socket on the unit.
2. Connect the USB plug into a PC or AC adaptor. When the blue LED indicator starts to flash, the battery is being charged. Charging will take approximately 3 hours.
3. When the battery is fully charged, the LED indicator light will go off. Remove the USB charging cable.

Connecting your Phone:

Long press the ON/OFF button in 3 seconds and the speaker will turn on. Open your phone device and open the Bluetooth interface and make sure your Bluetooth connection is turned on. Find the Bluetooth device named 'PoolCandy Speaker', tap it and press 'Connect'. Once connected, the speaker will say 'Bluetooth device is connected successfully'.

Product Specifications

- | | |
|---|---|
| <input type="checkbox"/> Device Model: F26 | <input type="checkbox"/> DC input : DC5V / 100mA |
| <input type="checkbox"/> Speaker: 3W/4Ω | <input type="checkbox"/> Working temperature: -20~50℃ |
| <input type="checkbox"/> Lithium battery: 3.7V/300mAh | <input type="checkbox"/> Bluetooth Operating Distance: About 33 ft (10 m) |
| <input type="checkbox"/> Playtime: About 1.25-3 hrs | <input type="checkbox"/> Bluetooth: V5.0 |
| <input type="checkbox"/> Charging time: Approx. 2-3 hrs | |



MAINTENANCE & CAUTIONS

CAUTION:

Do not install the pool on a sloper or inclined surface, on soft or loose soil (such as sand or mud), or on an elevated surface such as a deck, platform or balcony, which may collapse under the weight of the filled pool.

Prevent Young Children from Gaining Access to Pool

- Remove any pool ladders before leaving pool. Toddlers can climb ladder and get into pool.
- Position furniture away from pool so that children cannot climb and gain access to pool.
- When leaving pool, remove floats and toys from pool that might attract a child.
- Be Prepared to Respond to an Emergency:
- Keep a working phone and list of emergency numbers near pool.
- Become certified in cardiopulmonary resuscitation (CPR) so you can respond to an emergency.

Diving Risk:

- Do not dive into the pool. Diving into shallow water can result in a broken neck, paralysis, or death.

Electrocution Risk:

- Keep all electrical lines, radios, speakers and other electrical appliances away from the pool.
- Do not place pool near or under overhead electrical lines.

For further safety tips check out the following websites:

www.homesafetycouncil.org	www.safekids.org
www.safetycouncil.org/info/child/water.html	www.nspi.org
	www.poolsafety.gov

Contact: US. Consumer Product Safety Commission at
www.CPSC.gov/cpsc-pub/~pubs/pool/pdf.
Pub. #362 "Safety Barrier Guidelines for Home Pools."

Care, Maintenance & Storage

1. Inspect your inflatable prior to each use.
2. Keep your inflatable away from sharp objects. Large cuts or snags may not be repairable and will not be covered by your warranty.
3. In case of incidental damage to your inflatable, a repair kit has been included. Please follow repair instructions carefully as shown on the patch.
4. To clean your inflatable, use soap and water with a wash cloth.
5. To store your inflatable, make sure it is deflated and completely dry. Store your inflatable in a clean, dry place at room temperature.



FLASHING LIGHTS WARNING & FCC INFORMATION

WARNING:

This product contains flashing lights, which can cause seizures, headaches, dizziness, and/or other chemical problems in certain individuals. Caution should be exercised when using this product, particularly around people who have adverse reactions to flashing lights.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MAINTENANCE (cont.), LIMITED WARRANTY, & COMPANY INFORMATION

Special Care & Handling

- Avoid rough handling such as bumping or dropping.
- Avoid extreme temperatures. For best results use between the temperatures of 39° F and 120° F (4° C and 38° C).
- Clean using only a slightly damp cloth. Do not use cleaners with chemical agents.

Limited 30-Day Warranty

B&D Group, LLC, warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 30 days from the date of purchase. If any such defect is discovered within the warranty period, B&D Group, LLC, will repair or replace the unit free of charge upon receipt of the unit, shipping postage prepaid and insured to the factory address received from Customer Service. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of any panels voids all warranties. This warranty does not cover cost of repairs made or attempted outside the factory. Any applicable implied warranties, including warranties of merchantability and fitness are hereby limited to 30 days from the date of purchase. Expressed or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States would be communicated from Customer Service. Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint or issue, along with your daytime telephone number, name and address inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to Service@BandDGroup.com, specifying the model number and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT.

MODEL No.
PC6860TP3



**DISTRIBUTED BY
B&D GROUP, LLC.**

14149 SW 119th Avenue
Miami, Florida 33186
Tel. 305.964.7295



www.PoolCandy.net



@PoolCandy