


SHARPER IMAGE®

ULTIMATE CORDLESS POWER SCRUBBER BY SHARPER IMAGE

Item No. 208950

User Guide

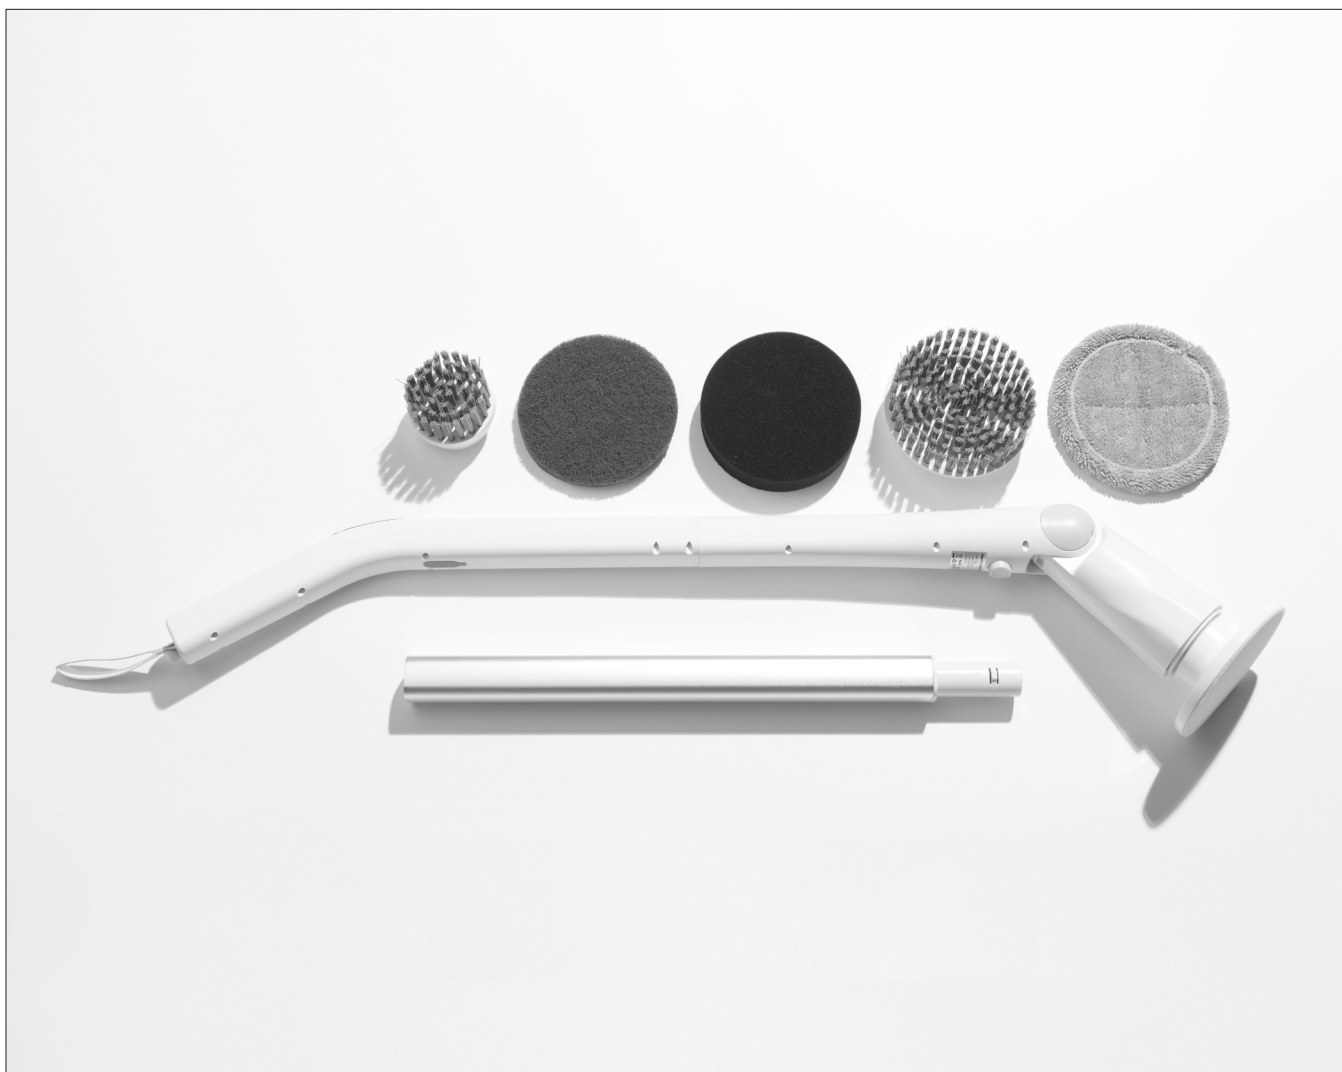

Thank you for purchasing the Ultimate Cordless Power Scrubber by Sharper Image. Please take a moment to read this guide and store it for future reference.

INTRODUCTION

The Ultimate Cordless Power Scrubber by Sharper Image features 5 interchangeable brush heads/pads help you perform a variety of cleaning jobs including the bathroom/bathtub, kitchen, tile floors, stove, windows, swimming pool, car tires and more.

FEATURES

- Extendable aluminum rod handle
- Two brush speeds
- Waterproof design
- Cordless and rechargeable

CONTENTS OF PACKAGE


- Ultimate Cordless Power Scrubber by Sharper Image
- USB charging cable
- Extension Rod
- Hard floor brush
- Long bristle brush
- Hook & loop pad
- Scouring pad
- Sponge pad
- Cotton flannel pad
- User guide

ATTACHMENT GUIDE

Hard floor brush	Bathroom, uneven tile floors, rough floors, balcony
Long bristle brush	Toilet, car tires, deep/hard-to-reach areas
Hook & loop pad + Scouring pad	Smooth tiles, sink, bathtub
Hook & loop pad + Sponge pad	Cars, windows, glass and other delicate surfaces
Hook & loop pad + Cotton flannel pad	Bathtub, ceramic and other smooth surfaces, wood floors

ASSEMBLING THE BRUSH HEAD

It is easy to change the included brush heads. Simply align the head with the body and push into place. To remove, simply grasp the brush head and pull away from the body of the device.

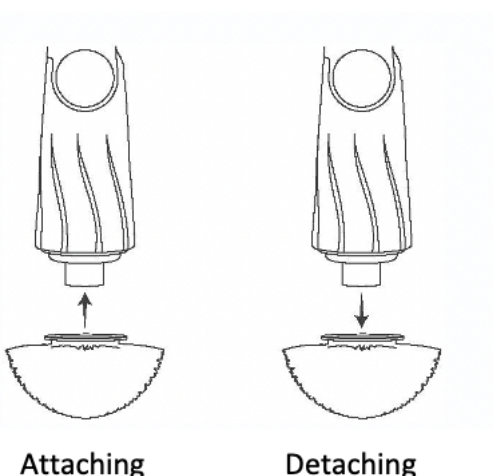


OPERATION

The Ultimate Cordless Power Scrubber by Sharper Image has two speeds:

1. Press the power button **ONCE** and the brush will rotate 220-230 RPM [Low speed].
2. Press the power button **A SECOND TIME** and the brush will rotate 260-270 RPM [High speed].
3. Press the power button for **A THIRD TIME** and the device will turn OFF.

WATERPROOF USAGE

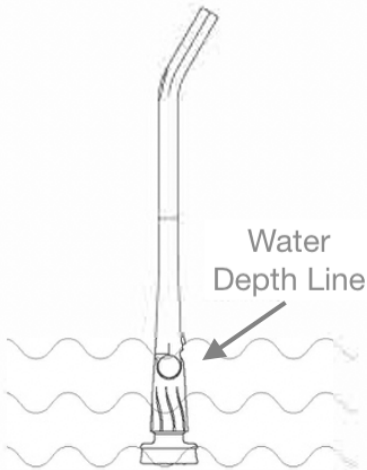

Please note the Water Depth Line when using the Ultimate Cordless Power Scrubber by Sharper Image.

The portion of the Ultimate Cordless Power Scrubber by Sharper Image **BELOW** the Angle Adjustment Button is IPX7 waterproof, and can be used in water [such as a pool or boat hull].

The portion of the Ultimate Cordless Power Scrubber by Sharper Image **ABOVE** the Angle Adjustment Button is IPX4 water resistant, and should **NOT** be submerged in water.

WATERPROOF RATING DETAILS

IPX7 = One of the highest waterproof ratings. Devices with this rating can withstand immersion in water up to 3 feet for 30 minutes.

IPX4 = Resistant to light splashes. Do not submerge in water.

AXIS OF ROTATION

The rotating shaft can be adjusted in three angles [90°, 145° and 180°] depending on the job at hand.

1. Press and hold the rotary buttons on both sides with one hand.
2. Adjust the device shaft with the other hand. Release the buttons when the shaft is in the desired position.

EXTENSION ROD

For high areas, this device includes an extension rod. Snap the rod into place to increase your reach [maximum length 44"].

CHARGING THE DEVICE

1. Be sure to use the cable that came with this device.
2. The charging port is on the back of the handle.
3. Plug the cable into a USB port or AC outlet [USB-to-AC adapter not included]
4. When charging, the display will light up, indicating that it is fully charged.

SAFETY WARNINGS

- This device is intended for household use only.
- Do not submerge completely in water.
- In the unlikely event of a malfunction, turn the device off and restart it.
- Do not use this device if the cable is frayed or worn.
- This device is not a toy. Keep out of reach of children.
- Do not use this device on people or animals.
- Do not store this device in hot areas or around fire.
- Do not use any other batteries or chargers other than the ones included with this device.
- Do not attempt to open, modify or repair this device. There are no user-serviceable parts.
- If this device is in storage for long periods of time, please recharge it every 6 months to maintain the optimum battery performance.
- Do not use this device for anything other than its intended purpose. Failure to follow the instructions in this guide may lead to damage or injury.

TROUBLESHOOTING

Device does not work.	Battery is low. Please recharge device.
Device does not charge.	Check cable connections.
Brush head falls off.	Brush head is not installed correctly. Please reinstall.
Device stops during cleaning.	1. Device malfunction. Please power off and restart device. 2. Battery is depleted. Please recharge device.
Device does not work.	Battery is low. Please recharge device.

SPECIFICATIONS

Length	750x1122mm
Material	ABS + TPR + PP
Net weight	1.5kg
Battery life	1.5 hours
Charge time	2.5 hours
Operating noise	<70dB
Working temperature	-10°C to 40°C
Max Power	74W
Brush speeds	220-230 RPM / 260-270 RPM
Battery type	2000mAh
Output voltage	7.4VDC
Charging voltage	5V/2ADC
Waterproof rating	IPX4/IPX7

FCC NOTICE

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

NOTE: *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY AND CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.