

inflatable JACK

* NIGHT TIME SETTING IS RECOMMENDED
FOR BEST VIDEO VIEWING EXPERIENCE

Height
5ft


IMPORTANT:

1. ALWAYS MAKE SURE THERE IS NO OBSTACLES BLOCKING THE AIR INLET DURING INFLATION
2. Please disconnect when not using for extended periods of time.
3. Do NOT drop or shake the unit.
4. Please ensure that Inflatable is placed in temperatures within 20°F - 100°F
5. CLEAN THE AIR INLET AFTER USE

STAKING KIT INCLUDES:

4pcs of Stake A
3pcs of Stake B
3pcs of 2meter long nylon String


STAKE A
x4

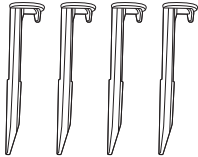

STAKE B
x3



STRING
x3

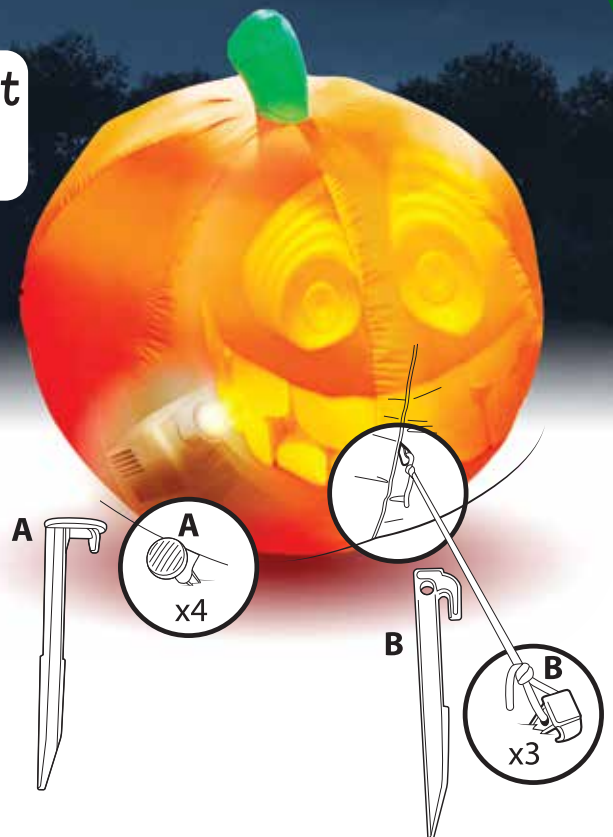

STAKING TO THE GROUND:

Stake A is used to fix the inflatable on ground and prevent it from moving.

Stake B is used to further stabilize the inflatable and help it hold up well in a mild wind.


STEP 1

STAKE A x4



Use Stake A to pass it thru the loops attached to the bottom of the inflatable.

Push the stake on soft or grassy ground.

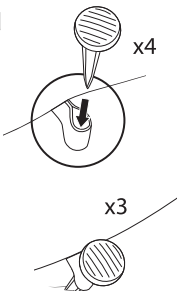


STEP 2

STAKE B x3




Tie one end of the string to one of the loops on the waist. Then tie the other end of the string to Stake B.

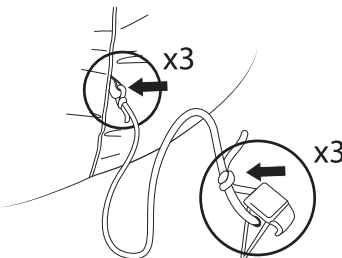


STRING x3

Then push stake B on soft or grassy ground.

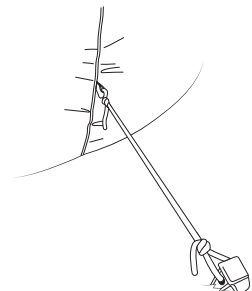

TO USE:


1. Be sure inflatable is zipped up.

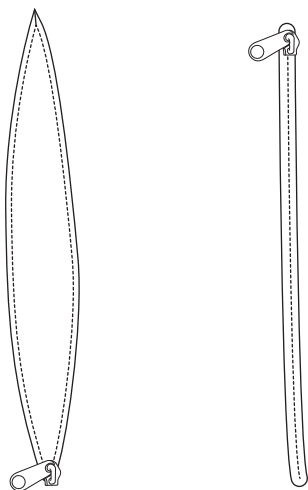

2. To turn on plug into outlet.

3. To turn off un plug and un-zip the inflatable to let air out.

CONTROLS:

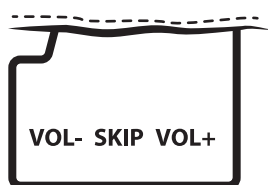

Still Mode:

Give Inflatable Jack a decorative look by entering into still mode. Jack will not run any animation but instead will maintain a still face. Press and hold the + & - buttons simultaneously for 3 seconds to enter into still mode. To exit press any button to resume animations.

*Note: Video will replay on loop until unplugged, there is no timer on Inflatable.

CARE INSTRUCTIONS:

Wipe clean with a damp cloth and allow to dry before storing away.

MINDSCOPE
PRODUCTS

PO BOX 9525
GLENDALE, CA 91226

WWW.MINDSCOPEPRODUCTS.COM
WWW.ANIMAT3D.COM

Connect with us:

